


2013 PARTS CATALOG

TOHATSU

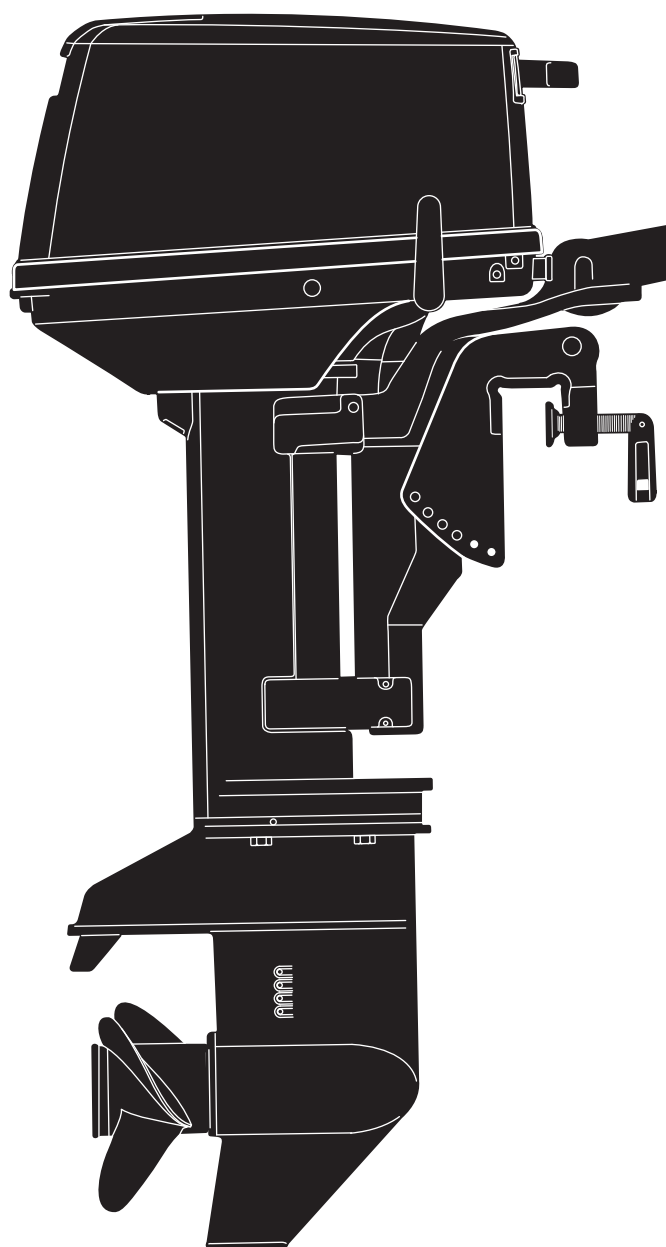

M 6B
8B
9.8B


Serial Number 000001AC~

OB NO.002-21030-9
1301

HOW TO USE THIS PARTS CATALOG

1. This Parts Catalog provides information available as of the end of January, 2013.
2. Please keep the Parts Catalog updated each time when receiving the Service Bulletin describing the addition, abolition and/or change of parts.
3. Actual shapes of parts may be different from the illustrations shown in this Parts Catalog because they are described only as a guide for searching parts.
4. One illustration is given more than one article number. Please confirm the sub-number, applicable model and remarks before ordering parts.

Ref.No.	Part No.	Description	Applicable model			Remarks
			Q'ty	M6B	M8B	
1-1	1	3B2B01100-2	CYL BLOCK & CRANKCASE ASSY	1	1	for M8B, M6B
1-1	2	3K9B01100-1	CYL BLOCK & CRANKCASE ASSY		1	for M9.8B
1-2		393-01137-0	* NIPPLE	2	2	
		393-01131-0	* NIPPLE 5.5-5	1	1	


 Different specification
 Illustration position number
 Fig. No.

5. Given mark in (*) to part number shows assembly or kit part.
6. Marks in this Parts Catalog show.

STD	: Standard	OPT	: Optional Parts
O/S	: Over size	ASSY	: Assembly
DO	: Domestic Model	EX	: Export Model
A	: As required	EU	: European Union

7. Attention to order

Please order painted parts in accordance with following.

The parts that fourth figure of the parts number is (B), (Q) have painted.

Present coloring of power head is black (B), lower unit is aqua marine blue (Q) and propeller is black (B).

Note: Former coloring of lower unit is silver gray (S).

[Example]

ENGINE SHORT BLOCK KIT LOWER UNIT ASSY (L)

3B2B87090-7

3B2Q87302-6

B: Black

Q: Aquamarine Blue

8. About dimensional identification of bolts, nuts and washers.

BOLT

916129 - 0675

Length below neck
Diameter

NUTS & WASHERS 940121 - 0600

Diameter

9. Hose, that is a standard part, is replaced with long hose.

HOSE

98AL - 40 - 120

Length
Diameter

HOSE/PIPE

Fig No	Part No.	Description	Bulk part No.	Bulk part	
				Inner Diameter (mm)	Length (m)
1-26	98AL-40-120	HOSE	98AL-401000	4	1
1-27	98AL-40-230	HOSE	98AL-401000	4	1
11-4	98AB-50-075	HOSE	98AB-501000	5	1
15-6	98AB-70-700	HOSE	98AB-701000	7	1
15-7	98AB-701600	HOSE	98AB-701000 x2	7	1

CONTENTS

Fig. 1	CYLINDER • CRANK CASE.....	1
Fig. 2	PISTON • CRANK SHAFT	5
Fig. 3	INTAKE MANIFOLD • REED VALVE • THROTTLE	7
Fig. 4	CARBURETOR • FUEL PUMP	9
Fig. 5	RECOIL STARTER • STARTER LOCK.....	13
Fig. 6	MAGNETO • ELECTRIC PARTS	17
Fig. 7	DRIVE SHAFT HOUSING.....	21
Fig. 8	GEAR CASE.....	23
Fig. 9	BRACKET • REVERSE LOCK.....	29
Fig. 10	TILLER HANDLE (MF • EF MODEL).....	33
Fig. 11	BOTTOM COWL	35
Fig. 12	SHIFT	39
Fig. 13	REMOTE CONTROL	41
Fig. 14	TOP COWL	45
Fig. 15	FUEL TANK	47
Fig. 16	COMPONENT PARTS OF REMOTE CONTROL.....	49
Fig. 17	COMPONENT PARTS OF REMOTE CONTROL (ELECTRIC PARTS).....	53
Fig. 18	OPTIONAL PARTS (ACCESSORIES).....	55
Fig. 19	ASSEMBLY • KIT PARTS	57
INDEX.....		69
INDEX (Parts Number)		73

Fig.1 CYLINDER • CRANK CASE


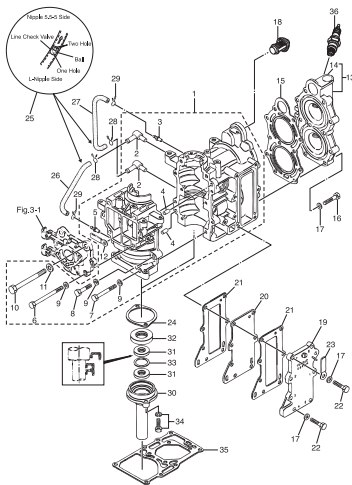


Fig.2 PISTON • CRANK SHAFT

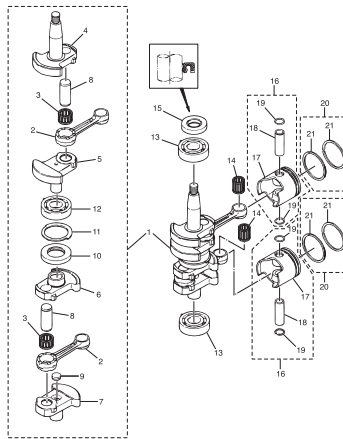

(REMARKS) CRANK SHAFT ASSY Very difficult to assemble. The component parts to be purchased as an assy basically.

Fig.3 INTAKE MANIFOLD • REED VALVE • THROTTLE

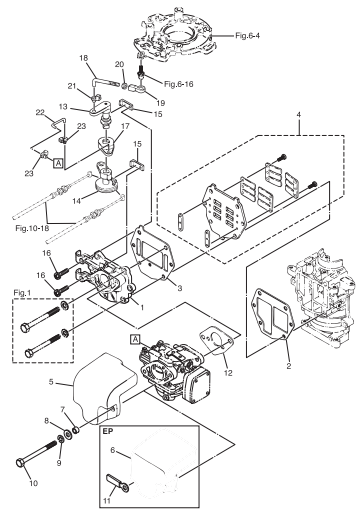


Fig.4 CARBURETOR • FUEL PUMP

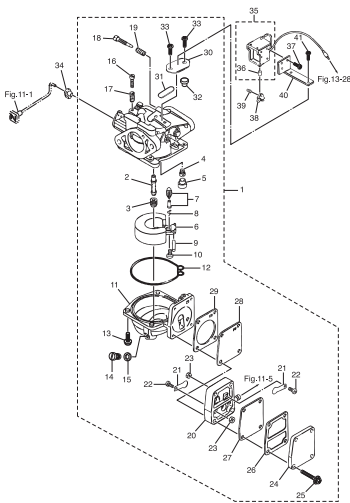


Fig.5 RECOIL STARTER • STARTER LOCK

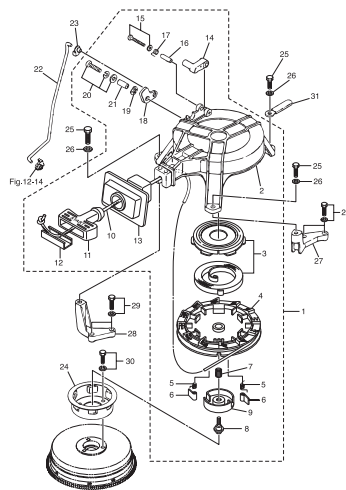


Fig.6 MAGNETO • ELECTRIC PARTS

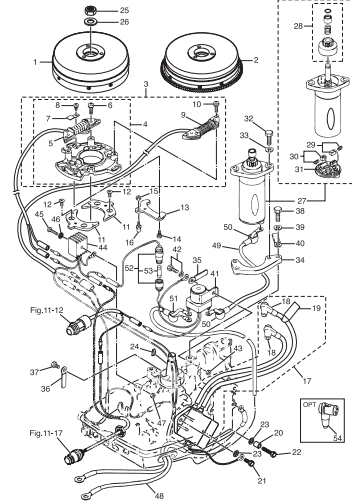


Fig.7 DRIVE SHAFT HOUSING

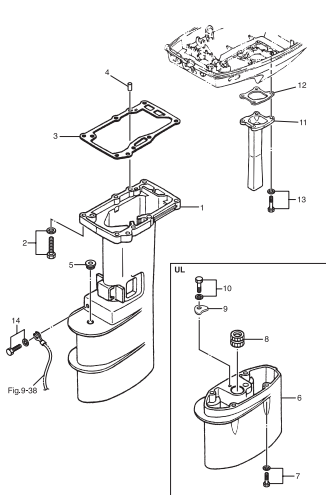


Fig.8 GEAR CASE

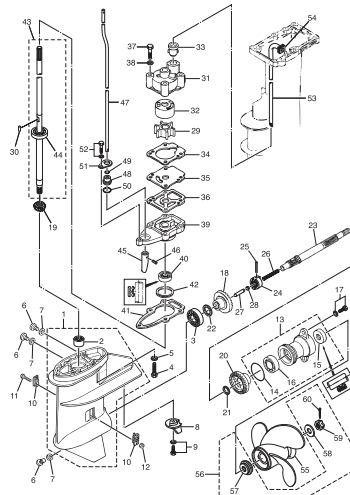


Fig.9 BRACKET • REVERSE LOCK

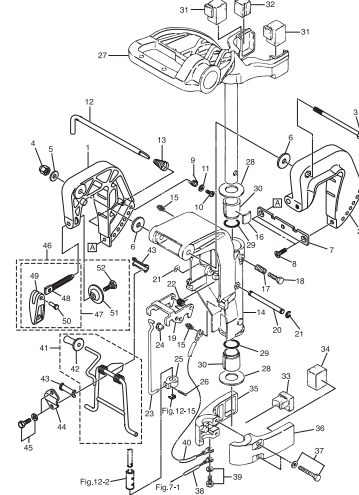


Fig.10 TILLER HANDLE (MF • EF MODEL)

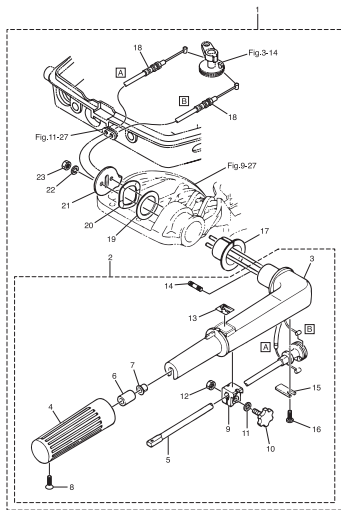


Fig.11 BOTTOM COWL

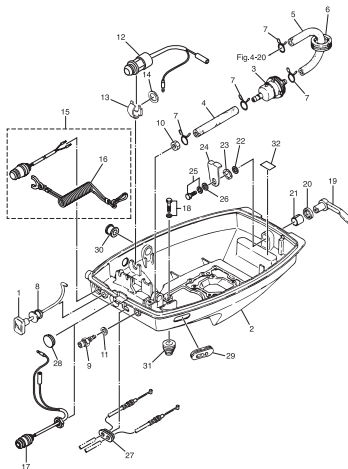


Fig.12 SHIFT

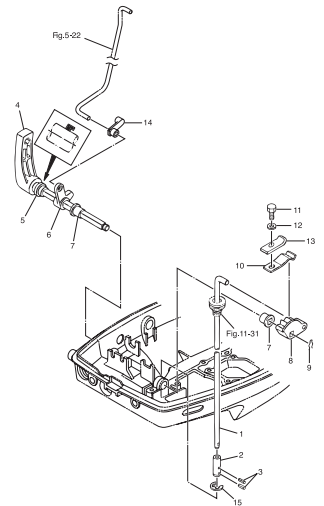


Fig.13 REMOTE CONTROL

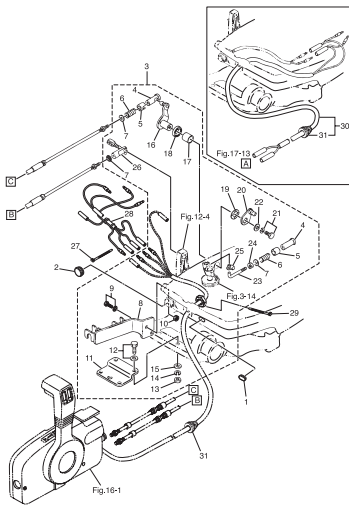


Fig.14 TOP COWL

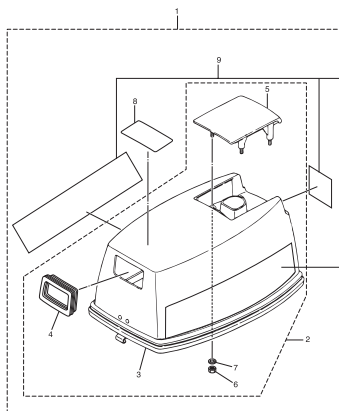


Fig.15 FUEL TANK

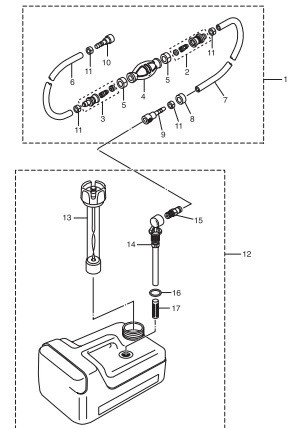


Fig.16 COMPONENT PARTS OF REMOTE CONTROL

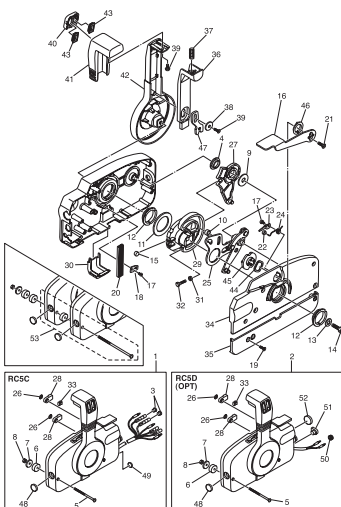


Fig.17 COMPONENT PARTS OF REMOTE CONTROL (ELECTRIC PARTS)

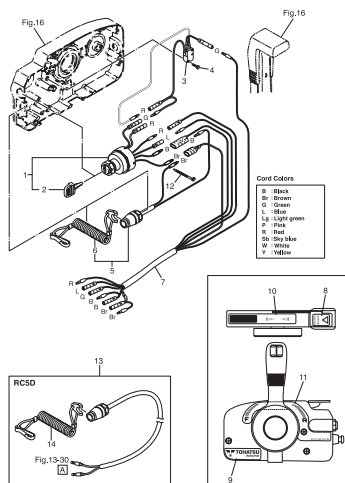


Fig.18 OPTIONAL PARTS (ACCESSORIES)

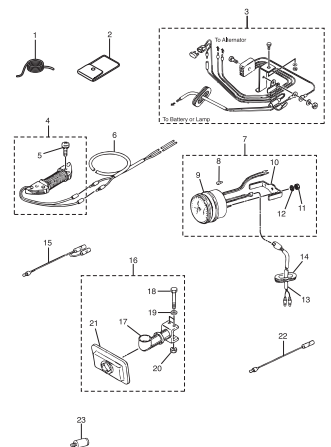


Fig. 19 ASSEMBLY • KIT PARTS


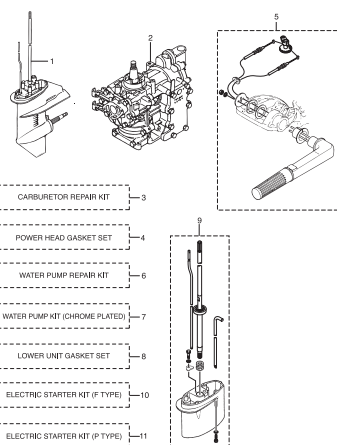


Fig. 1


CYLINDER • CRANK CASE

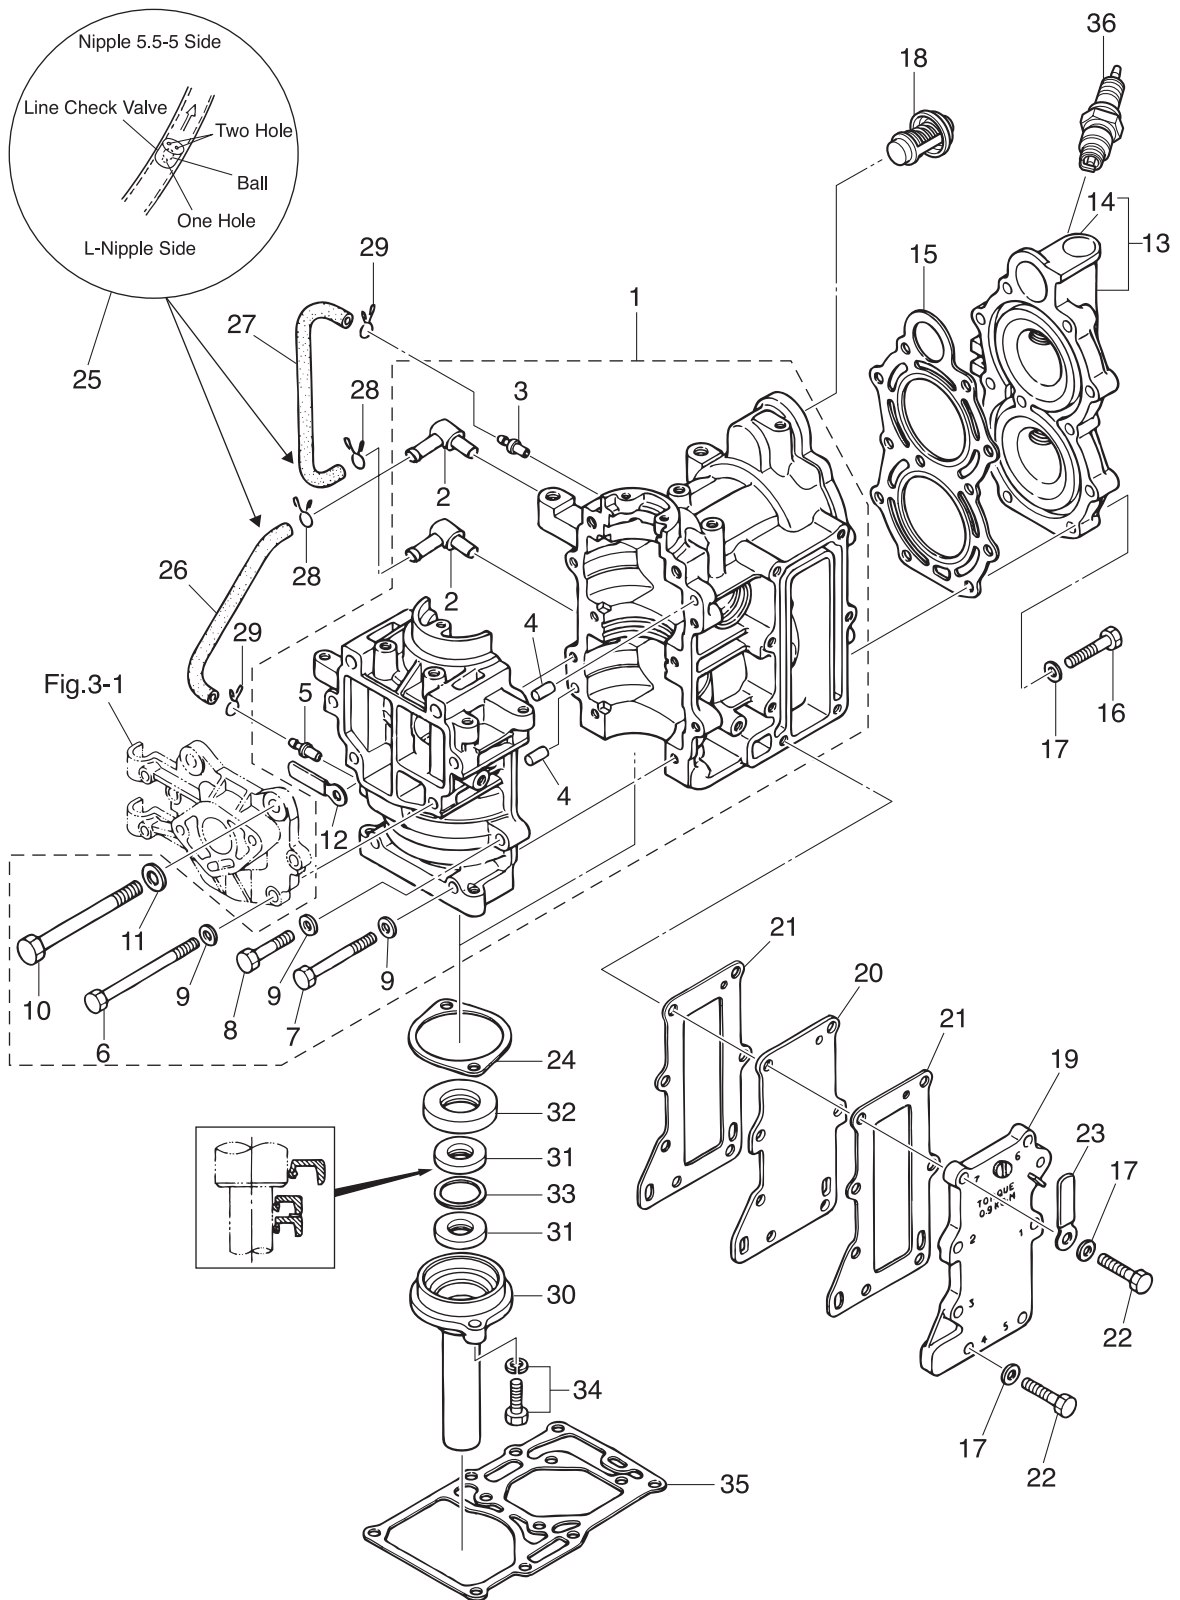

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
1-1	1	3B2B01100-2	CYL BLOCK & CRANKCASE ASSY	1	1		for M8B, M6B
1-1	2	3K9B01100-1	CYL BLOCK & CRANKCASE ASSY			1	for M9.8B
1-2		393-01137-0	* NIPPLE	2	2	2	
1-3		393-01131-0	* NIPPLE 5.5-5	1	1	1	
1-4		345-01111-0	* DOWEL PIN 6-12	2	2	2	
1-5		393-01131-0	* NIPPLE 5.5-5	1	1	1	
1-6		916129-0675	* BOLT	4	4	4	
1-7		916129-0650	* BOLT	2	2	2	
1-8		916129-0630	* BOLT	2	2	2	
1-9		940121-0600	* WASHER	8	8	8	
1-10		910124-0880	* BOLT	2	2	2	
1-11		940121-0800	* WASHER	2	2	2	
1-12		309-06972-0	* CLAMP 6.5-47.5P	1	1	1	
1-13	1	3B2B01001-1	CYLINDER HEAD ASSY	1	1		for M8B, M6B
1-13	2	3K9B01001-0	CYLINDER HEAD ASSY			1	for M9.8B
1-14		350-01093-0	* WELCH PLUG	2	2	2	
1-15		3B2-01005-1	CYLINDER HEAD GASKET	1	1	1	
1-16		9161F9-0630	BOLT	11	11	11	Cylinder Head
1-17		940121-0600	WASHER	18	18	18	Cylinder Head Exhaust Cover
1-18		350-01030-1	THERMOSTAT	1	1	1	Mark 52C PRV
1-19		3B2B02300-0	EXHAUST COVER ASSY	1	1	1	
1-20	1	3B2B02302-0	EXHAUST COVER (INNER)	1	1		for M8B, M6B
1-20	2	3K9B02302-0	EXHAUST COVER (INNER)			1	for M9.8B
1-21	1	3B2-02305-2	EXHAUST COVER GASKET	2	2		for M8B, M6B
1-21	2	3K9-02305-2	EXHAUST COVER GASKET			2	for M9.8B
1-22		9101F4-0625	BOLT	7	7	7	Exhaust Cover
1-23		309-06972-0	CLAMP 6.5-47.5P	1	1	1	
1-24		3B2-01214-1	CRANKCASE HEAD GASKET	1	1	1	
1-25		393-01160-0	CHECK VALVE	2	2	2	

Fig. 1


CYLINDER • CRANK CASE

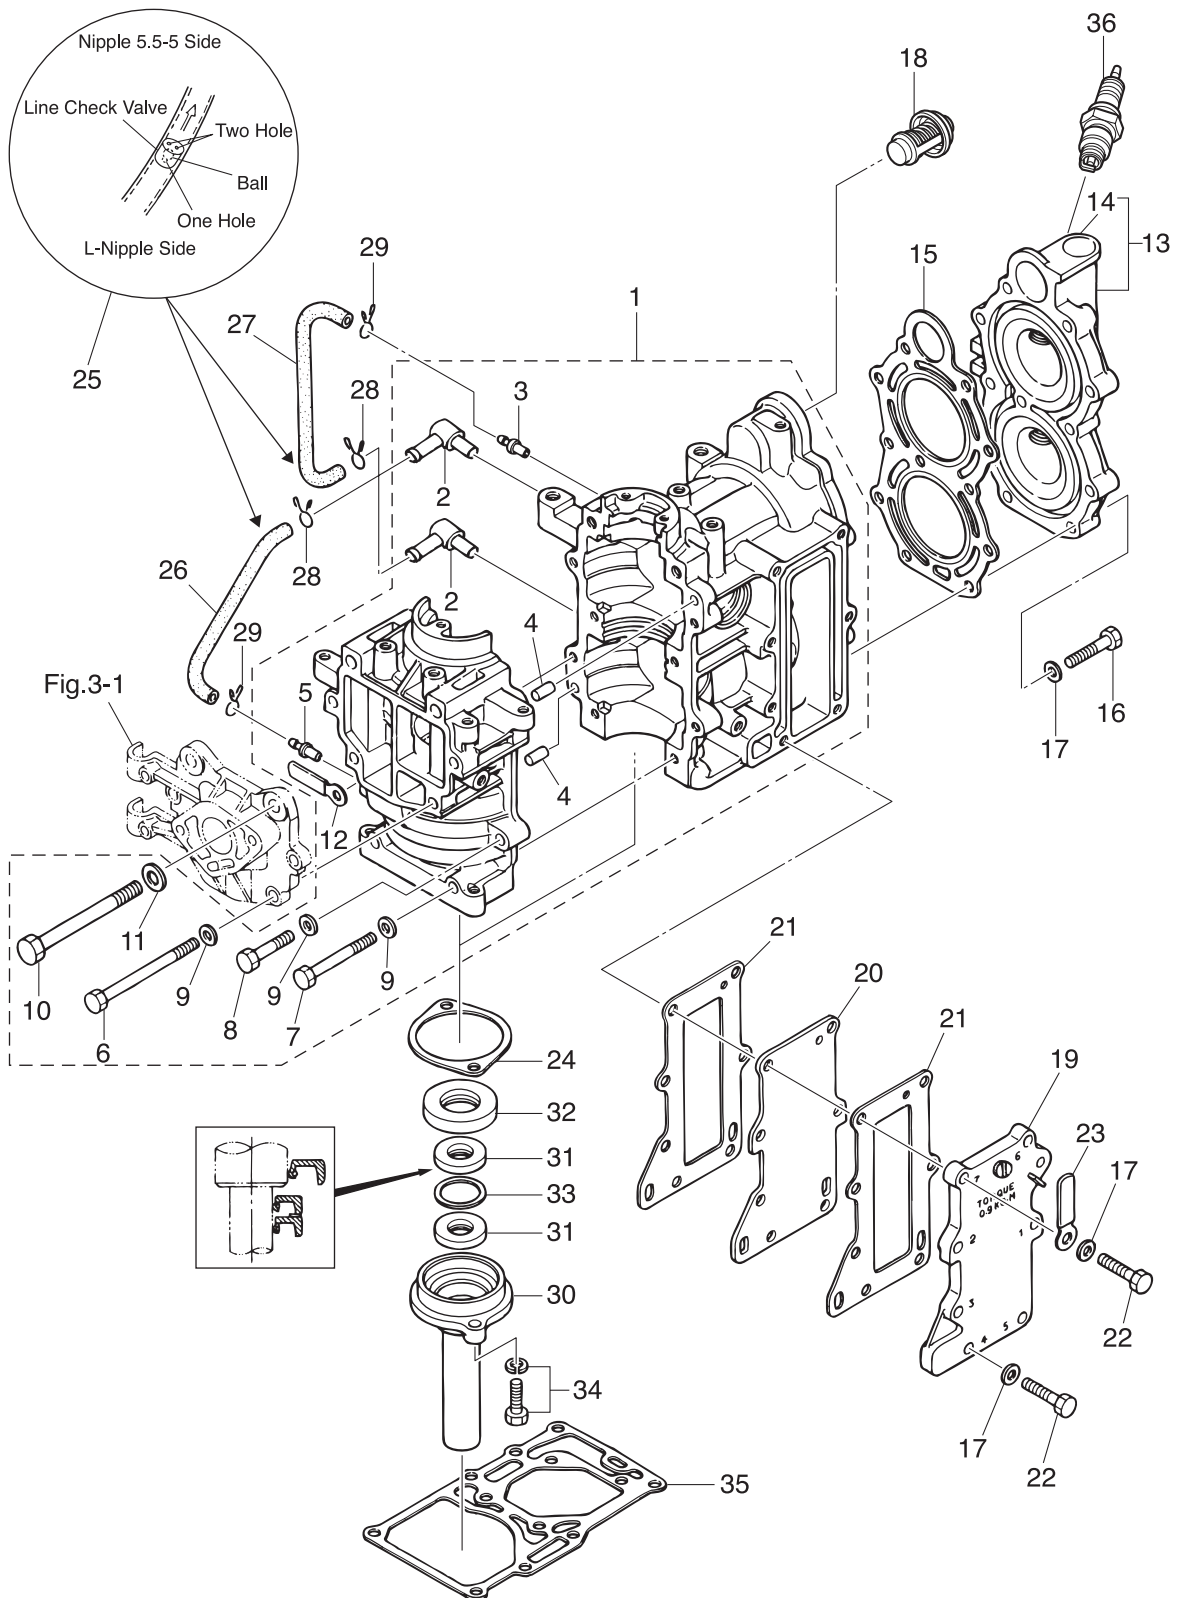

[illegible]

Fig. 2

PISTON • CRANK SHAFT

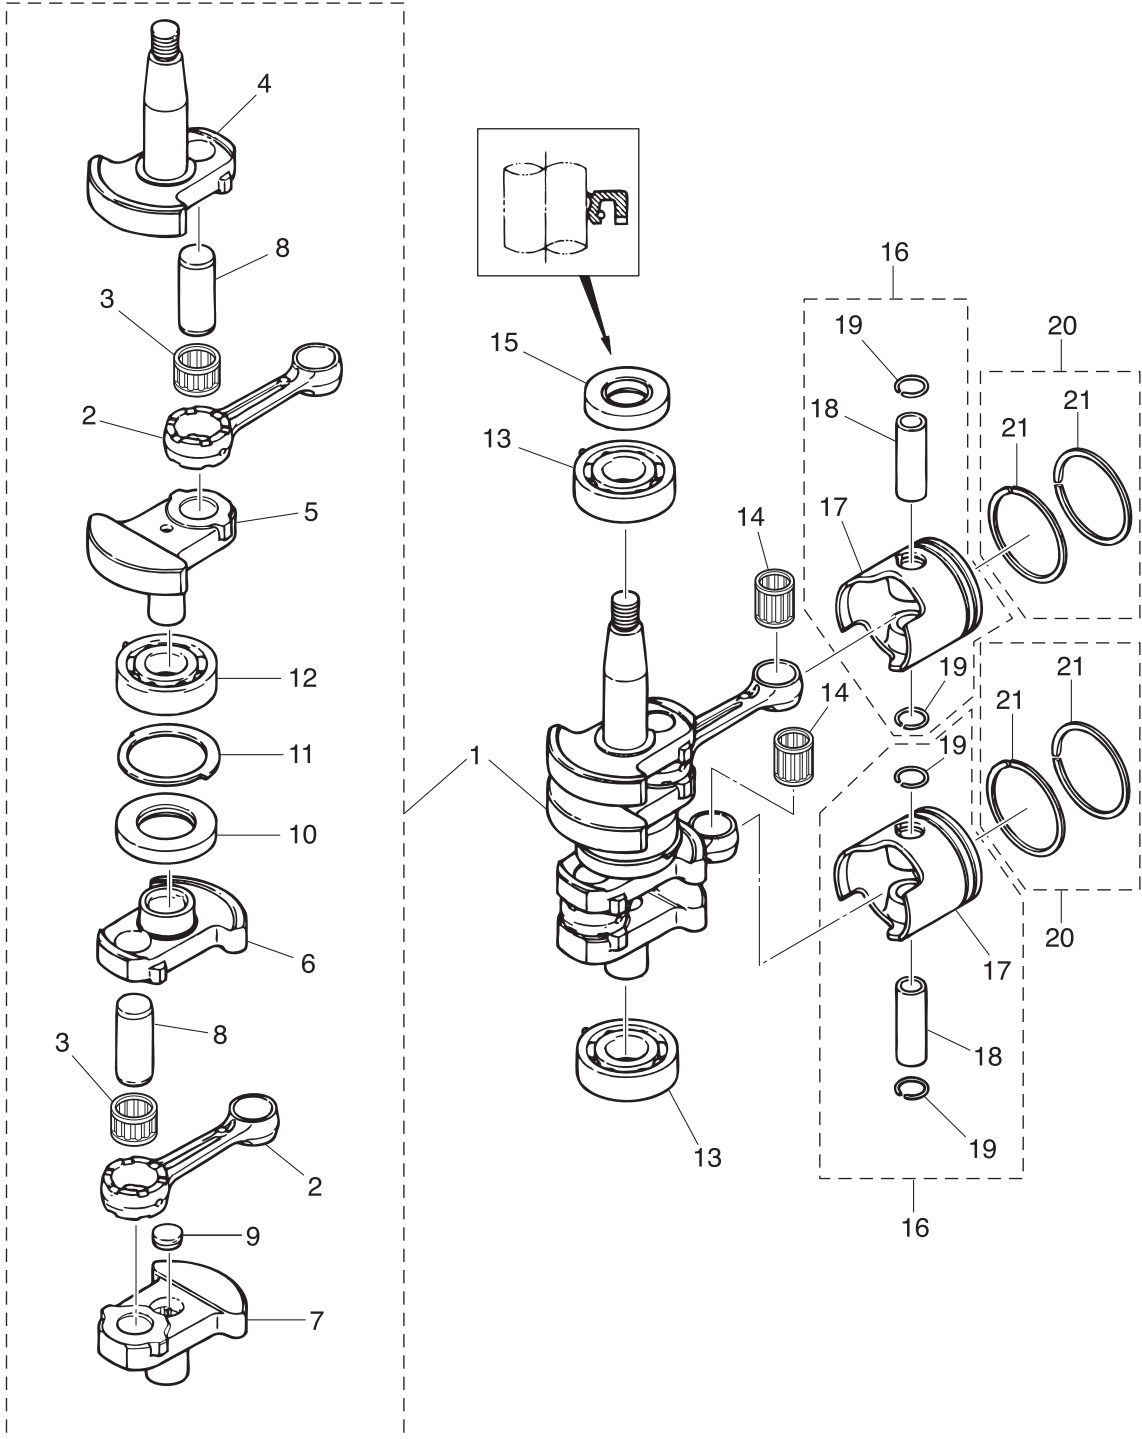

(REMARKS) CRANK SHAFT ASSY Very difficult to assemble. The component parts to be purchased as an assy basically.

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
2-1		3B2-00069-0	CRANKSHAFT SUB-ASSY	1	1	1	
2-2		3B2-00040-0	* CONNECTING ROD	2	2	2	
2-3		3B2-00043-0	* ROLLER BEARING 17-23-14	2	2	2	Big End
2-4		3B2-00031-0	* CRANKSHAFT A	1	1	1	
2-5		3B2-00032-0	* CRANKSHAFT B	1	1	1	
2-6		3B2-00033-0	* CRANKSHAFT C	1	1	1	
2-7		3B2-00034-0	* CRANKSHAFT D	1	1	1	
2-8		3B2-00061-2	* CRANK PIN	2	2	2	
2-9		350-00062-0	* SEALING PLUG	1	1	1	Crankshaft D
2-10		3B2-00051-0	* OIL SEAL 25-47-7	1	1	1	
2-11		369-00115-0	* THRUST PLATE	1	1	1	
2-12		9603-3-6204	* BALL BEARING 6204	1	1	1	Center
2-13		9603-3-6204	BALL BEARING 6204	2	2	2	Upper, Lower
2-14		338-00042-0	ROLLER BEARING 14-18-19	2	2	2	Small End
2-15		101-00121-0	OIL SEAL 20-35-7	1	1	1	
2-16	1	3B2-87130-0	PISTON REPAIR KIT	2	2	2	STD
2-16	2	3B2-87131-0	PISTON REPAIR KIT (0.5 O/S)	2	2	2	OPT
2-17	1	3B2-00001-1	* PISTON	1	1	1	STD
2-17	2	3B2-00004-1	* PISTON (0.5 O/S)	1	1	1	OPT
2-18		3B2-00021-1	* PISTON PIN	1	1	1	
2-19		350-00024-1	* PISTON PIN CLIP	2	2	2	
2-20	1	3G0-87123-0	PISTON RING SET	2	2	2	STD
2-20	2	3G0-87124-0	PISTON RING SET (0.5 O/S)	2	2	2	OPT
2-21	1	3B2-00011-0	* PISTON RING	2	2	2	STD
2-21	2	3B2-00014-0	* PISTON RING (0.5 O/S)	2	2	2	OPT


INTAKE MANIFOLD • REED VALVE • THROTTLE



Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
3-1	3B2B02010-0	INTAKE MANIFOLD ASSY	1	1	1	
3-2	3B2-02104-1	INTAKE MANIFOLD GASKET	1	1	1	
3-3	3B2-02105-1	INTAKE MANIFOLD GASKET	1	1	1	
3-4	3B2-02100-0	REED VALVE ASSY	1	1	1	
3-5	3B2-02411-0	INTAKE SILENCER	1	1	1	for MF/EF
3-6	3B2-02412-0	INTAKE SILENCER		1	1	for EP
3-7	3B2-02416-0	SPACER	2	2	2	
3-8	3C8-66308-0	WASHER 6-16-1.5	2	2	2	
3-9	941303-0600	SPRING WASHER	2	2	2	
3-10	9161F1-0685	BOLT	2	2	2	
3-11	309-06972-0	CLAMP 6.5-47.5P		1	1	for EP
3-12	369-02011-0	CARBURETOR GASKET	1	1	1	
3-13	3B2-63711-0	ADVANCER ARM	1	1	1	
3-14	3B2-63611-0	THROTTLE DRUM	1	1	1	
3-15	3B2-63506-1	HOLDER	2	2	2	
3-16	921521-6520	SCREW	2	2	2	
3-17	3B2-63751-0	THROTTLE ARM	1	1	1	
3-18	3B2-63715-2	ROD 5-45	1	1	1	
3-19	3B7-05243-0	BALL JOINT CONNECTOR	1	1	1	
3-20	930103-0500	NUT	1	1	1	
3-21	345-05224-0	ROD SNAP 5-2.5	1	1	1	
3-22	3B2-63716-1	THROTTLE ROD	1	1	1	
3-23	346-67196-1	ROD SNAP 3-B	2	2	2	

Fig. 4


CARBURETOR • FUEL PUMP

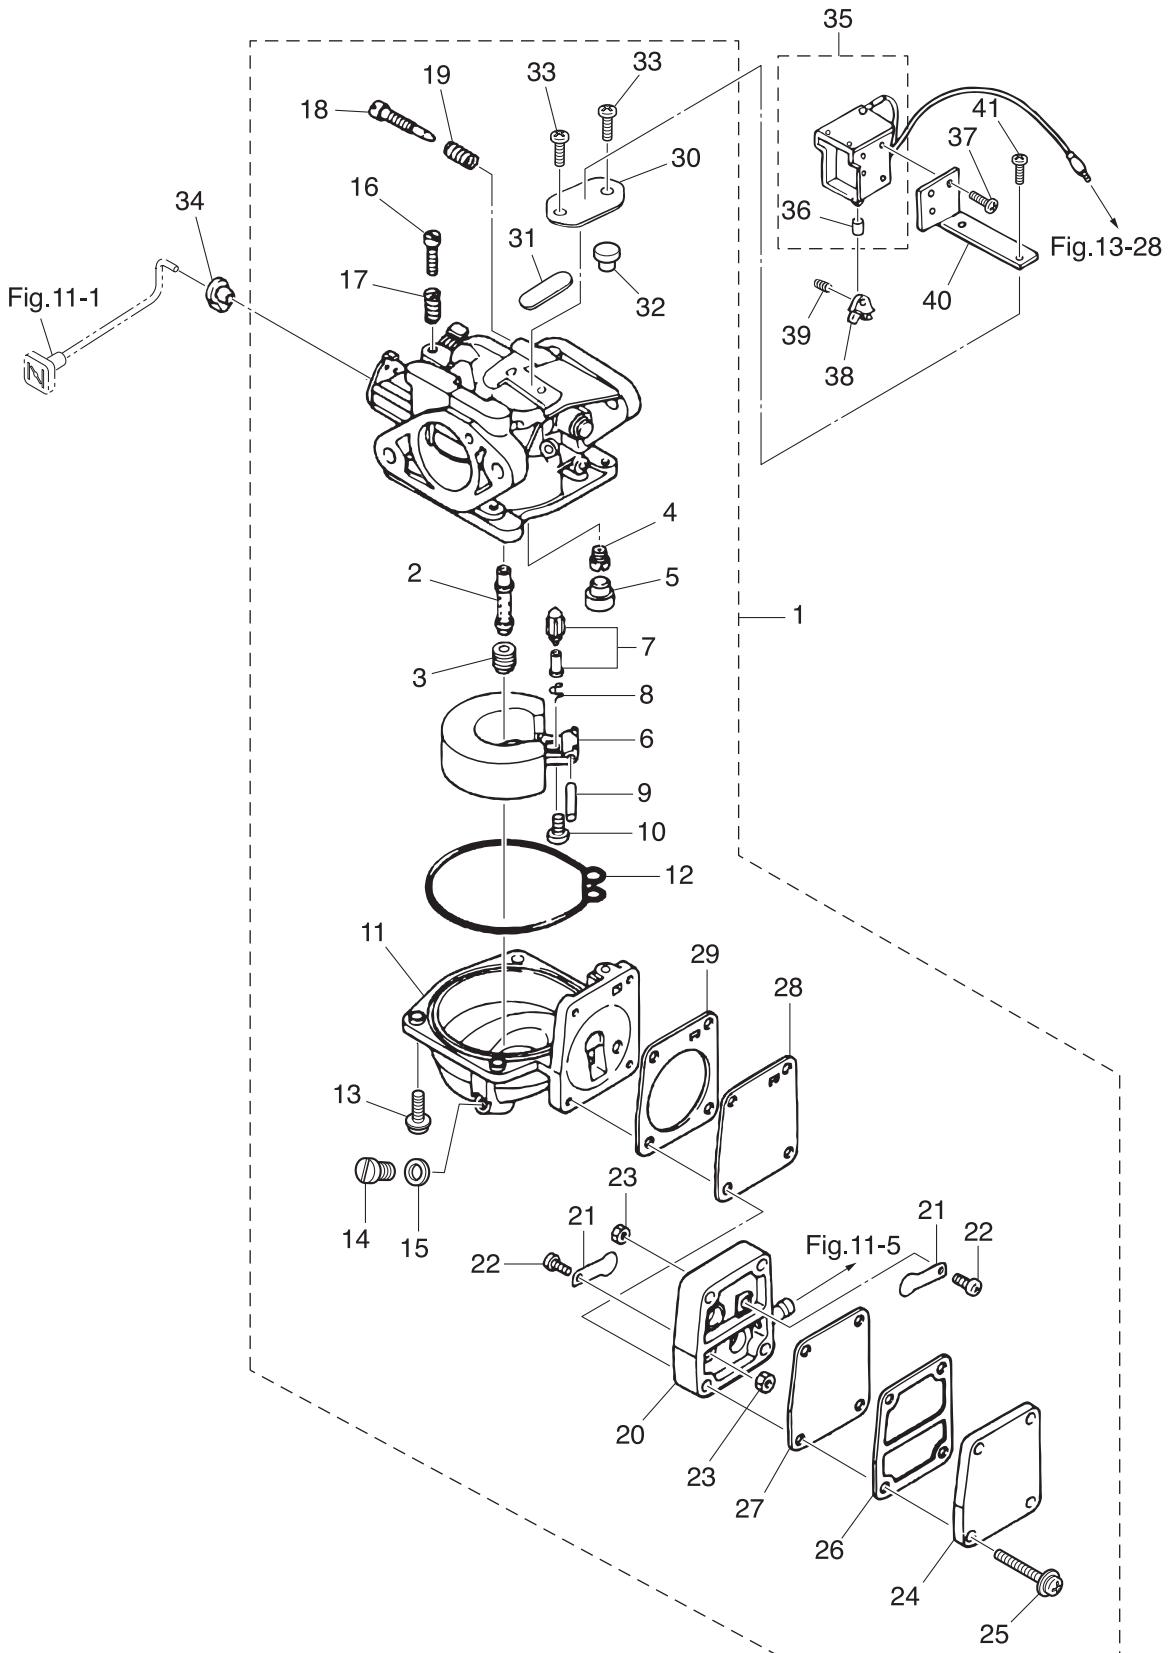

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
4-1	1	3G0-03200-0	CARBURETOR ASSY	1		E16A M6B
4-1	2	3B2-03200-1	CARBURETOR ASSY		1	F43B M8B for MF
4-1	3	3B2-03202-1	CARBURETOR ASSY (EP)		1	F79B M8B for EP
4-1	4	3K9-03200-0	CARBURETOR ASSY		1	54EA M9.8B for MF/EF
4-1	5	3K9-03202-0	CARBURETOR ASSY (EP)		1	55EA M9.8B for EP
4-2	1	3G0-03252-0	* MAIN NOZZLE	1		for M6B
4-2	2	3B2-03252-0	* MAIN NOZZLE		1	for M8B
4-2	3	3K9-03252-0	* MAIN NOZZLE		1	for M9.8B
4-3	1	3G0-03251-0	* MAIN JET (#80)	1		for M6B
4-3	2	3B2-03251-0	* MAIN JET (#98)		1	for M8B
4-3	3	3K9-03251-0	* MAIN JET (#95)		1	for M9.8B
4-4	1	3B2-03254-0	* SLOW JET (#48)	1	1	for M8B, M6B
4-4	2	3K9-03254-0	* SLOW JET (#50)		1	for M9.8B
4-5		346-03256-0	* RUBBER CAP	1	1	1
4-6		369-03231-0	* FLOAT	1	1	1
4-7		3R3-03239-0	* FLOAT VALVE ASSY	1	1	1
4-8		344-03244-0	* CLIP	1	1	1
4-9		346-03232-0	* FLOAT ARM PIN	1	1	1
4-10		3F3-03234-0	* SCREW	1	1	1
4-11		3B2-03221-0	* FLOAT CHAMBER	1	1	1
4-12		369-03222-0	* FLOAT CHAMBER O-RING	1	1	1
4-13		922503-6414	* SCREW	4	4	4
4-14		369-03292-0	* DRAIN SCREW	1	1	1
4-15		369-03293-1	* GASKET	1	1	1
4-16		346-03265-0	* STOP SCREW	1	1	1
4-17		346-03267-0	* SPRING	1	1	1
4-18		346-03266-0	* PILOT SCREW	1	1	1
4-19		356-03268-0	* SPRING	1	1	1
4-20		369-03304-0	* PUMP BODY	1	1	1


Fig. 4

CARBURETOR • FUEL PUMP

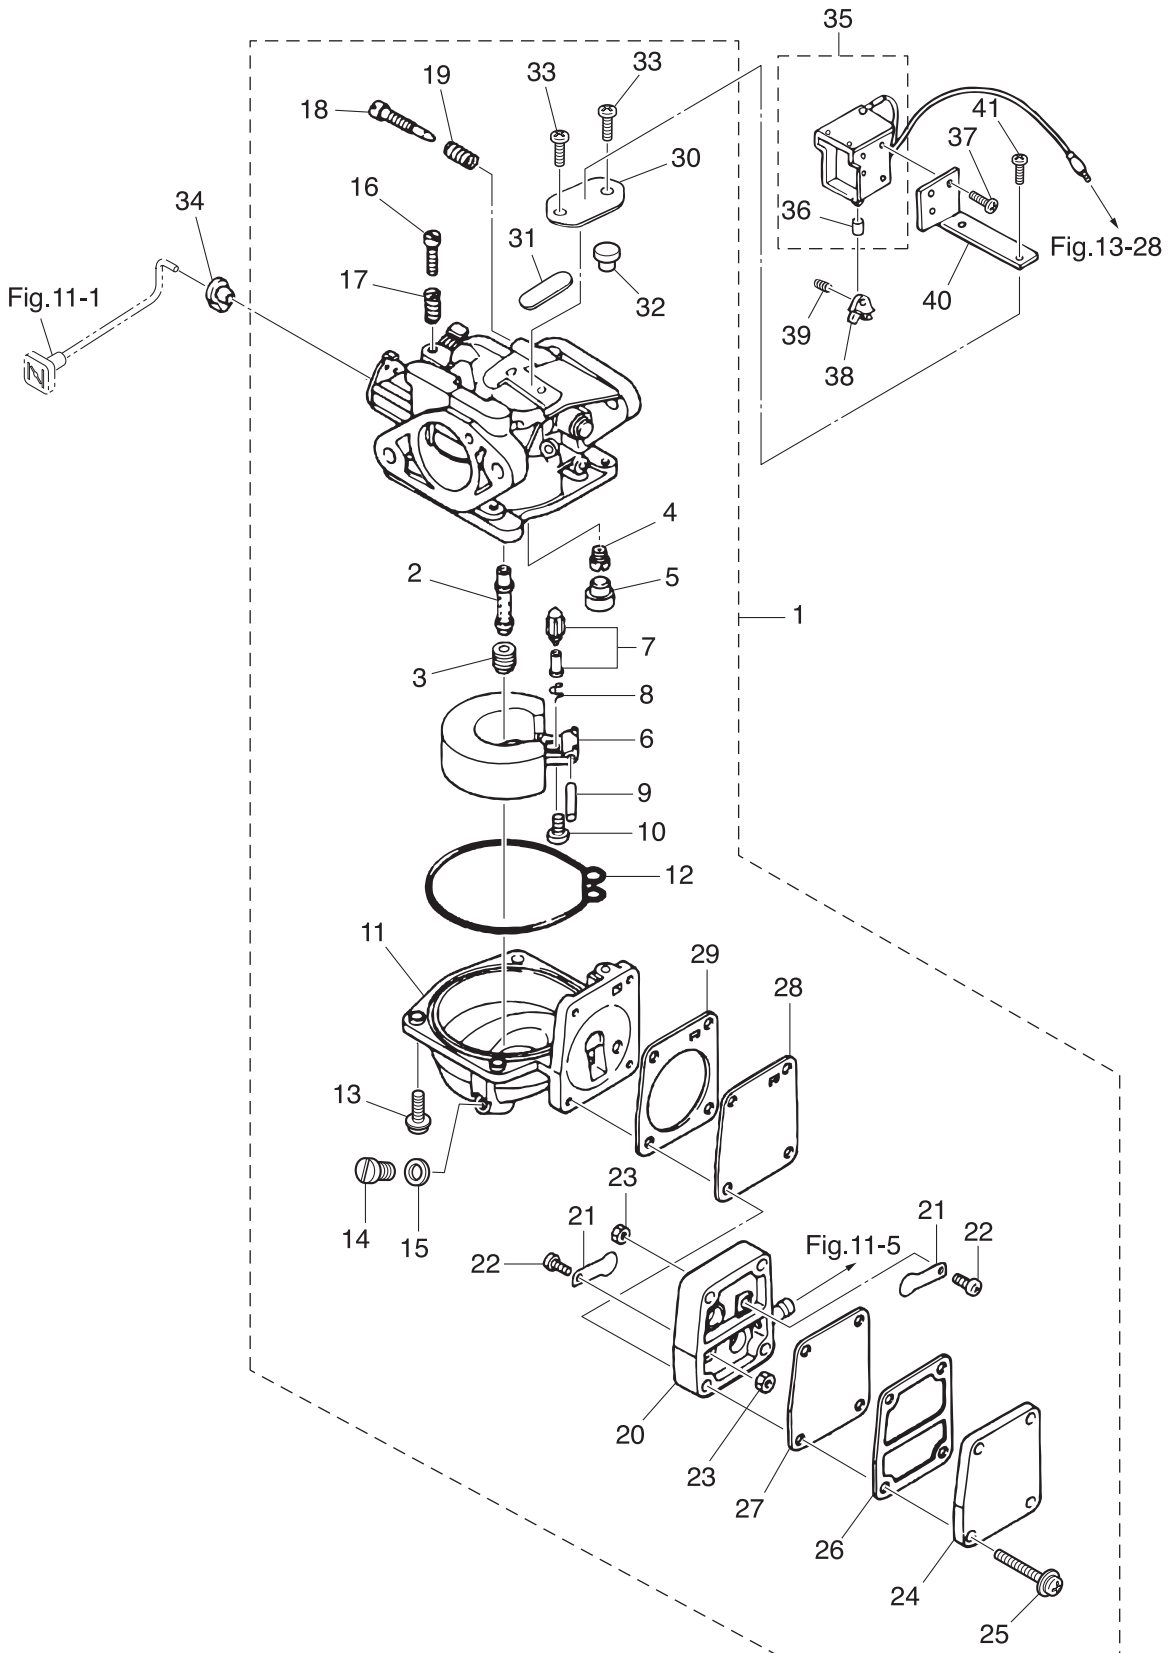

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
4-21	369-03305-0	* CHECK VALVE	2	2	2	
4-22	921522-0306	* SCREW	2	2	2	
4-23	930121-0300	* NUT	2	2	2	
4-24	369-03301-0	* PUMP COVER	1	1	1	
4-25	922553-6423	* SCREW	4	4	4	
4-26	369-03302-0	* PUMP COVER GASKET	1	1	1	
4-27	369-03303-0	* DIAPHRAGM A	1	1	1	
4-28	369-03306-0	* DIAPHRAGM B	1	1	1	
4-29	369-03307-0	* PUMP BODY GASKET	1	1	1	
4-30	369-03181-0	* CARBURETOR COVER	1	1	1	
4-31	369-03182-0	* CARBURETOR COVER GASKET	1	1	1	
4-32	369-03183-0	* CARBURETOR COVER GASKET	1	1	1	
4-33	369-03186-0	* SCREW	2	2	2	
4-34	346-67196-1	ROD SNAP 3-B	1	1	1	
4-35	361-76050-0	CHOKE SOLENOID		1	1	for EP
4-36	361-76073-0	* PLUNGER		1	1	for EP
4-37	921503-6408	SCREW		3	3	for EP
4-38	346-76057-0	CHOKE SOLENOID HOOK		1	1	for EP
4-39	951403-0312	SPRING PIN 3-12		1	1	for EP
4-40	3B2-76055-1	CHOKE SOLENOID BRACKET		1	1	for EP
4-41	9215E3-0510	SCREW		2	2	for EP


RECOIL STARTER • STARTER LOCK



Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
5-1	3B2-05000-1	RECOIL STARTER ASSY	1	1	1	
5-2	3B2-05105-0	* STARTER CASE	1	1	1	
5-3	3B2-05010-1	* STARTER SPRING SET	1	1	1	
5-4	3B2-05104-0	* REEL	1	1	1	
5-5	369-05012-0	* RETURN SPRING	2	2	2	
5-6	3B2-05003-1	* RATCHET	2	2	2	
5-7	369-05007-0	* FRICTION SPRING	1	1	1	
5-8	3B2-05138-1	* BOLT	1	1	1	
5-9	3B2-05006-1	* FRICTION PLATE	1	1	1	
5-10	3B2-05013-0	* STARTER ROPE ϕ 4.5-1620	1	1	1	
5-11	3B2-05019-0	* STARTER HANDLE	1	1	1	
5-12	3B2-05131-1	* ROPE ANCHOR	1	1	1	
5-13	3B2-05116-0	* SEALING PLATE	1	1	1	
5-14	338-05252-0	* STARTER LOCK	1	1	1	
5-15	921503-5430	* SCREW	1	1	1	
5-16	338-05255-0	* COLLAR 4-6-21	1	1	1	
5-17	338-05216-0	* STARTER LOCK SPRING	1	1	1	
5-18	3B2-05253-0	* STARTER LOCK CAM	1	1	1	
5-19	941403-0800	* WAVE WASHER d=8	1	1	1	
5-20	921503-7616	* SCREW	1	1	1	
5-21	3M2-05215-0	* COLLAR 6.1-8-4	1	1	1	
5-22	3B2-05217-1	STARTER LOCK ROD	1	1	1	
5-23	3K9-05223-0	ROD SNAP 4-2	1	1	1	
5-24	3B2-05901-1	STARTER PULLEY	1	1	1	
5-25	9101F4-0620	BOLT	3	3	3	
5-26	941303-0600	SPRING WASHER	3	3	3	
5-27	3B2B05101-0	BRACKET	1	1	1	
5-28	3B2B05102-0	BRACKET	1	1	1	
5-29	910121-6623	BOLT	4	4	4	

Fig. 5


RECOIL STARTER • STARTER LOCK

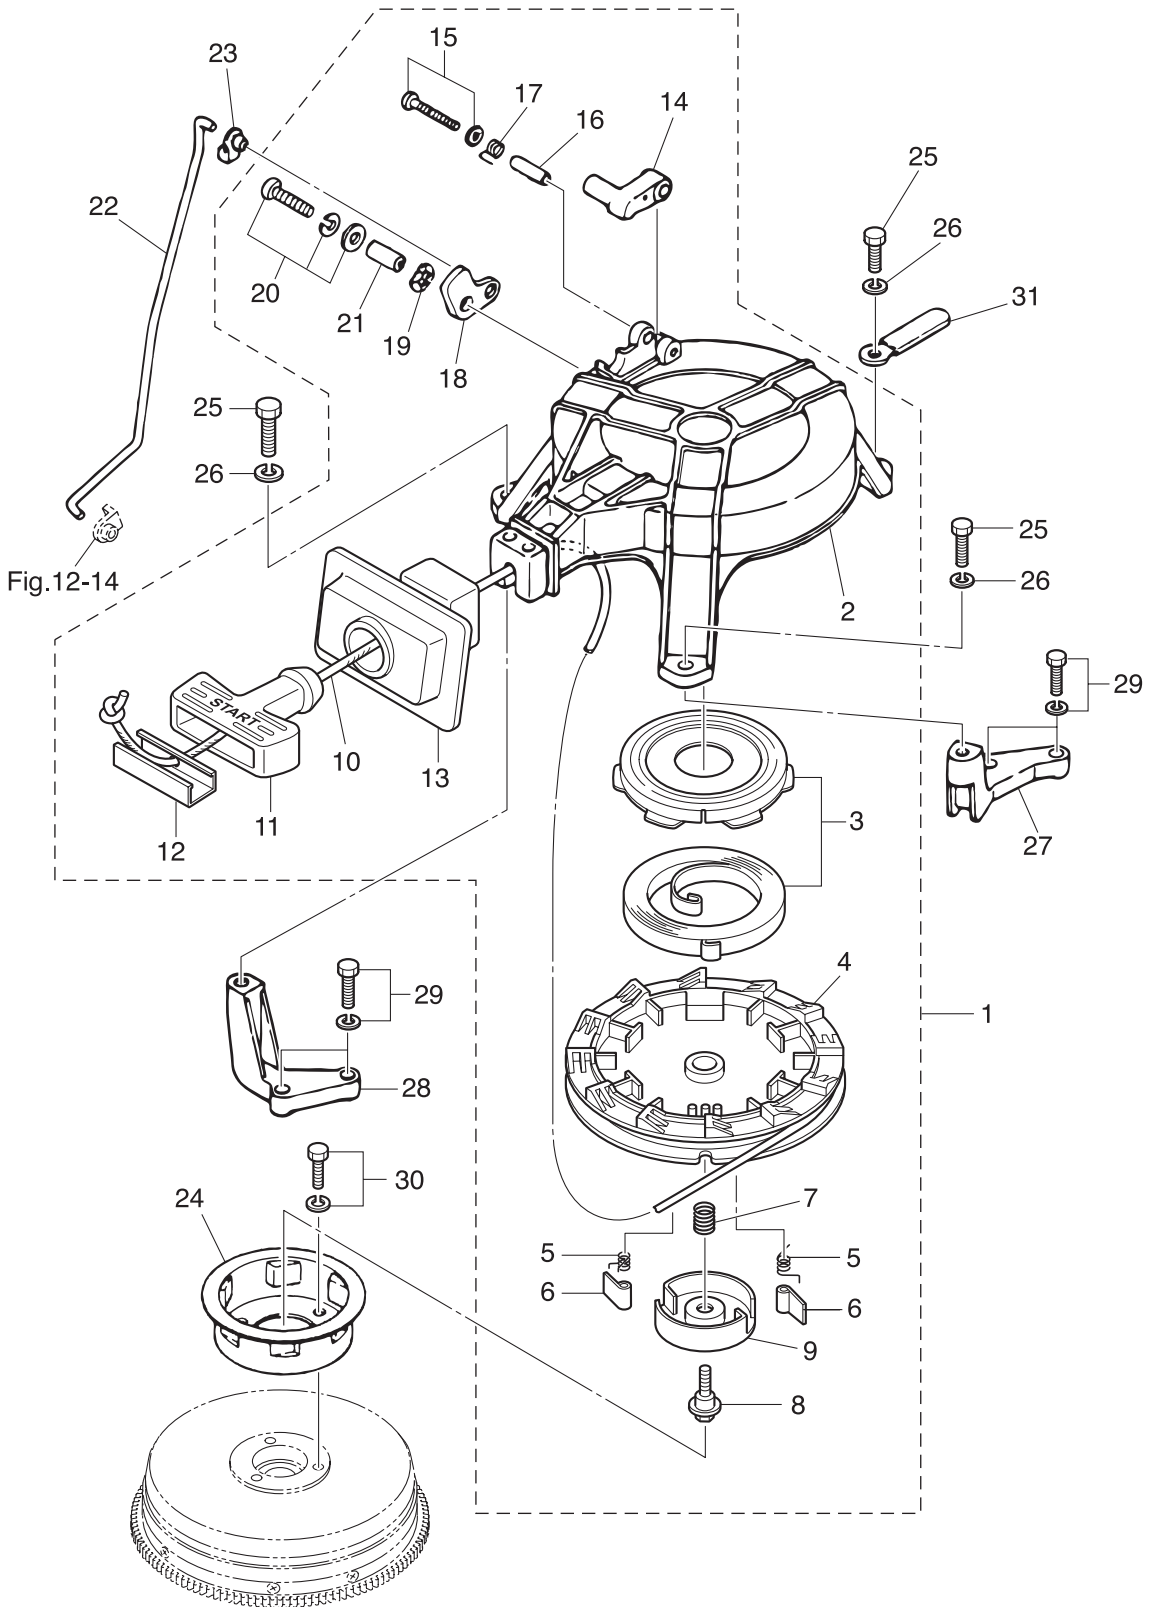

[illegible]

Fig. 6


MAGNETO • ELECTRIC PARTS

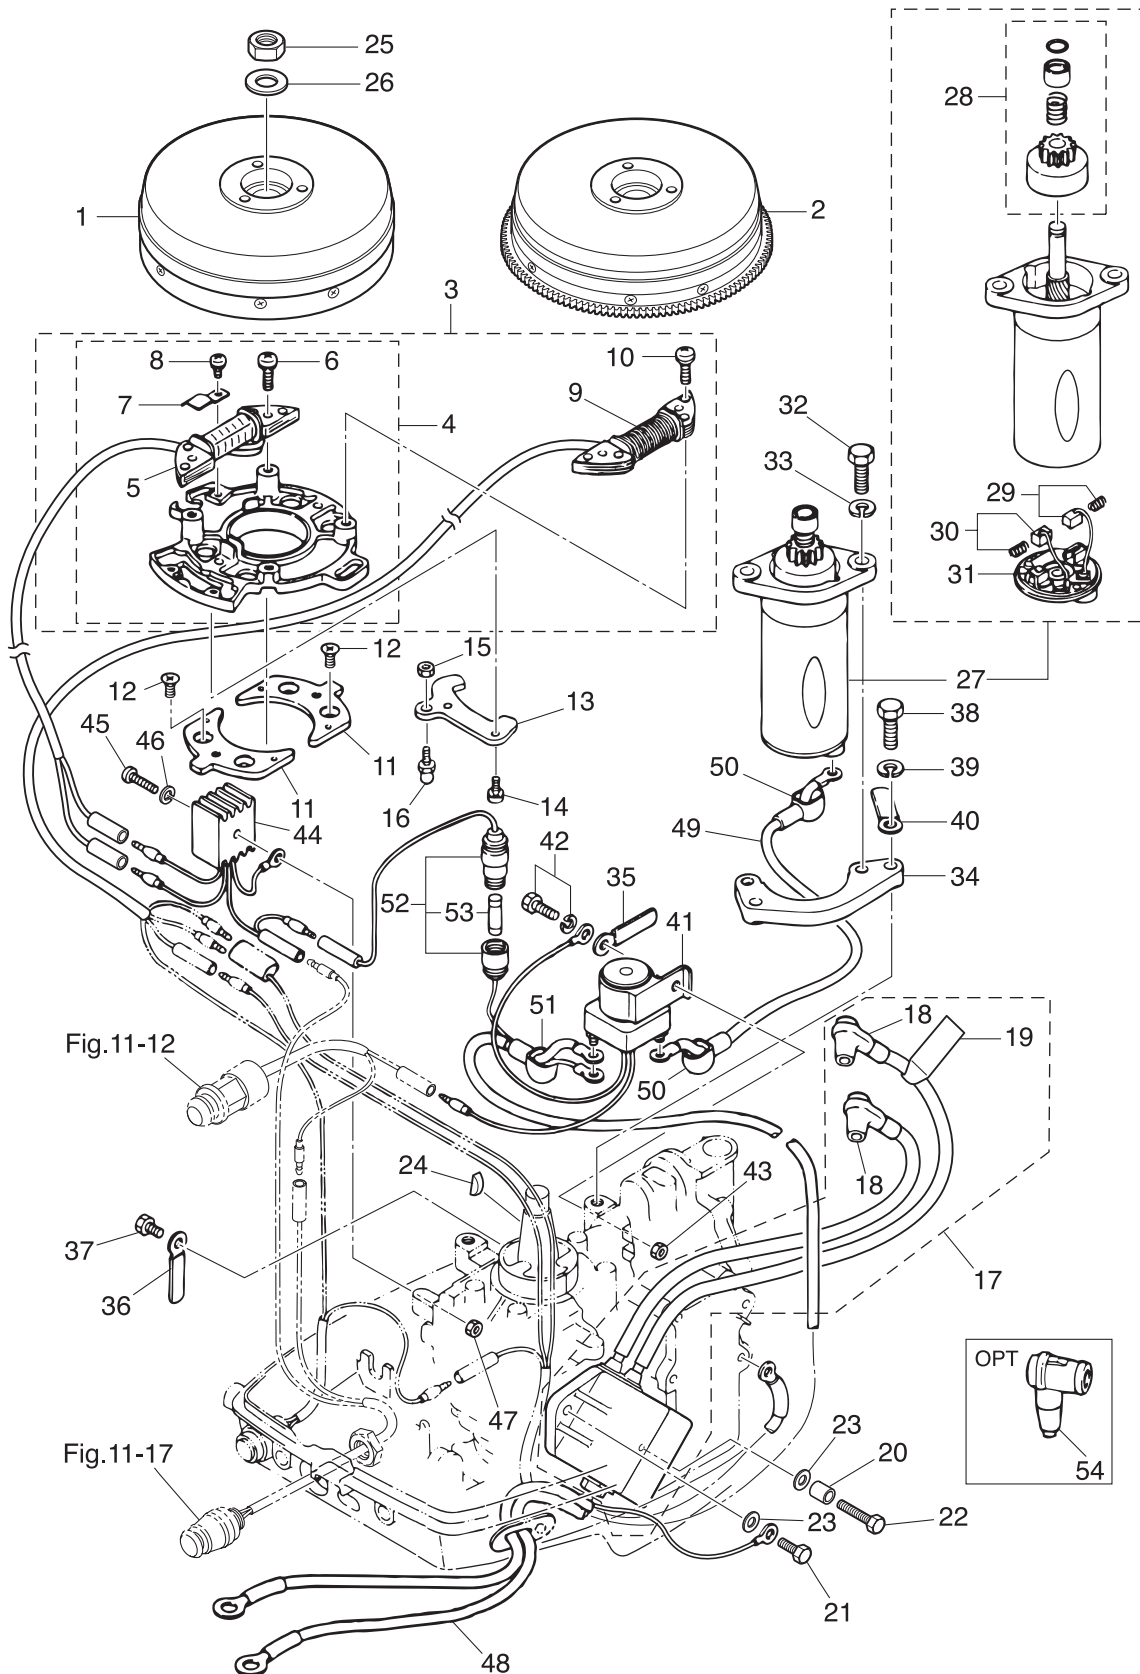

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
6-1	3B2-06101-0	FLYWHEEL ASSY	1	1	1	for MF
6-2	3B2-06194-1	FLYWHEEL ASSY W/GEAR		1	1	for EF/EP
6-3	3B2-06103-3	COIL PLATE ASSY W/ALTERNATOR		1	1	for EF/EP with Alternator
6-4	3B2-06102-2	* COIL PLATE ASSY	1	1	1	for MF without Alternator
6-5	3B2-06120-0	** EXCITER COIL	1	1	1	ALL
6-6	921521-6625	** SCREW	2	2	2	for MF
6-7	3B2-06135-0	** HOLDER	1	1	1	ALL
6-8	921521-6406	** SCREW	1	1	1	ALL
6-9	3B2-06123-1	* ALTERNATOR ASSY (80W)		1	1	for EF/EP
6-10	921521-6625	* SCREW		4	4	Exciter Coil & Alternator for EF/EP
6-11	3B2-63724-0	SETTING PLATE	2	2	2	
6-12	921621-0612	SCREW	4	4	4	
6-13	1 3B2-05233-1	COIL PLATE STOPPER	1	1		for M8B, M6B
6-13	2 3K9-05233-0	COIL PLATE STOPPER			1	for M9.8B
6-14	921503-6510	SCREW	2	2	2	
6-15	930103-0600	NUT	1	1	1	
6-16	346-05228-1	BALL JOINT	1	1	1	
6-17	3B2-06170-0	CD UNIT ASSY	1	1	1	
6-18	346-06999-0	* PLUG CAP W/RESISTANCE	2	2	2	
6-19	3C8-72181-0	* CAUTION DECAL (B)	1	1	1	
6-20	3B2-06162-0	SPACER 6.2-9-27	1	1	1	
6-21	9101F4-0620	BOLT	1	1	1	
6-22	9101F4-0645	BOLT	1	1	1	
6-23	940103-0600	WASHER	2	2	2	
6-24	338-00131-0	KEY	1	1	1	Magneto
6-25	369-00132-0	NUT12-P1.25	1	1	1	
6-26	940121-1200	WASHER	1	1	1	
6-27	350-76010-0	STARTER MOTOR ASSY		1	1	
6-28	350-76015-0	* PINION ASSY		1	1	

Fig. 6


MAGNETO • ELECTRIC PARTS

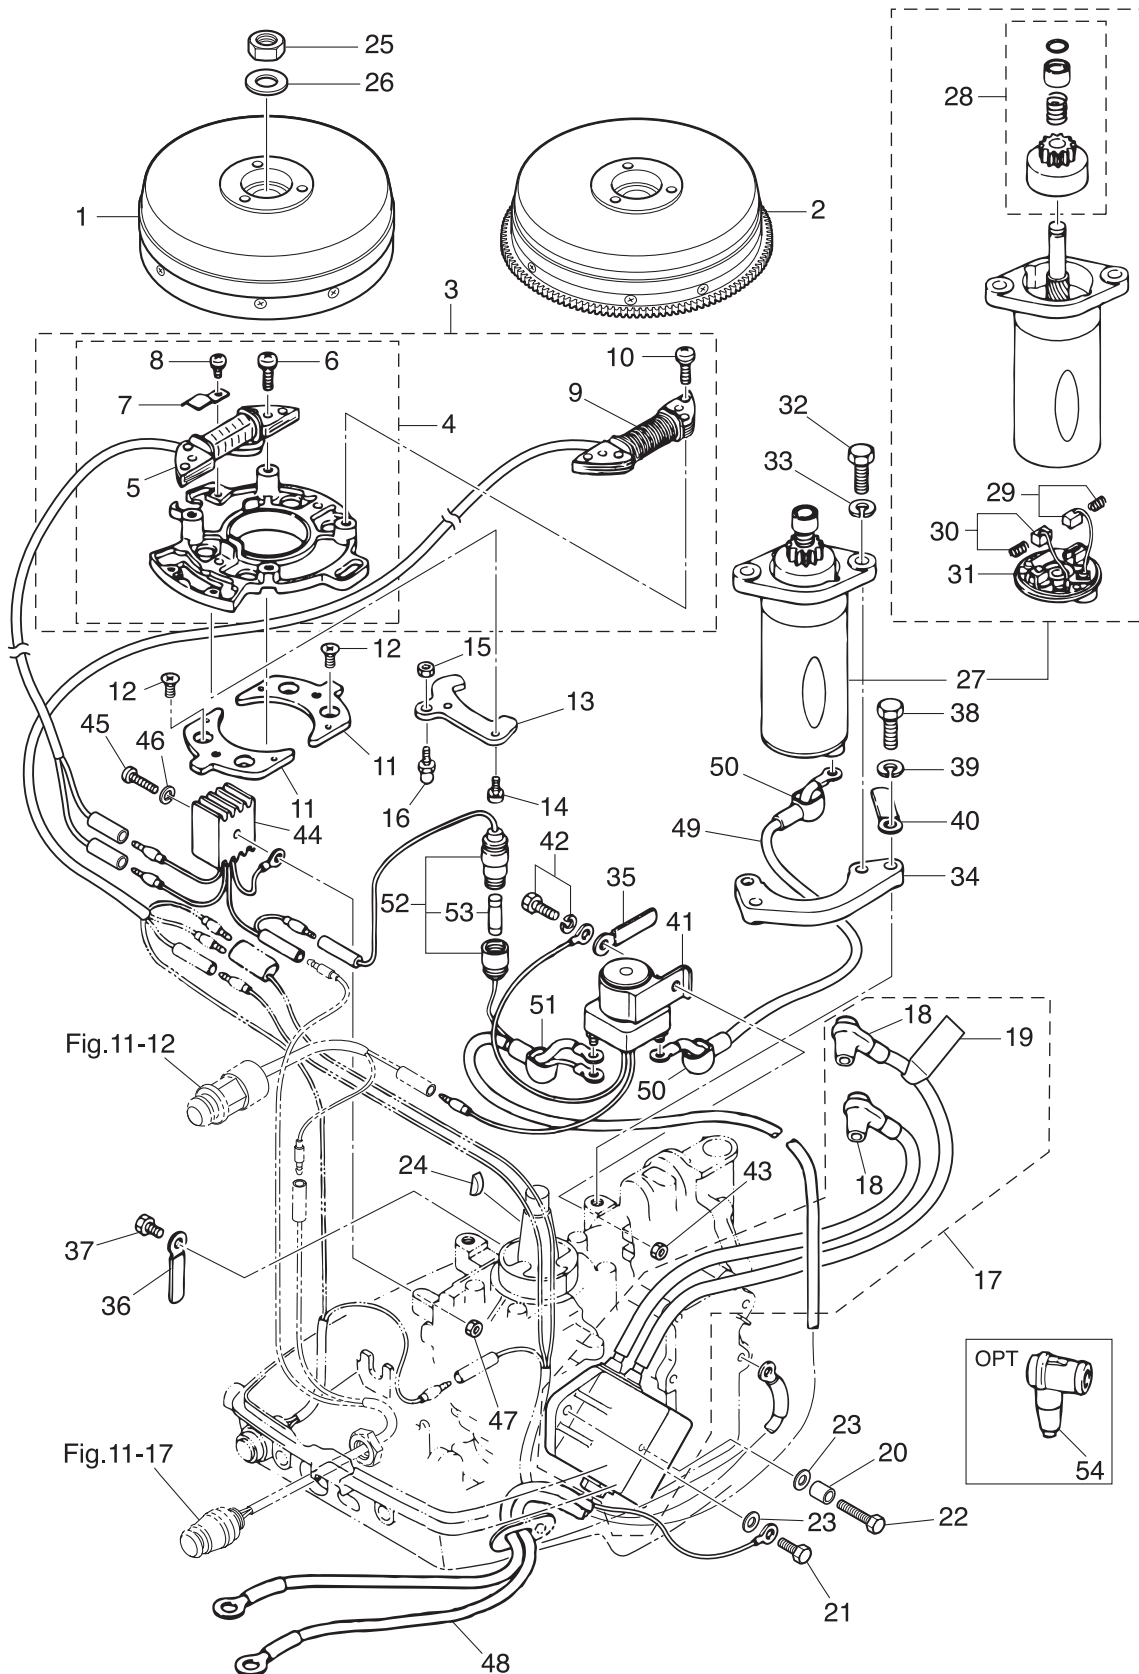

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
6-29	350-76012-0	* POSITIVE BRUSH		1	1	Spring
6-30	350-76013-0	* NEGATIVE BRUSH		1	1	Spring
6-31	350-76014-0	* BRUSH HOLDER		1	1	
6-32	916103-0830	BOLT		2	2	
6-33	941303-0800	SPRING WASHER		2	2	
6-34	350-76011-0	STARTER MOTOR BRACKET		1	1	
6-35	398-06972-0	CLAMP 6.5-67P		1	1	
6-36	309-06972-0	CLAMP 6.5-47.5P		1	1	
6-37	9101F4-0610	BOLT		1	1	
6-38	910103-0825	BOLT		2	2	
6-39	941303-0800	SPRING WASHER		2	2	
6-40	345-06917-1	CLAMP 9-20U		1	1	
6-41	346-76040-0	STARTER SOLENOID		1	1	
6-42	910103-6620	BOLT		1	1	
6-43	930103-0600	NUT		1	1	
6-44	3B2-76060-0	RECTIFIER COMPLETE		1	1	
6-45	921503-0525	SCREW		1	1	
6-46	941303-0500	SPRING WASHER		1	1	
6-47	930103-0500	NUT		1	1	
6-48	3B2-76120-1	BATTERY CABLE L=2000		1	1	
6-49	3B2-76147-2	STARTER CABLE L=200		1	1	
6-50	3A3-76145-0	TERMINAL CAP		2	2	
6-51	3B7-76145-0	TERMINAL CAP		1	1	
6-52	3B2-76062-0	FUSE WIRE ASSY L=355		1	1	
6-53	346-76212-0	* FUSE 15A		1	1	
6-54	3C7-06921-0	PLUG CAP W/RESISTANCE	2	2	2	OPT


Fig. 7

DRIVE SHAFT HOUSING

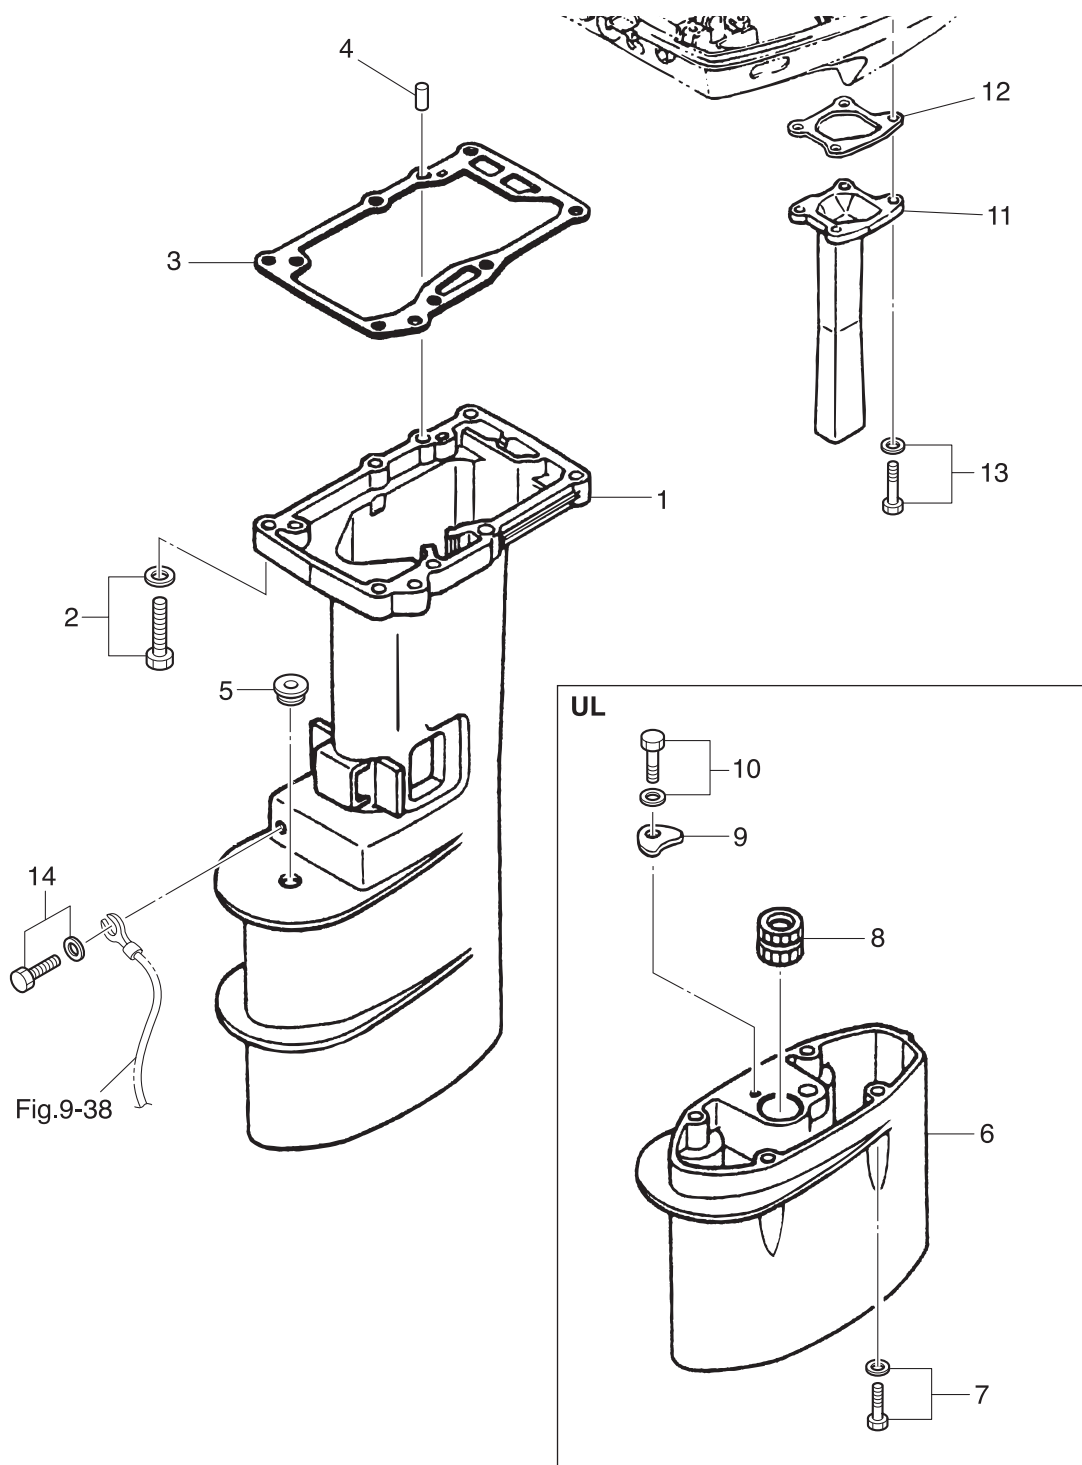

[illegible]


GEAR CASE

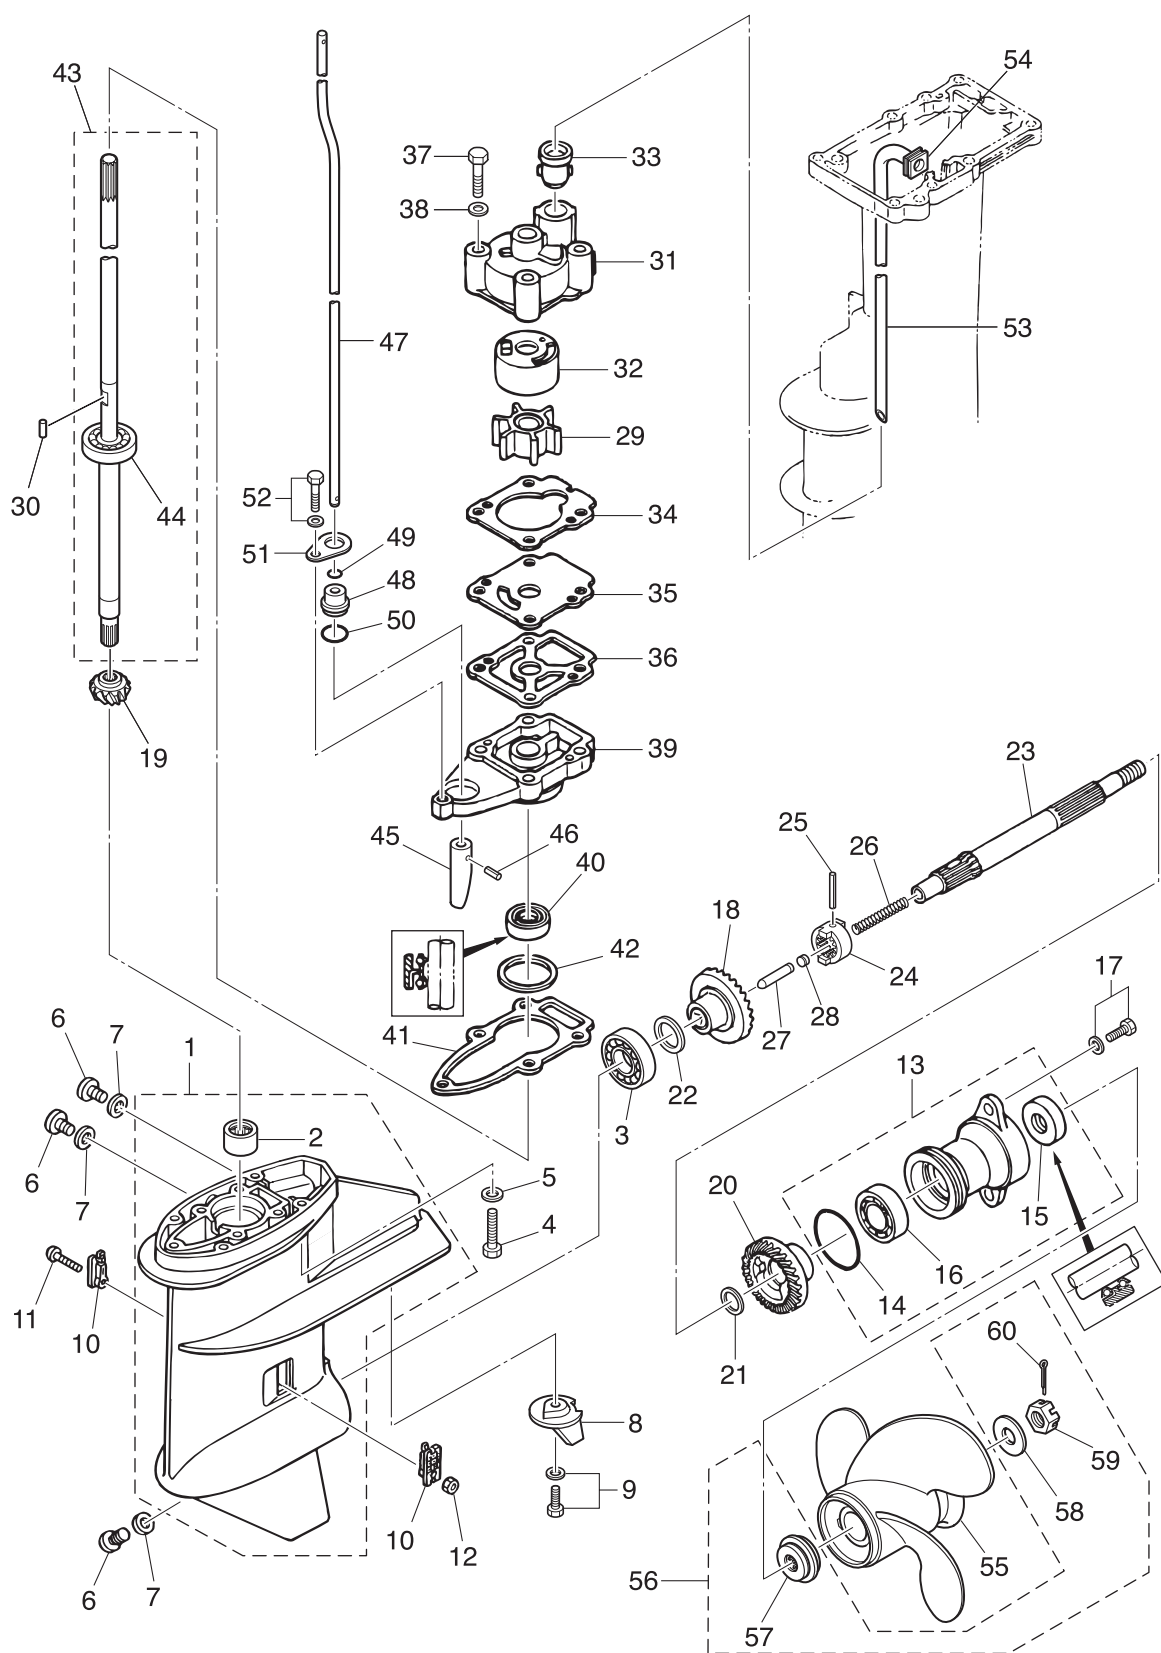

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
8-1	3B2Q60000-2	GEAR CASE ASSY	1	1	1	
8-2	3B2-60211-0	* ROLLER BEARING 15-21-16	1	1	1	
8-3	9601-0-6204	BALL BEARING 6204	1	1	1	
8-4	9161E3-0635	BOLT	4	4	4	
8-5	9401E3-0600	WASHER	4	4	4	
8-6	332-60005-2	PLUG 8-8	3	3	3	
8-7	332-60006-0	GASKET 8.1-15-1	3	3	3	
8-8	3V1-60217-0	TRIM TAB	1	1	1	
8-9	910103-5620	BOLT	1	1	1	
8-10	3AA-60206-0	WATER STRAINER W=17	2	2	2	Mark A
8-11	921503-0430	SCREW	1	1	1	
8-12	930403-0400	NYLON NUT 4-P0.7	1	1	1	
8-13	3B2Q60100-1	PROPELLER SHAFT HOUSING ASSY	1	1	1	
8-14	345-65015-0	* O-RING 3.2-47	1	1	1	
8-15	369-60111-0	* OIL SEAL 15-28-10	1	1	1	
8-16	9601-0-6004	* BALL BEARING 6004	1	1	1	
8-17	9101E3-5620	BOLT	2	2	2	
8-18	3B2-64010-0	BEVEL GEAR ASSY (A)	1	1	1	
8-19	3B2-64020-0	BEVEL GEAR B	1	1	1	
8-20	3B2-64030-0	BEVEL GEAR C	1	1	1	
8-21	369-64032-0	WASHER 15.2-19-1.9	1	1	1	
8-22	1 369-64014-0	SHIM 21-28-0.1	A	A	A	
8-22	2 369-64015-0	SHIM 21-28-0.15	A	A	A	
8-23	3V1-64211-1	PROPELLER SHAFT	1	1	1	
8-24	3B2-64215-0	CLUTCH	1	1	1	
8-25	301-64217-0	PIN 3.5-28	1	1	1	
8-26	3V1-64221-0	SPRING	1	1	1	
8-27	369-64223-0	PUSH ROD	1	1	1	
8-28	3B2-64222-0	SPRING RETAINER	1	1	1	


Fig. 8

GEAR CASE

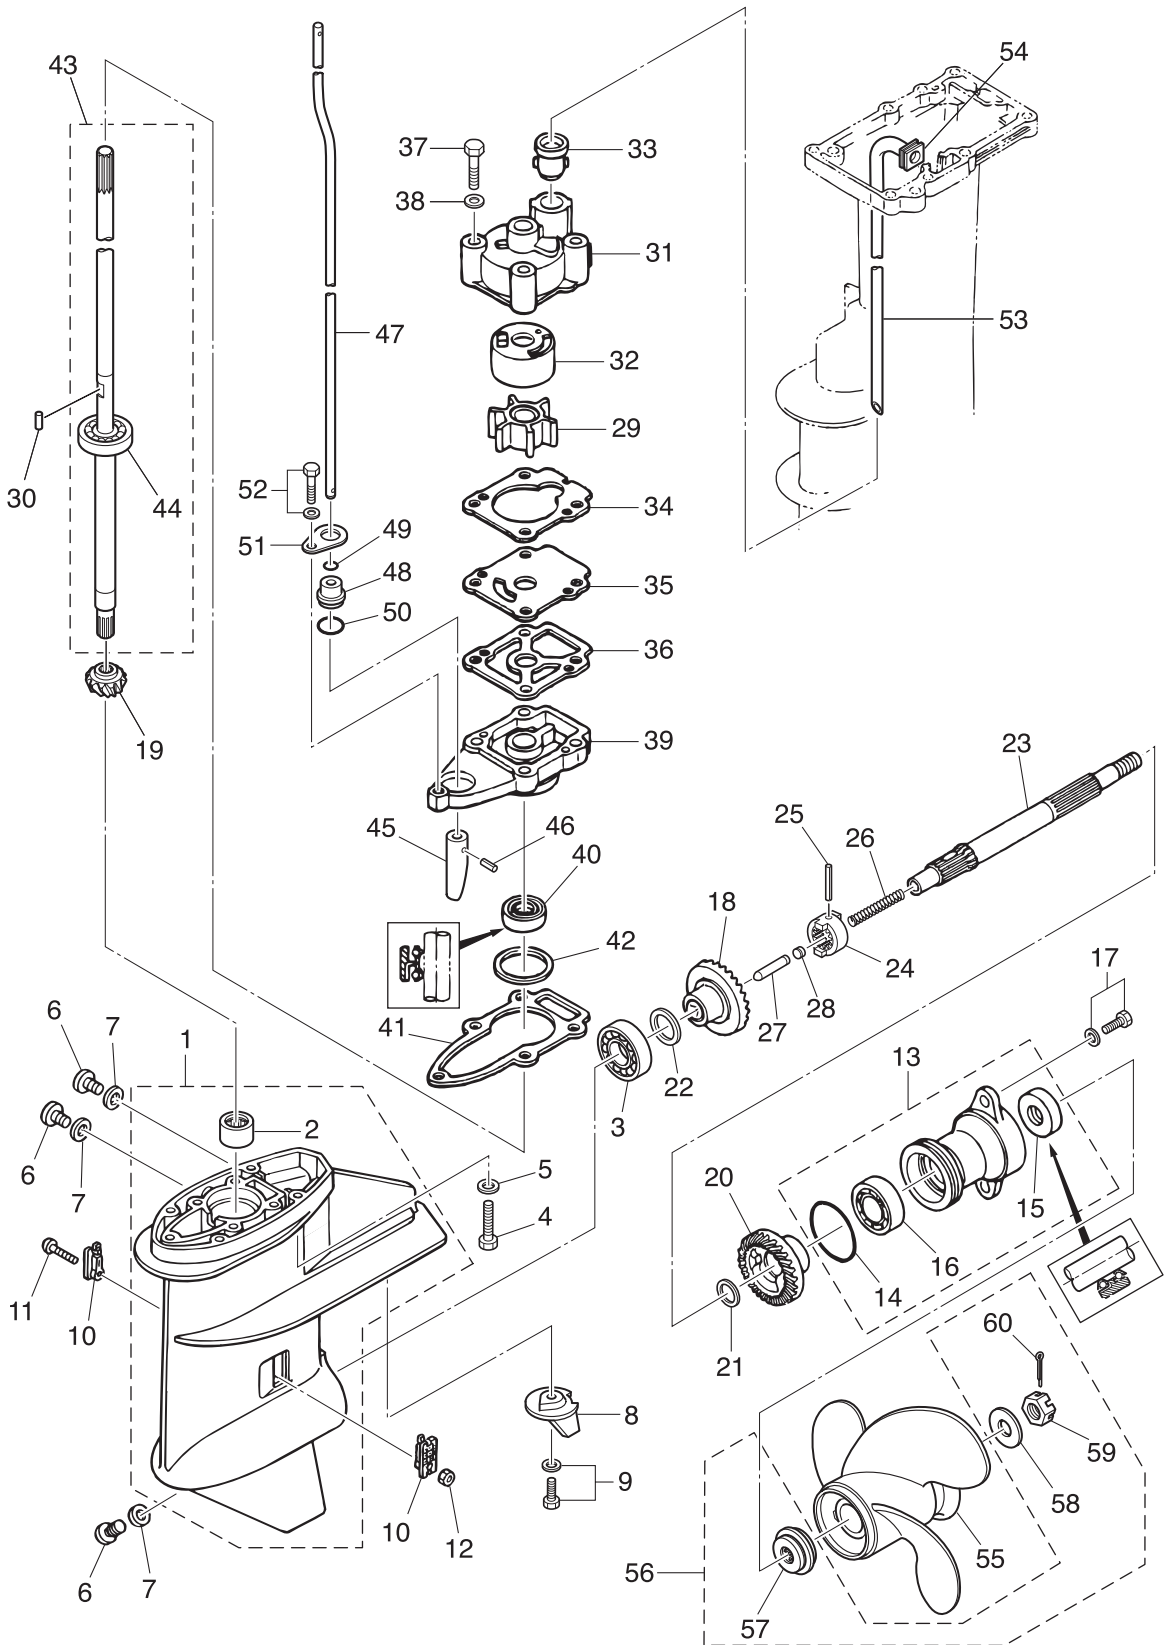

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
8-29	3B2-65021-1	WATER PUMP IMPELLER	1	1	1	
8-30	3B2-65022-0	KEY ϕ 3-11	1	1	1	
8-31	3B2-65016-0	PUMP CASE (UPPER)	1	1	1	
8-32	3B2-65011-0	PUMP CASE LINER	1	1	1	
8-33	331-65014-0	WATER PIPE SEAL (LOWER)	1	1	1	
8-34	3B2-65018-2	PUMP CASE GASKET	1	1	1	
8-35	3B2-65025-0	WATER PUMP GUIDE PLATE	1	1	1	
8-36	3B2-65029-2	GUIDE PLATE GASKET	1	1	1	
8-37	9161E3-0650	BOLT	4	4	4	
8-38	940103-0600	WASHER	4	4	4	
8-39	3V1-65017-0	PUMP CASE (LOWER)	1	1	1	
8-40	309-60111-0	OIL SEAL 12-24-8	1	1	1	
8-41	3B2-65020-1	PUMP CASE GASKET (LOWER)	1	1	1	
8-42	1 3B2-64081-0	SHIM 28-36.8-0.1	A	A	A	
8-42	2 3B2-64082-0	SHIM 28-36.8-0.15	A	A	A	
8-42	3 3B2-64083-0	SHIM 28-36.8-0.3	A	A	A	
8-43	1 3B2-64306-1	DRIVE SHAFT ASSY (S)	1	1	1	for Transom "S"
8-43	2 3B2-64307-1	DRIVE SHAFT ASSY (L)	1	1	1	for Transom "L"
8-43	3 3B2-64309-1	DRIVE SHAFT ASSY (UL)		1	1	for Transom "UL"
8-44	9601-0-6301	* BALL BEARING 6301	1	1	1	
8-45	369-66011-0	CLUTCH CAM	1	1	1	
8-46	951403-0310	SPRING PIN 3-10	1	1	1	
8-47	1 3B2-66012-0	CAM ROD (S)	1	1	1	for Transom "S"
8-47	2 3B2-66013-0	CAM ROD (L)	1	1	1	for Transom "L"
8-47	3 3B2-66014-0	CAM ROD (UL)		1	1	for Transom "UL"
8-48	369-66031-0	CAM ROD BUSHING	1	1	1	
8-49	369-66021-1	O-RING 2.5-4.9	1	1	1	
8-50	332-66032-0	O-RING 2.4-15.4	1	1	1	
8-51	369-66033-0	STOPPER	1	1	1	


GEAR CASE

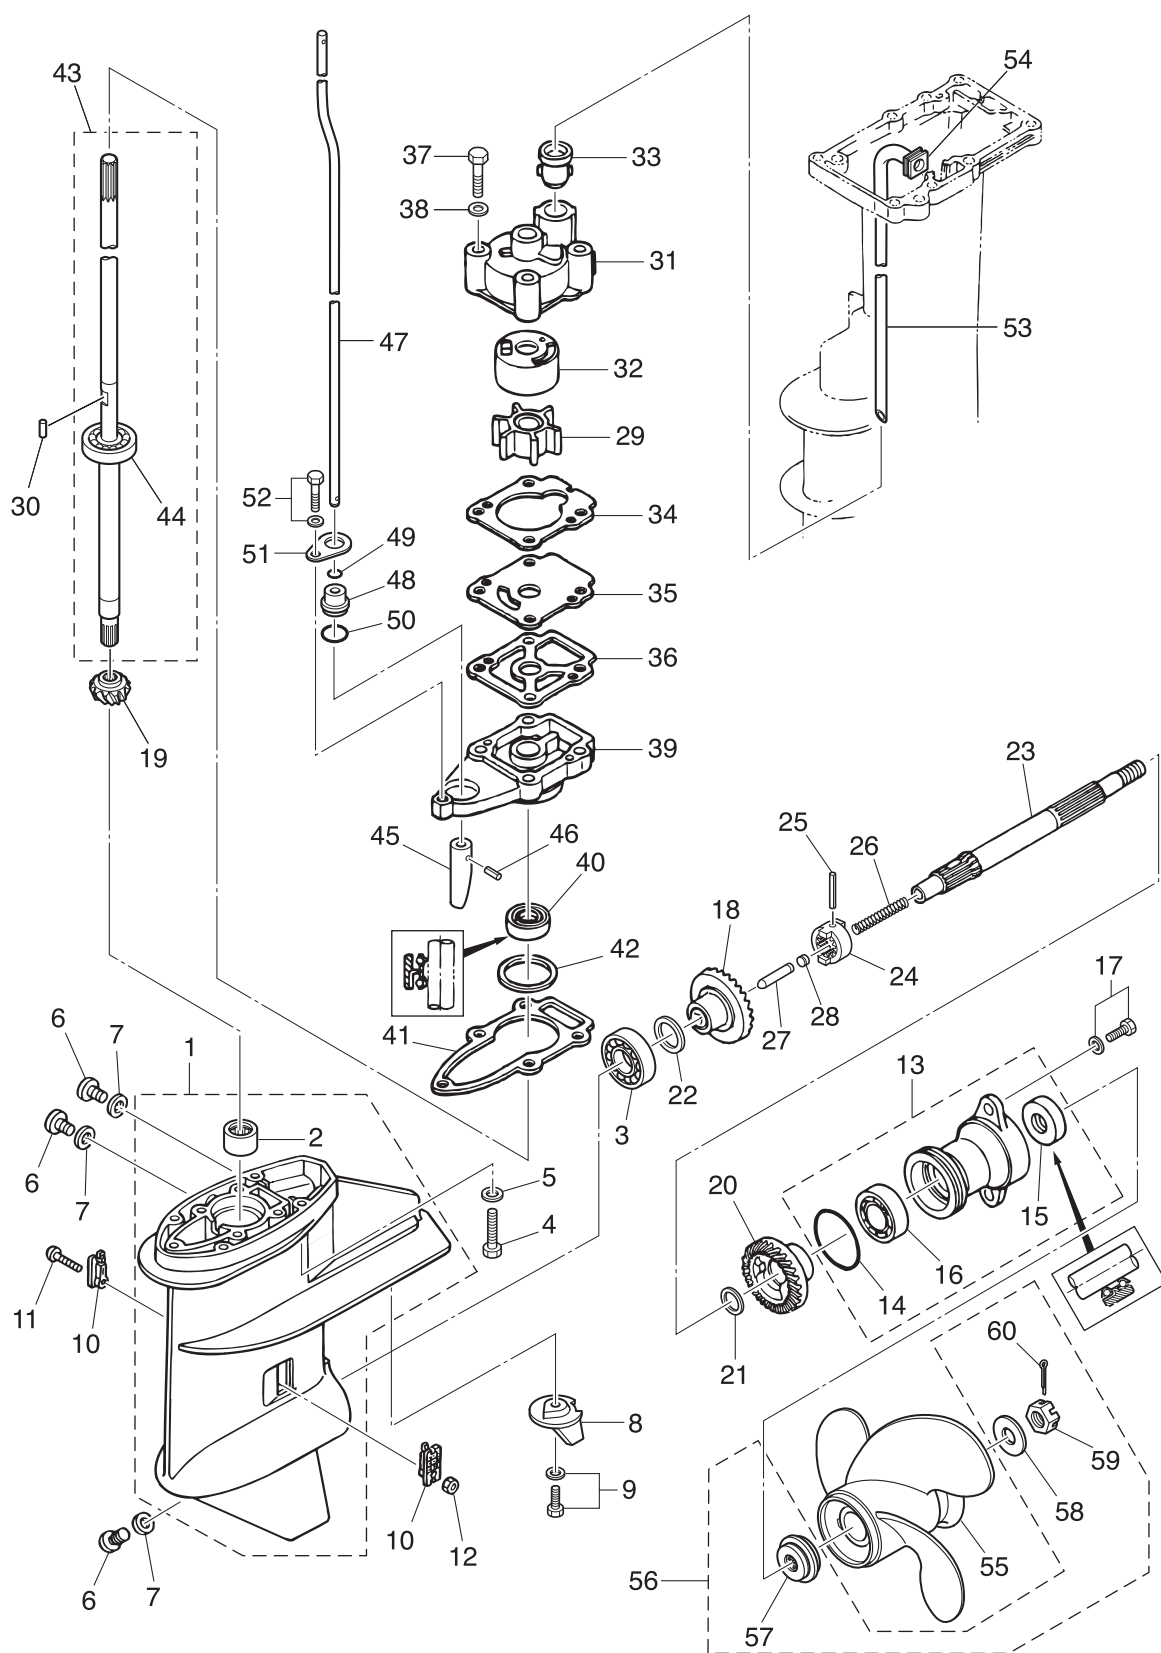

[illegible]

Fig. 9


BRACKET • REVERSE LOCK

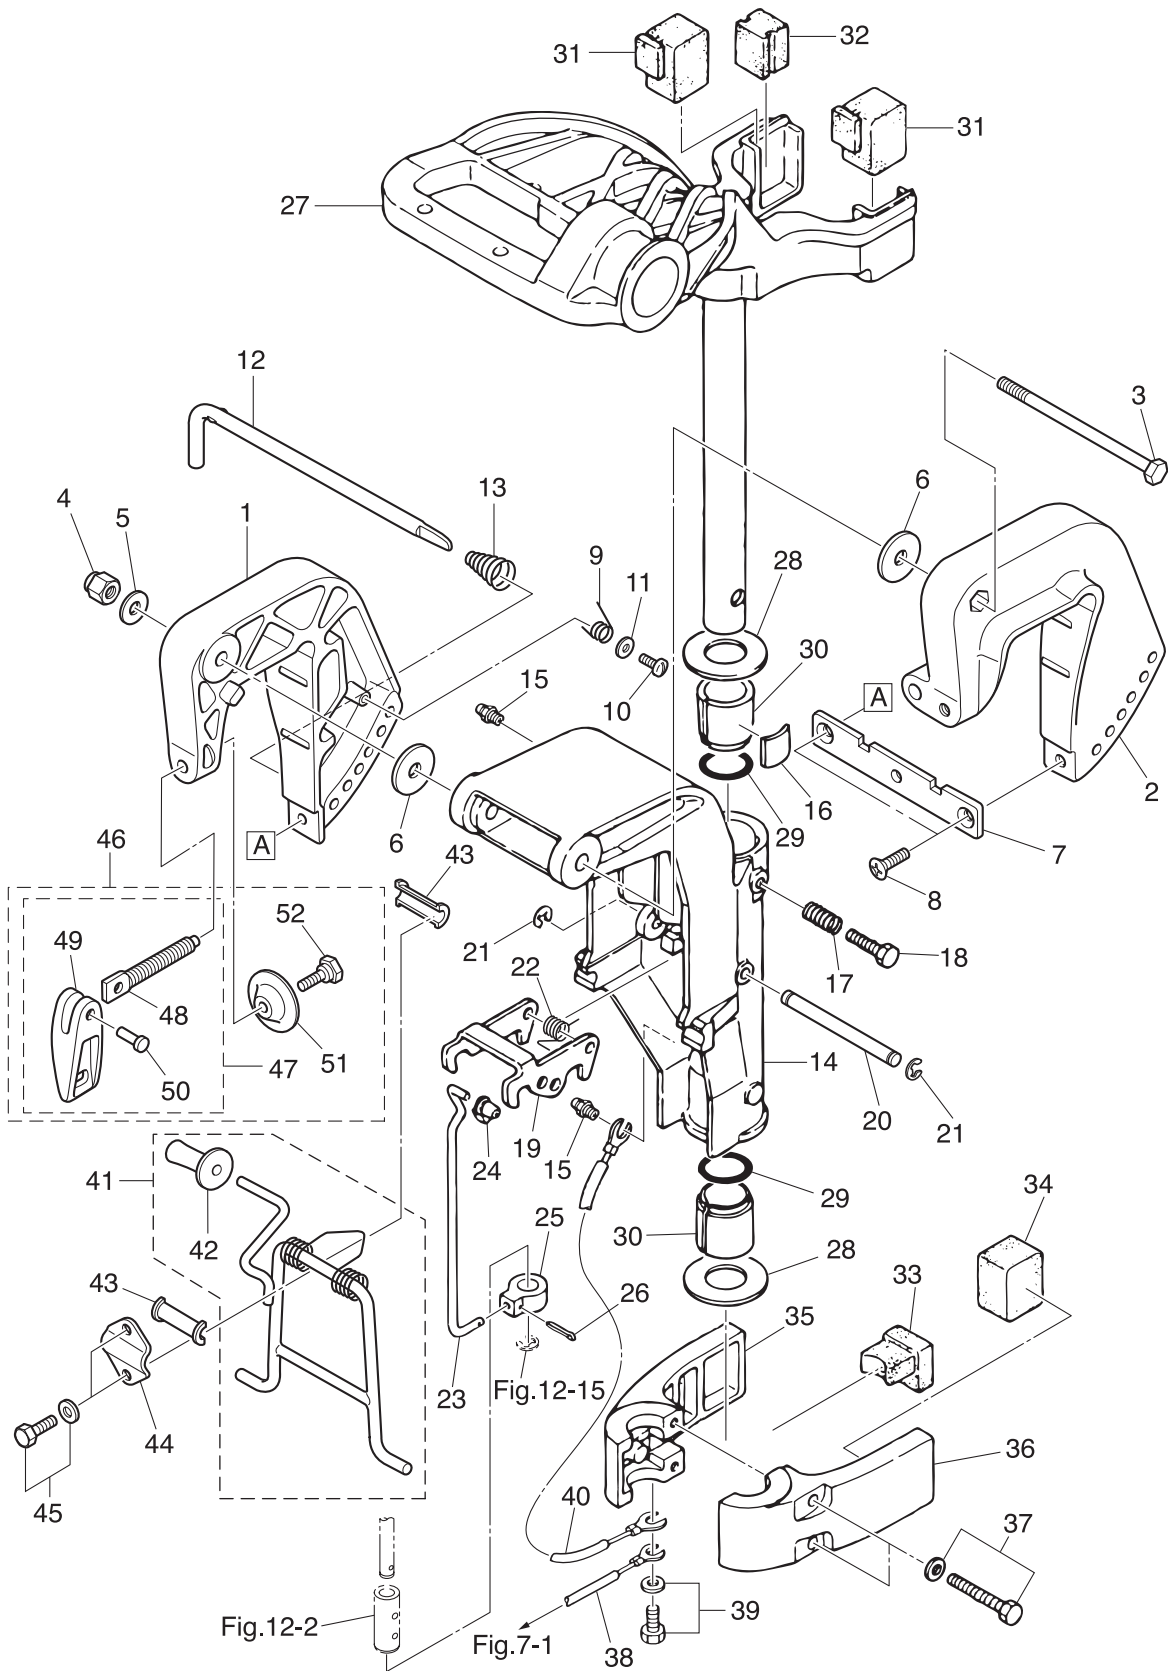

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
9-1	3V1Q62112-1	CLAMP BRACKET (R)	1	1	1	Starboard Side
9-2	3V1Q62113-1	CLAMP BRACKET (L)	1	1	1	Port Side
9-3	309-62115-2	BOLT 8-122	1	1	1	
9-4	930403-0800	NYLON NUT 8-P1.25	1	1	1	
9-5	9401E3-0800	WASHER	1	1	1	
9-6	307-62116-1	WASHER 8.5-28-1	2	2	2	
9-7	3B2-62118-0	DISTANCE PLATE	1	1	1	
9-8	9216E3-0612	SCREW	2	2	2	
9-9	369-62146-1	STERN BRACKET SPRING	1	1	1	
9-10	921703-0406	SCREW	1	1	1	
9-11	369-62147-0	WASHER 4.3-16-1.5	1	1	1	
9-12	350-62121-2	THRUST ROD	1	1	1	
9-13	369-62122-2	THRUST ROD SPRING	1	1	1	
9-14	3B2Q62310-0	SWIVEL BRACKET	1	1	1	
9-15	344-67177-1	GREASE FITTING	2	2	2	
9-16	345-62441-0	FRICTION PIECE	1	1	1	
9-17	346-62421-1	FRICTION SPRING	1	1	1	
9-18	9101E3-0830	BOLT	1	1	1	
9-19	3B2-66322-1	REVERSE LOCK	1	1	1	
9-20	3B2-66321-1	REVERSE LOCK ROD	1	1	1	
9-21	945303-0500	E-RING d=5	2	2	2	
9-22	3B2-66315-0	REVERSE LOCK SPRING	1	1	1	
9-23	3B2-66305-0	REVERSE LOCK LINK	1	1	1	
9-24	345-05224-0	ROD SNAP 5-2.5	1	1	1	
9-25	3B2-66302-0	REVERSE LOCK LINK JOINT	1	1	1	
9-26	951503-0214	SPLIT PIN	1	1	1	
9-27	3B2Q62010-0	STEERING SHAFT ASSY	1	1	1	
9-28	3B2-62422-0	THRUST PLATE (UPPER) 22-44-2	2	2	2	
9-29	3B2-62415-0	O-RING 4.25-19.5	2	2	2	

Fig. 9


BRACKET • REVERSE LOCK

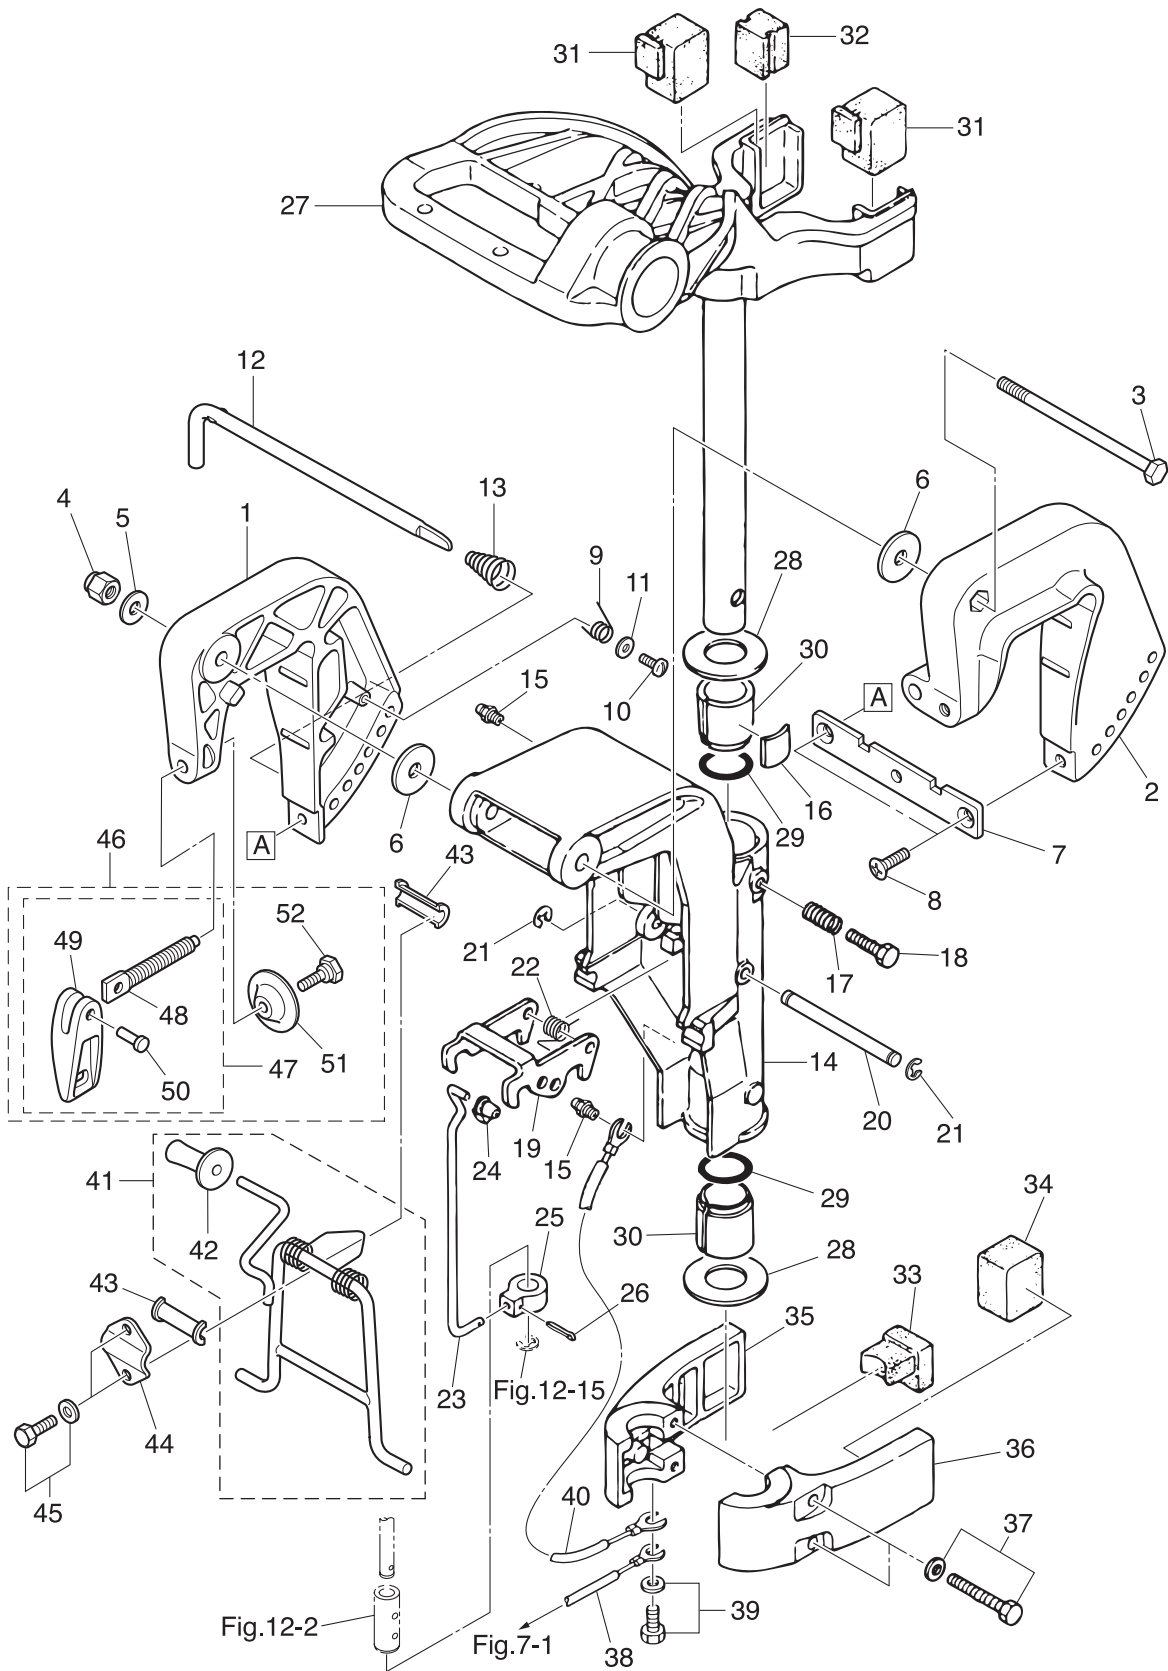

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
9-30	3B2-62417-0	BUSHING	2	2	2	
9-31	3B2-61301-0	RUBBER MOUNT (UPPER)	2	2	2	
9-32	3B2-61337-0	DAMPER (UPPER)	1	1	1	
9-33	3B2-61336-0	DAMPER (LOWER)	1	1	1	
9-34	3B2-61302-0	RUBBER MOUNT (LOWER)	2	2	2	
9-35	3K9Q61401-0	MOUNT BRACKET (R)	1	1	1	Starboard Side
9-36	3K9Q61402-0	MOUNT BRACKET (L)	1	1	1	Port Side
9-37	9101E3-5640	BOLT	2	2	2	
9-38	3A3-62396-1	GROUND L=110	1	1	1	Drive Shaft Housing -Mount Bracket
9-39	9101E3-5612	BOLT	1	1	1	
9-40	3A3-62396-1	GROUND L=110	1	1	1	Swivel Brack -Mount Bracket
9-41	3V1-62431-1	TILT STOPPER ASSY	1	1	1	
9-42	3AS-62433-0	* TILT STOPPER GRIP	1	1	1	
9-43	393-62437-1	BUSHING	2	2	2	
9-44	369-62439-1	SETTING PLATE	1	1	1	
9-45	9101E3-5612	BOLT	2	2	2	
9-46	3V1Q62105-0	CLAMP SCREW KIT	2	2	2	
9-47	3V1Q62108-0	* CLAMP SCREW ASSY	1	1	1	
9-48	3V1-62106-0	** CLAMP SCREW	1	1	1	
9-49	332Q62102-1	** CLAMP SCREW HANDLE	1	1	1	
9-50	3C8-62104-2	** RIVET 3-22	1	1	1	
9-51	332-62101-1	* CLAMP SCREW PAD	1	1	1	
9-52	3C8-62107-0	* SHOULDER BOLT	1	1	1	

Fig. 10


TILLER HANDLE (MF • EF MODEL)

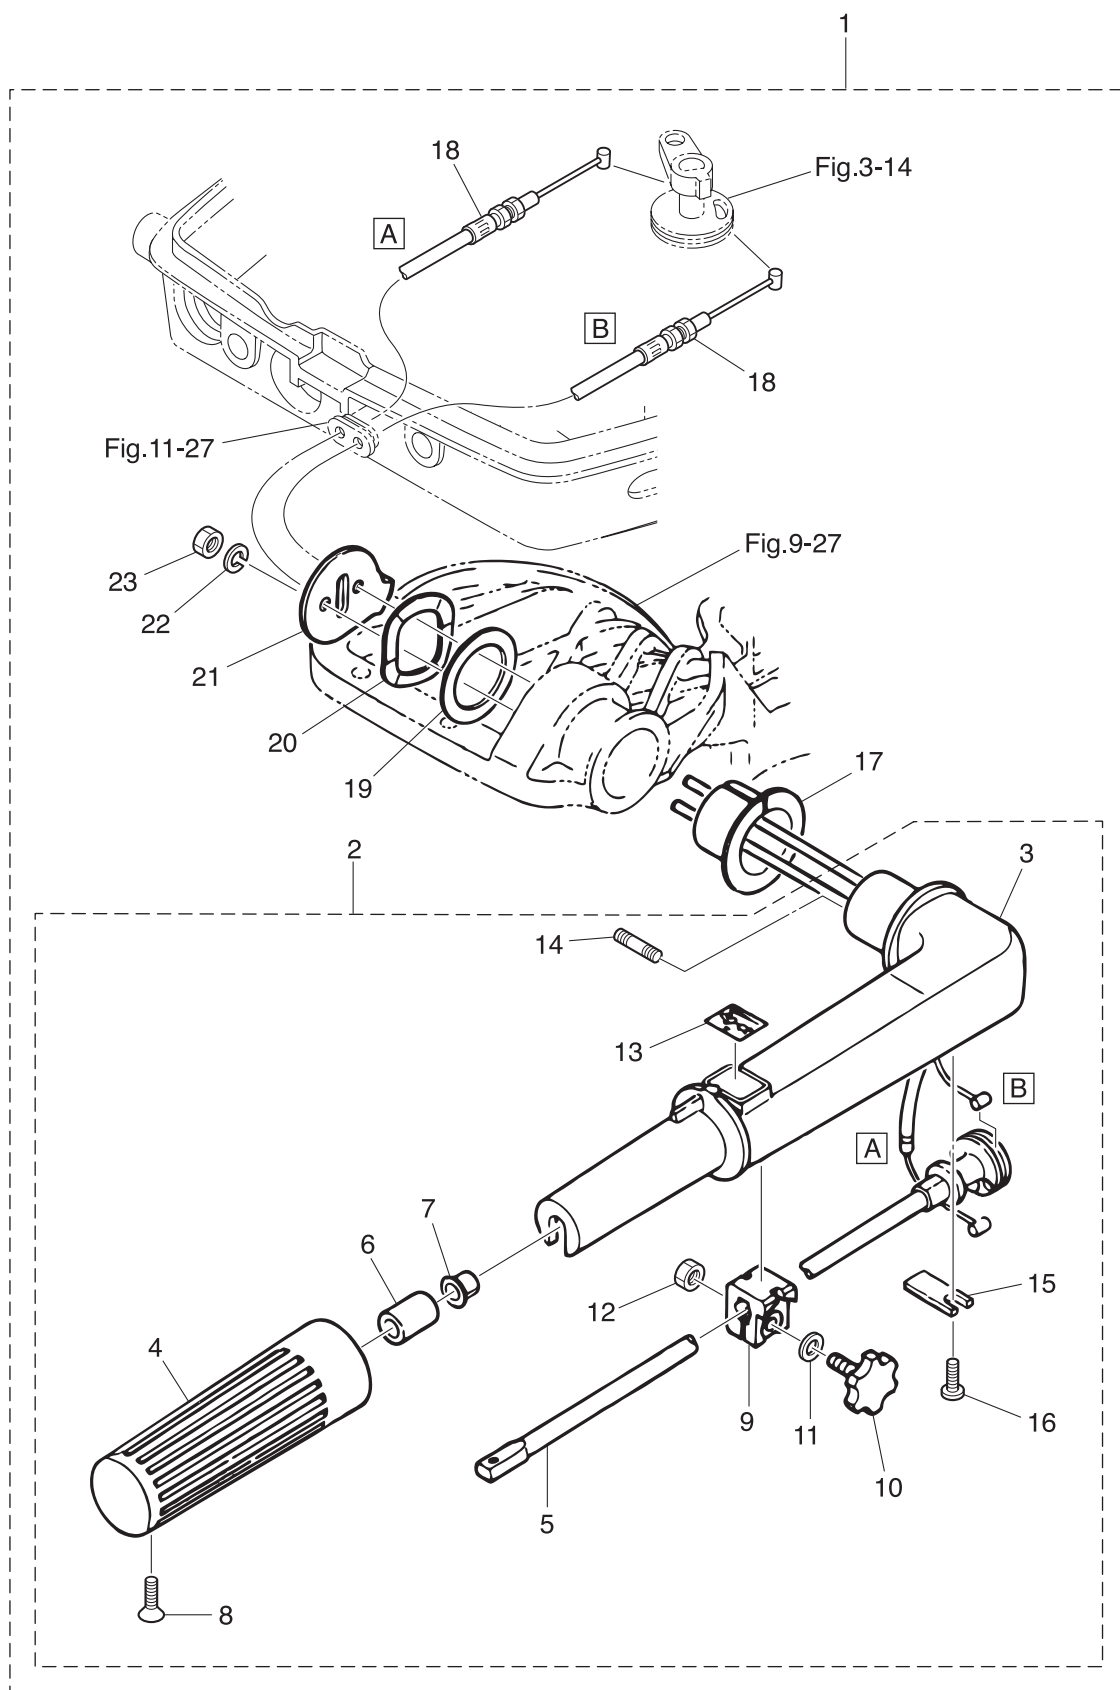

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
10-1	3B2Q63003-2	TILLER HANDLE ASSY	1	1	1	
10-2	3B2Q63005-2	* TILLER HANDLE SUB-ASSY	1	1	1	
10-3	3B2Q63011-1	** TILLER HANDLE	1	1	1	
10-4	350-63012-2	** GRIP	1	1	1	
10-5	3B2-63041-0	** THROTTLE SHAFT	1	1	1	
10-6	345-63048-0	** THROTTLE SHAFT DAMPER	1	1	1	
10-7	350-63046-0	** BUSHING 8.4-10-11	1	1	1	
10-8	920803-0518	** SCREW	1	1	1	
10-9	3B2-63035-1	** FRICTION PIECE	1	1	1	
10-10	3B2-63034-0	** ADJUSTING SCREW	1	1	1	
10-11	940103-0600	** WASHER	1	1	1	
10-12	930103-0600	** NUT	1	1	1	
10-13	369-72019-1	** THROTTLE DECAL	1	1	1	
10-14	3B2-63104-1	** STUD	2	2	2	
10-15	3B2-63063-0	** THROTTLE SHAFT SUPPORT	1	1	1	
10-16	9215E3-0612	** SCREW	1	1	1	
10-17	3B2-63102-0	* BUSHING	1	1	1	
10-18	3B2-63600-1	* THROTTLE WIRE	2	2	2	
10-19	3B2-63108-0	* WASHER 30-45-1	1	1	1	
10-20	3B2-63109-0	* WAVE WASHER 30-45-1.2	1	1	1	
10-21	3B2-63103-0	* STEERING HANDLE STOPPER	1	1	1	
10-22	941303-0600	* SPRING WASHER	2	2	2	
10-23	930103-0600	* NUT	2	2	2	

Fig. 11


BOTTOM COWL

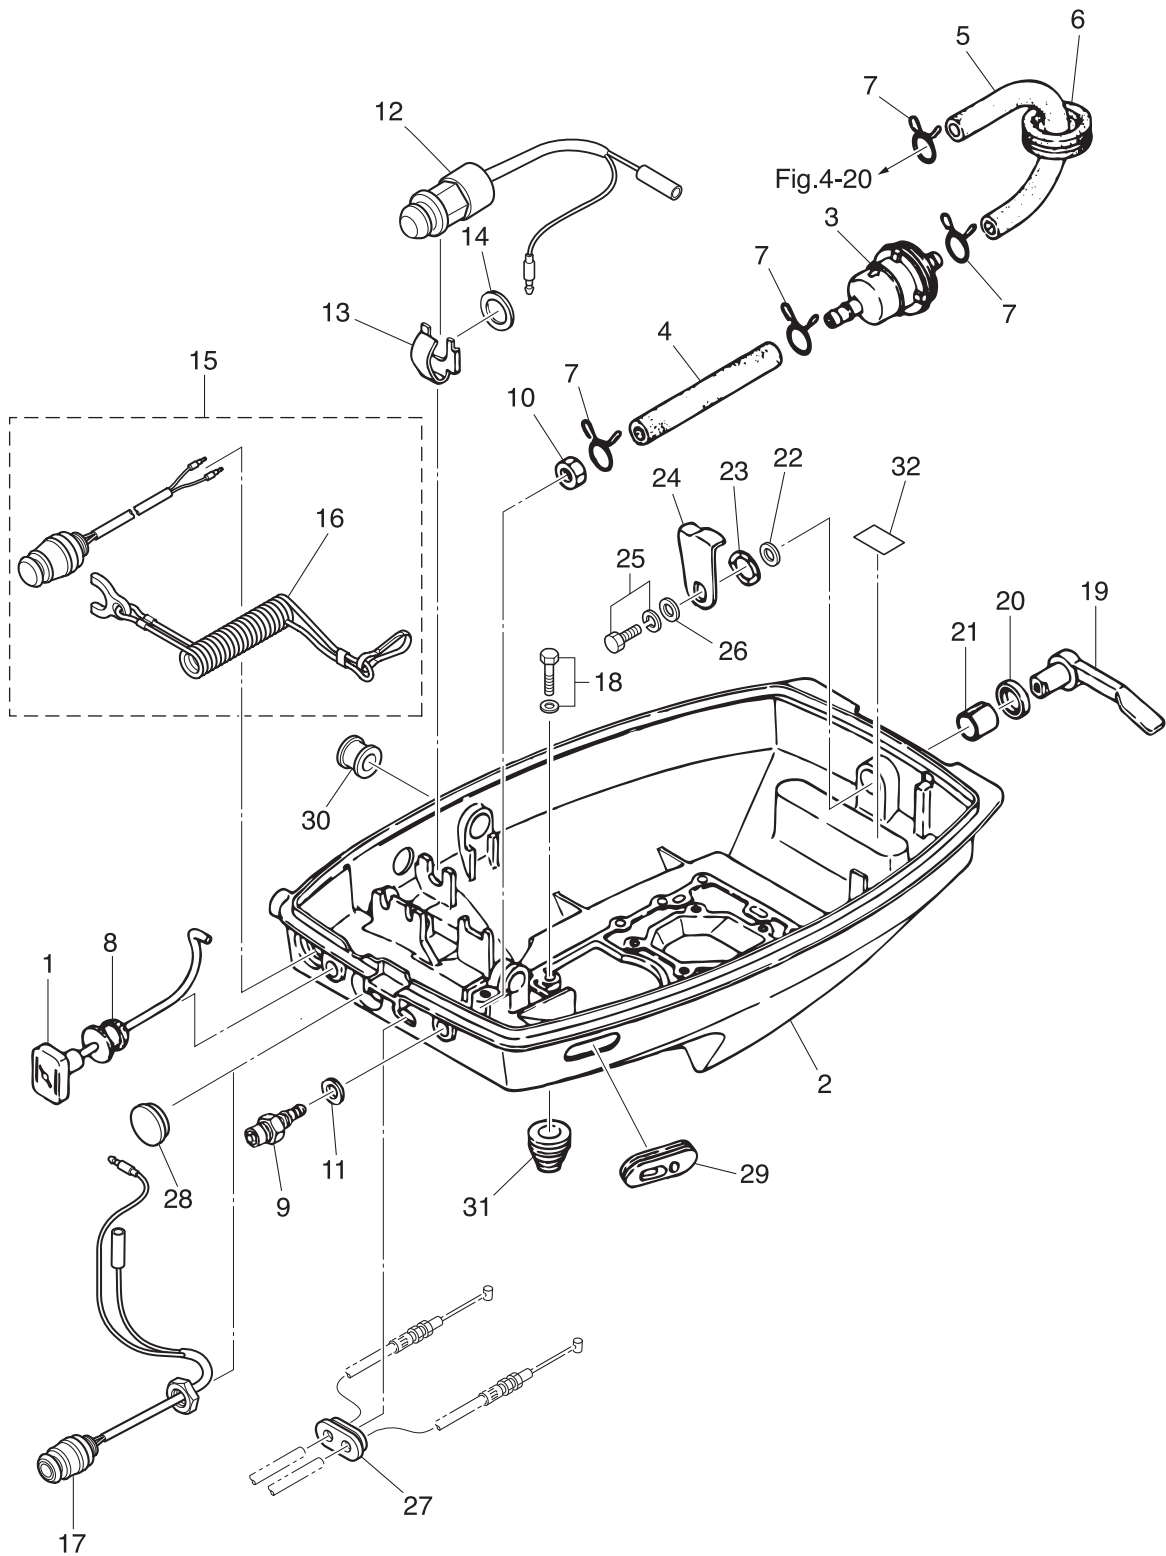

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
11-1	3B2-67151-0	CHOKE ROD	1	1	1	
11-2	3B2Q67100-1	BOTTOM COWL	1	1	1	
11-3	369-02230-0	FUEL FILTER ASSY	1	1	1	
11-4	98AB-50-075	HOSE	1	1	1	F/Connector-F/Filter 98AB-501000
11-5	3B2-02212-0	FUEL HOSE	1	1	1	Fuel Filter-Carburetor
11-6	345-76023-0	GROMMET 22-2.5	1	1	1	
11-7	338-02215-0	CLIP ϕ 10	4	4	4	
11-8	369-67104-0	CHOKE ROD BUSHING	1	1	1	
11-9	3B2-70260-1	FUEL CONNECTOR (MALE)	1	1	1	
11-10	332-70261-0	NUT 10-P1.25	1	1	1	
11-11	336-70112-0	GASKET 10.2-16-0.5	1	1	1	
11-12	398-76080-0	NEUTRAL SWITCH			1	for EF
11-13	398-76083-0	NEUTRAL SWITCH ACTUATOR			1	for EF
11-14	3B7-63731-0	WASHER 12.5-24-1			1	for EF
11-15	398-06830-0	STOP SWITCH ASSY	1	1	1	for MF/EF
11-16	353-06821-0	* STOP SWITCH LANYARD ASSY	1	1	1	for MF/EF
11-17	3B2-76026-1	MAIN SWITCH ASSY			1	for EF
11-18	9101E3-5620	BOLT	4	4	4	
11-19	369Q67141-1	HOOK LEVER	1	1	1	
11-20	338-67147-0	SEAL RING 13.8-22-3.7	1	1	1	
11-21	369-67105-0	HOOK LEVER BUSHING	1	1	1	
11-22	3C8-67146-0	WASHER 14-22-1	1	1	1	
11-23	941403-1400	WAVE WASHER d=14	1	1	1	
11-24	369-67142-0	COVER HOOK	1	1	1	
11-25	910103-6612	BOLT	1	1	1	
11-26	3C8-66308-0	WASHER 6-16-1.5	1	1	1	
11-27	3B2-63621-0	GROMMET	1	1	1	for MF/EF
11-28	345-67117-0	GROMMET 17-2.7		1	1	for EP
11-29	353-67162-0	GROMMET	1	1	1	

Fig. 11

BOTTOM COWL

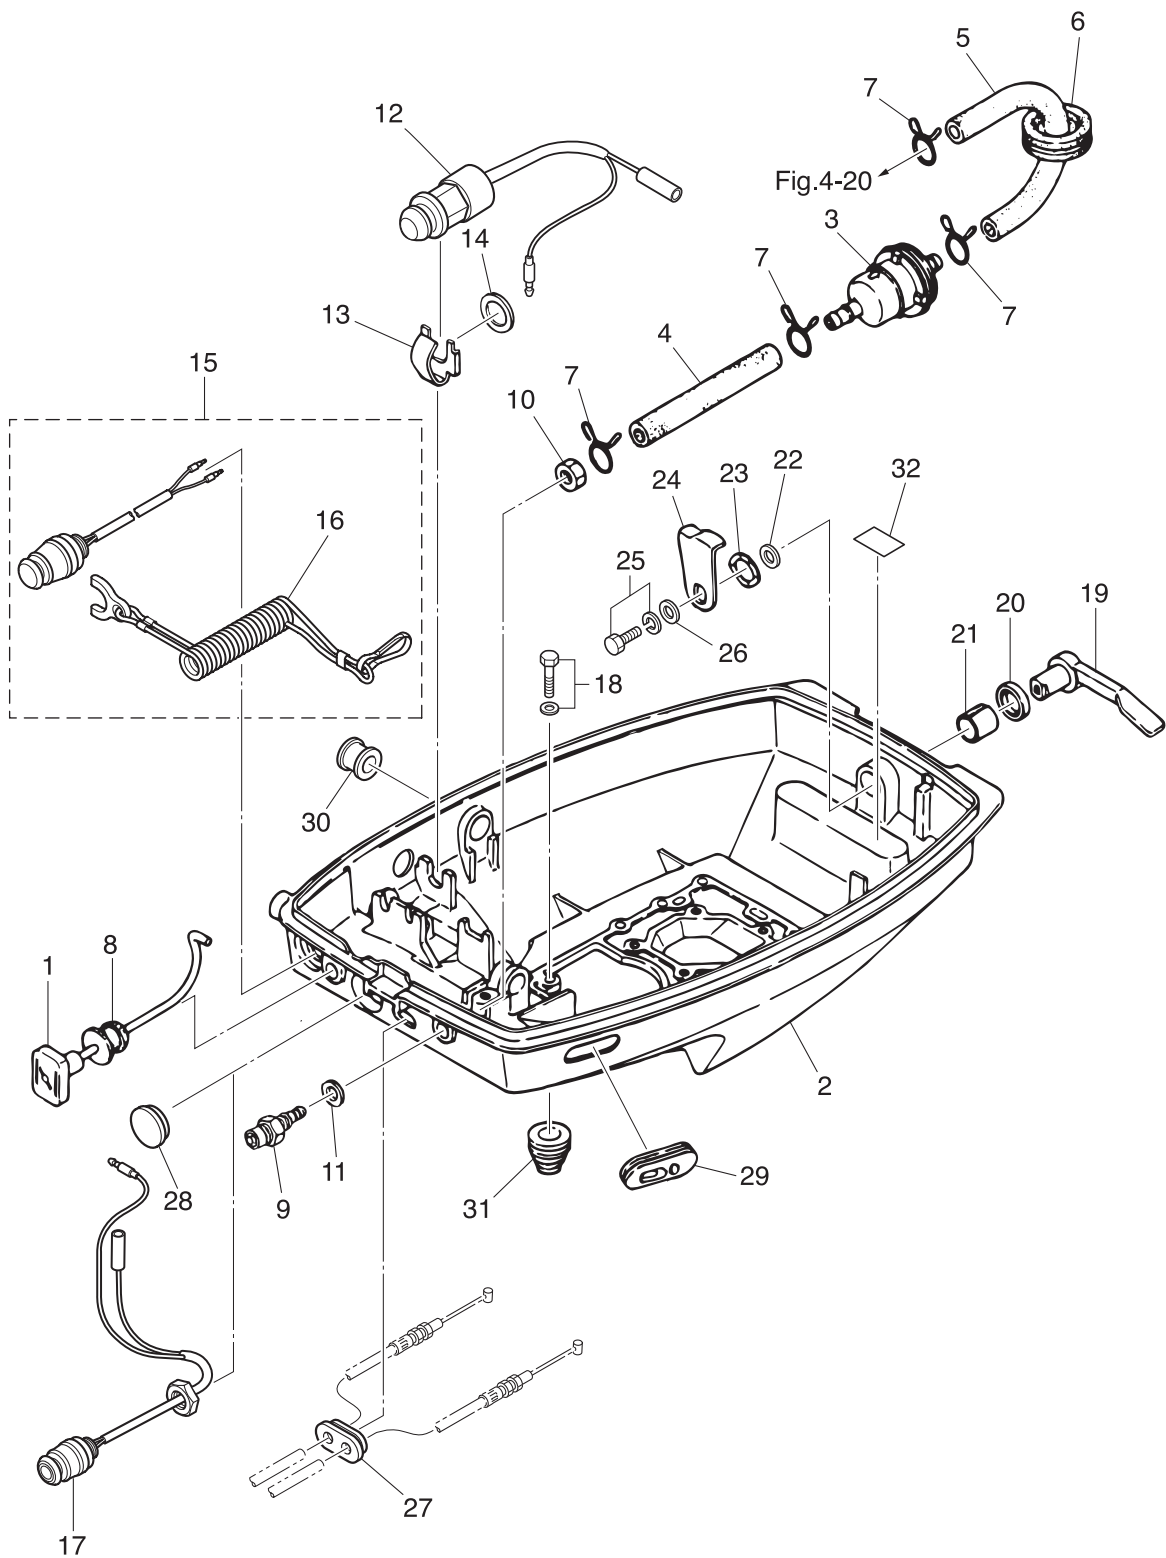


[illegible]

[illegible]

Fig. 13


REMOTE CONTROL

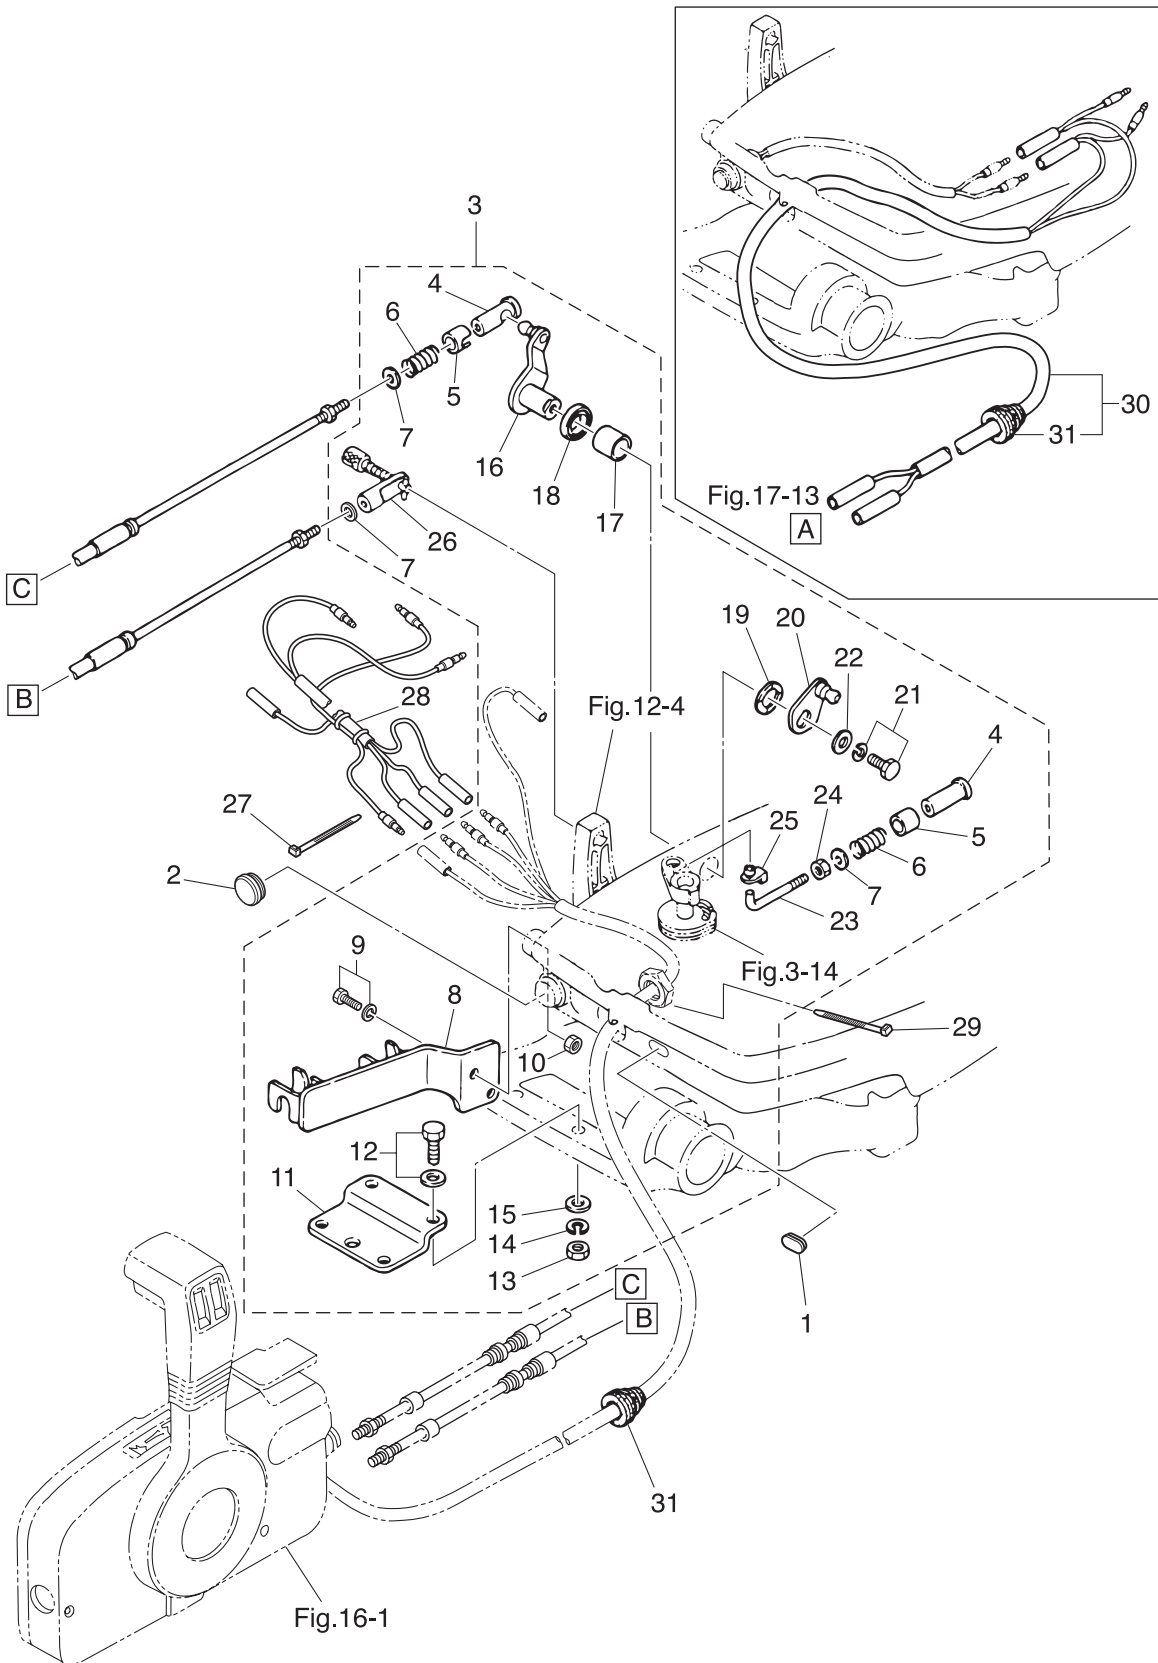

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
13-1	3B2-63624-0	GROMMET		1	1	for EP
13-2	345-67117-0	GROMMET 17-2.7		1	1	for EP
13-3	3B2-83880-3	REMOTE CONTROL FITTING ASSY		1	1	for EP
13-4	3A1-83722-0	* BALL JOINT HOLDER		2	2	
13-5	332-83723-0	* HOLDER CAP		2	2	
13-6	332-83724-0	* SPRING		2	2	
13-7	332-83725-0	* WASHER 5.5-14-1.2		3	3	
13-8	3B2-83820-0	* CABLE CLIP ASSY		1	1	
13-9	910103-6616	* BOLT		2	2	
13-10	930103-0600	* NUT		2	2	
13-11	369-83830-2	* STEERING HOOK PLATE		1	1	
13-12	910103-5830	* BOLT		2	2	
13-13	930103-0800	* NUT		2	2	
13-14	941303-0800	* SPRING WASHER		2	2	
13-15	940103-0800	* WASHER		2	2	
13-16	369-83726-0	* THROTTLE LEVER		1	1	
13-17	369-67105-0	* HOOK LEVER BUSHING		1	1	
13-18	338-67147-0	* SEAL RING 13.8-22-3.7		1	1	
13-19	941403-1400	* WAVE WASHERd=14		1	1	
13-20	3B2-83887-1	* THROTTLE LEVER		1	1	
13-21	910103-6612	* BOLT		1	1	
13-22	3C8-66308-0	* WASHER 6-16-1.5		1	1	
13-23	3B2-83863-1	* THROTTLE LEVER ROD		1	1	
13-24	3B2-83865-0	* NUT 10-32UNF		1	1	
13-25	345-05224-0	* ROD SNAP 5-2.5		1	1	
13-26	3A1-83710-1	* CABLE JOINT ASSY		1	1	
13-27	353-84398-0	BAND 100		1	1	for EP
13-28	3B2-76166-0	ASSIST CORD COMPLETE		1	1	for EP
13-29	353-84398-0	BAND 100		1	1	for EP


Fig. 13

REMOTE CONTROL

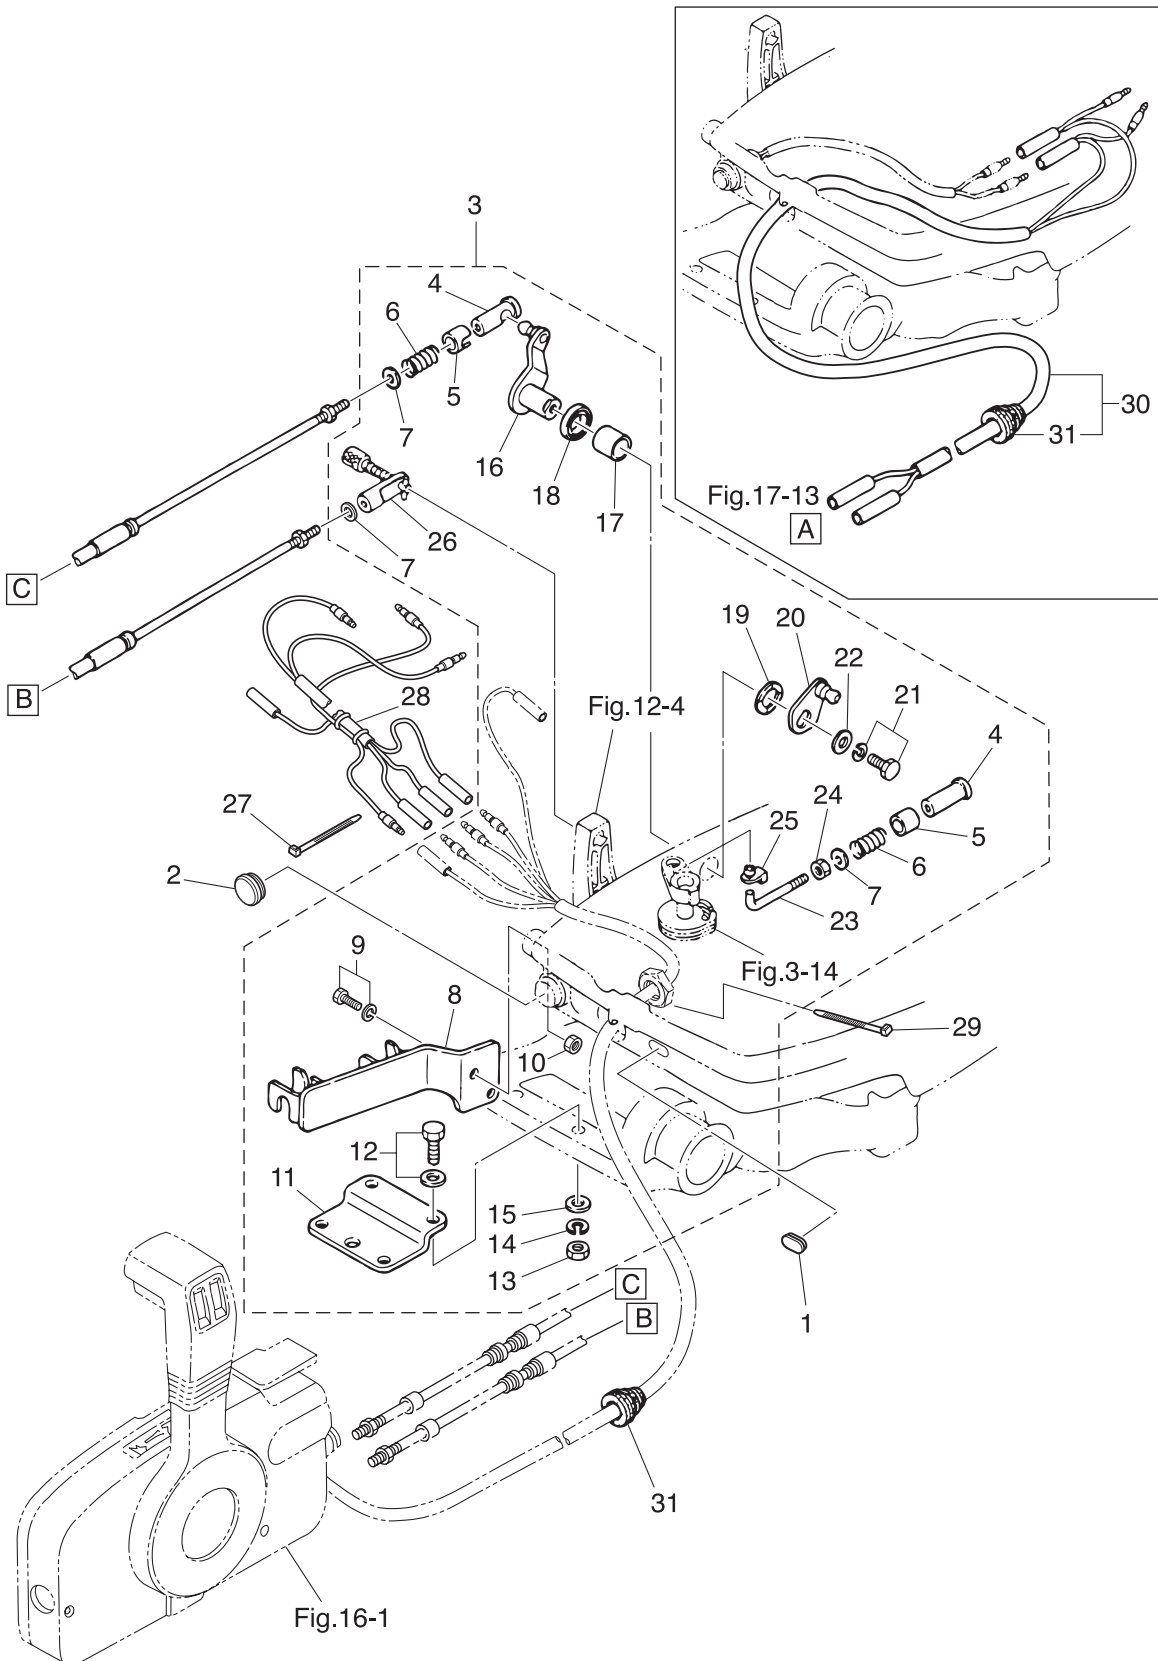


[illegible]

Fig. 14 TOP COWL

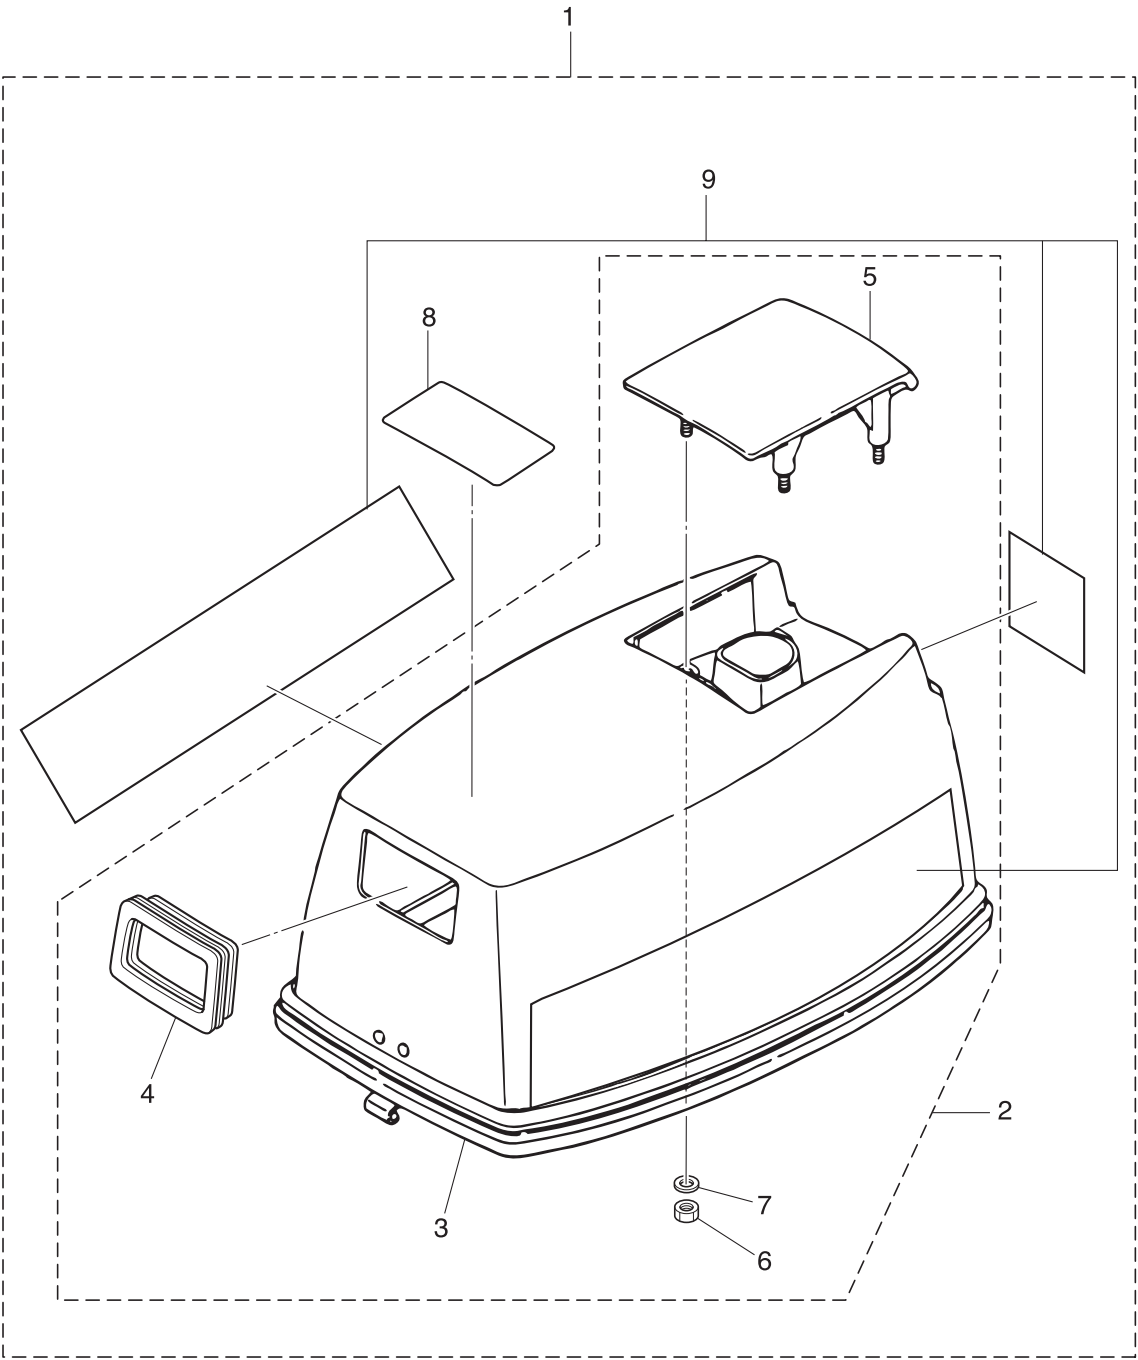

[illegible]


Fig. 15 FUEL TANK

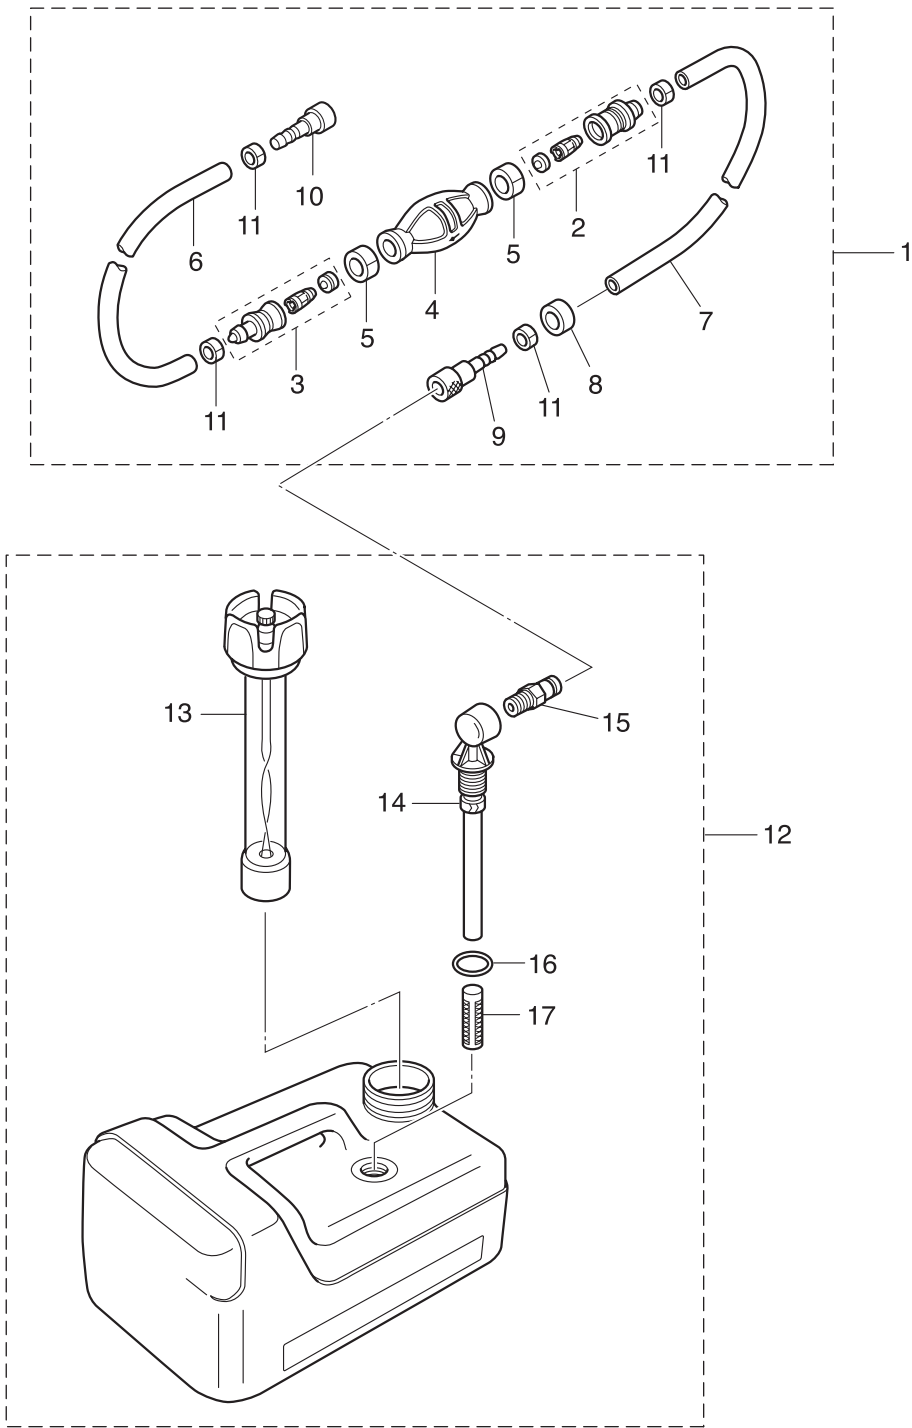

[illegible]

Fig. 16


COMPONENT PARTS OF REMOTE CONTROL

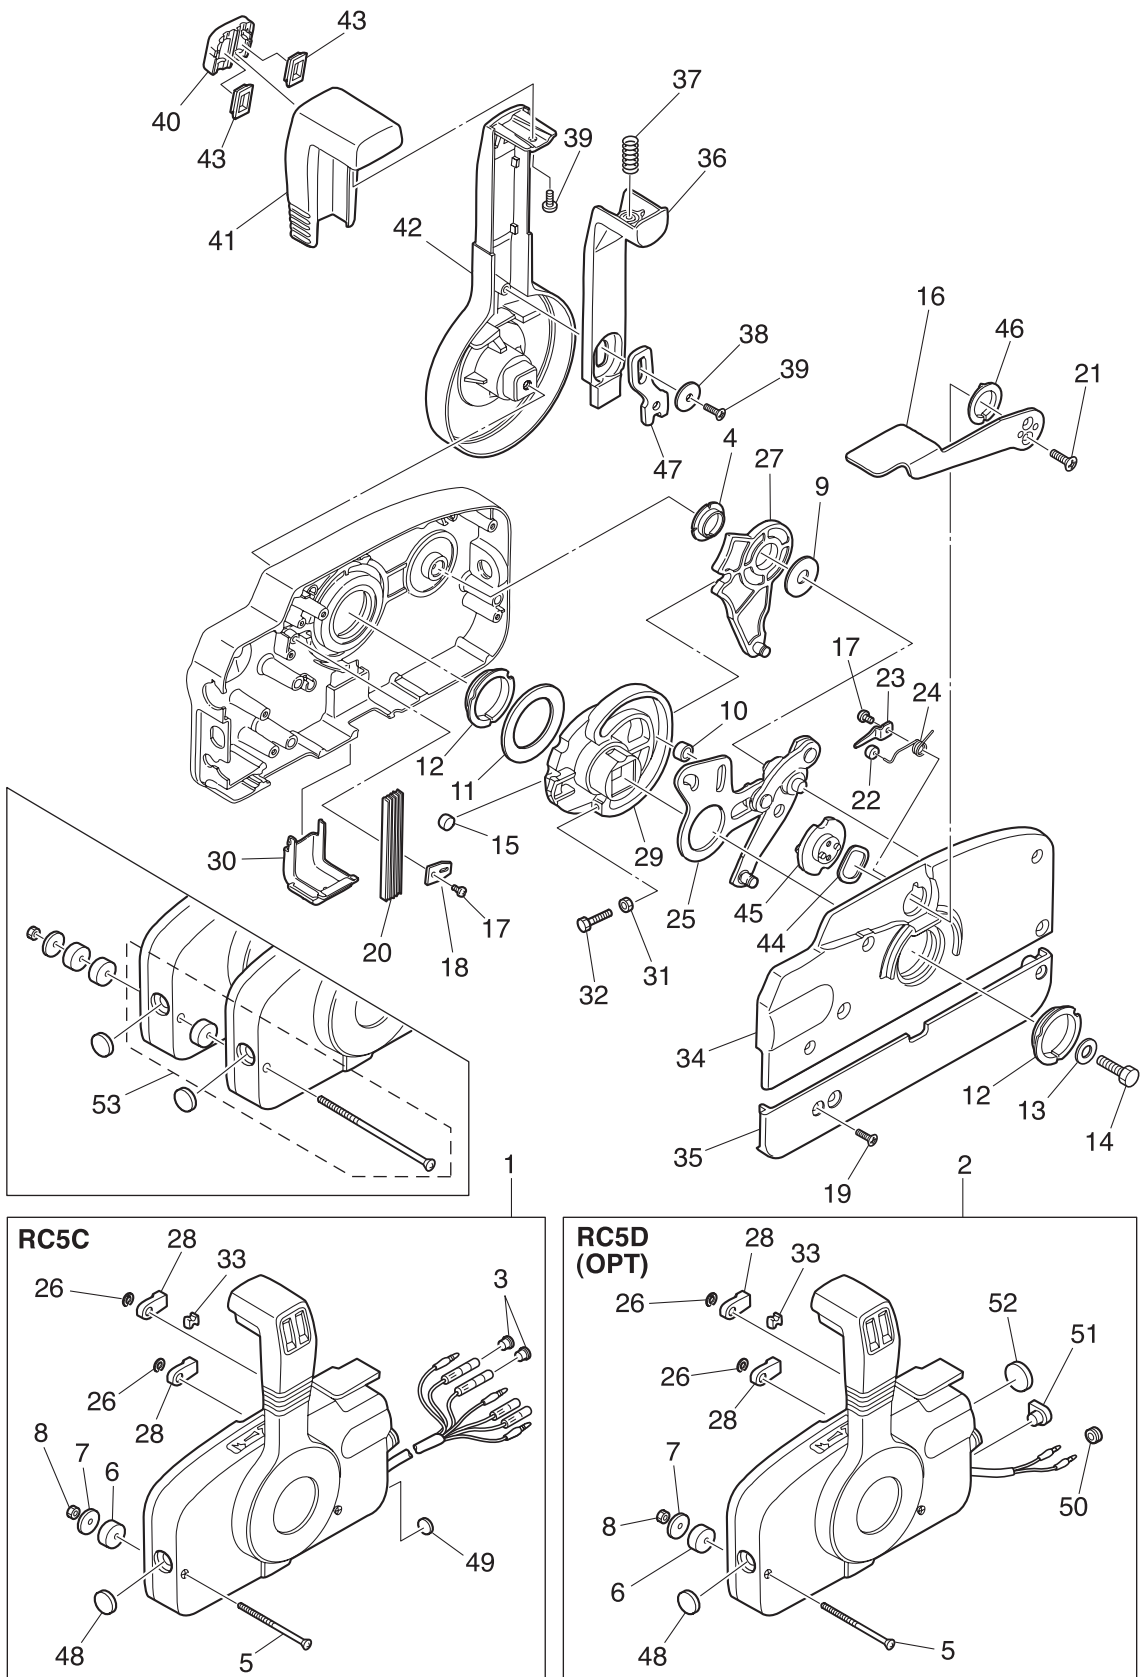

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
16-1	3B7Q84350-3	REMOTE CONTROL HEAD ASSY (RC5C)		1	1	RC5C for EP
16-2	3B7Q84360-1	REMOTE CONTROL HEAD ASSY (RC5D)	1	1	1	OPT RC5D for MF
16-3	3A3-76037-0	* CABLE TERMINAL PLUG		2	2	RC5C for EP
16-4	3A3-84432-0	* BUSHING		1	1	
16-5	3A3-84375-0	* SCREW		3	3	
16-6	3A3-84374-0	* SPACER		3	3	
16-7	353-84371-0	* WASHER		3	3	
16-8	930103-0600	* NUT		3	3	
16-9	3A3-84383-0	* WASHER		1	1	
16-10	3A3-84421-0	* ROLLER		1	1	
16-11	3A3-84422-0	* THRUST PLATE		1	1	
16-12	3A3-84431-0	* BUSHING		2	2	
16-13	940103-0800	* WASHER		1	1	
16-14	3A3-84442-0	* BOLT		1	1	
16-15	353-84388-0	* DETENT ROLLER		1	1	
16-16	3B7Q84312-0	* FREE THROTTLE LEVER		1	1	
16-17	921503-0406	* SCREW		2	2	
16-18	3A3-84423-0	* DETENT RETAINER		1	1	
16-19	921603-0518	* SCREW		5	5	
16-20	3A3-84307-0	* DETENT SPRING		5	5	
16-21	921603-0512	* SCREW		2	2	
16-22	3A3-84424-0	* FREE THROTTLE ROLLER		1	1	
16-23	3A3-84426-0	* ROLLER RETAINER		1	1	
16-24	3A3-84425-0	* FREE THROTTLE SPRING		1	1	
16-25	3A3-84365-1	* THROTTLE ARM		1	1	
16-26	945303-0600	* E-RING d=6		2	2	
16-27	3A3-84381-0	* SHIFT GEAR ASSY		1	1	
16-28	3A3-83314-2	* CABLE TERMINAL		2	2	
16-29	3A3-84364-2	* DRIVE GEAR		1	1	

Fig. 16


COMPONENT PARTS OF REMOTE CONTROL

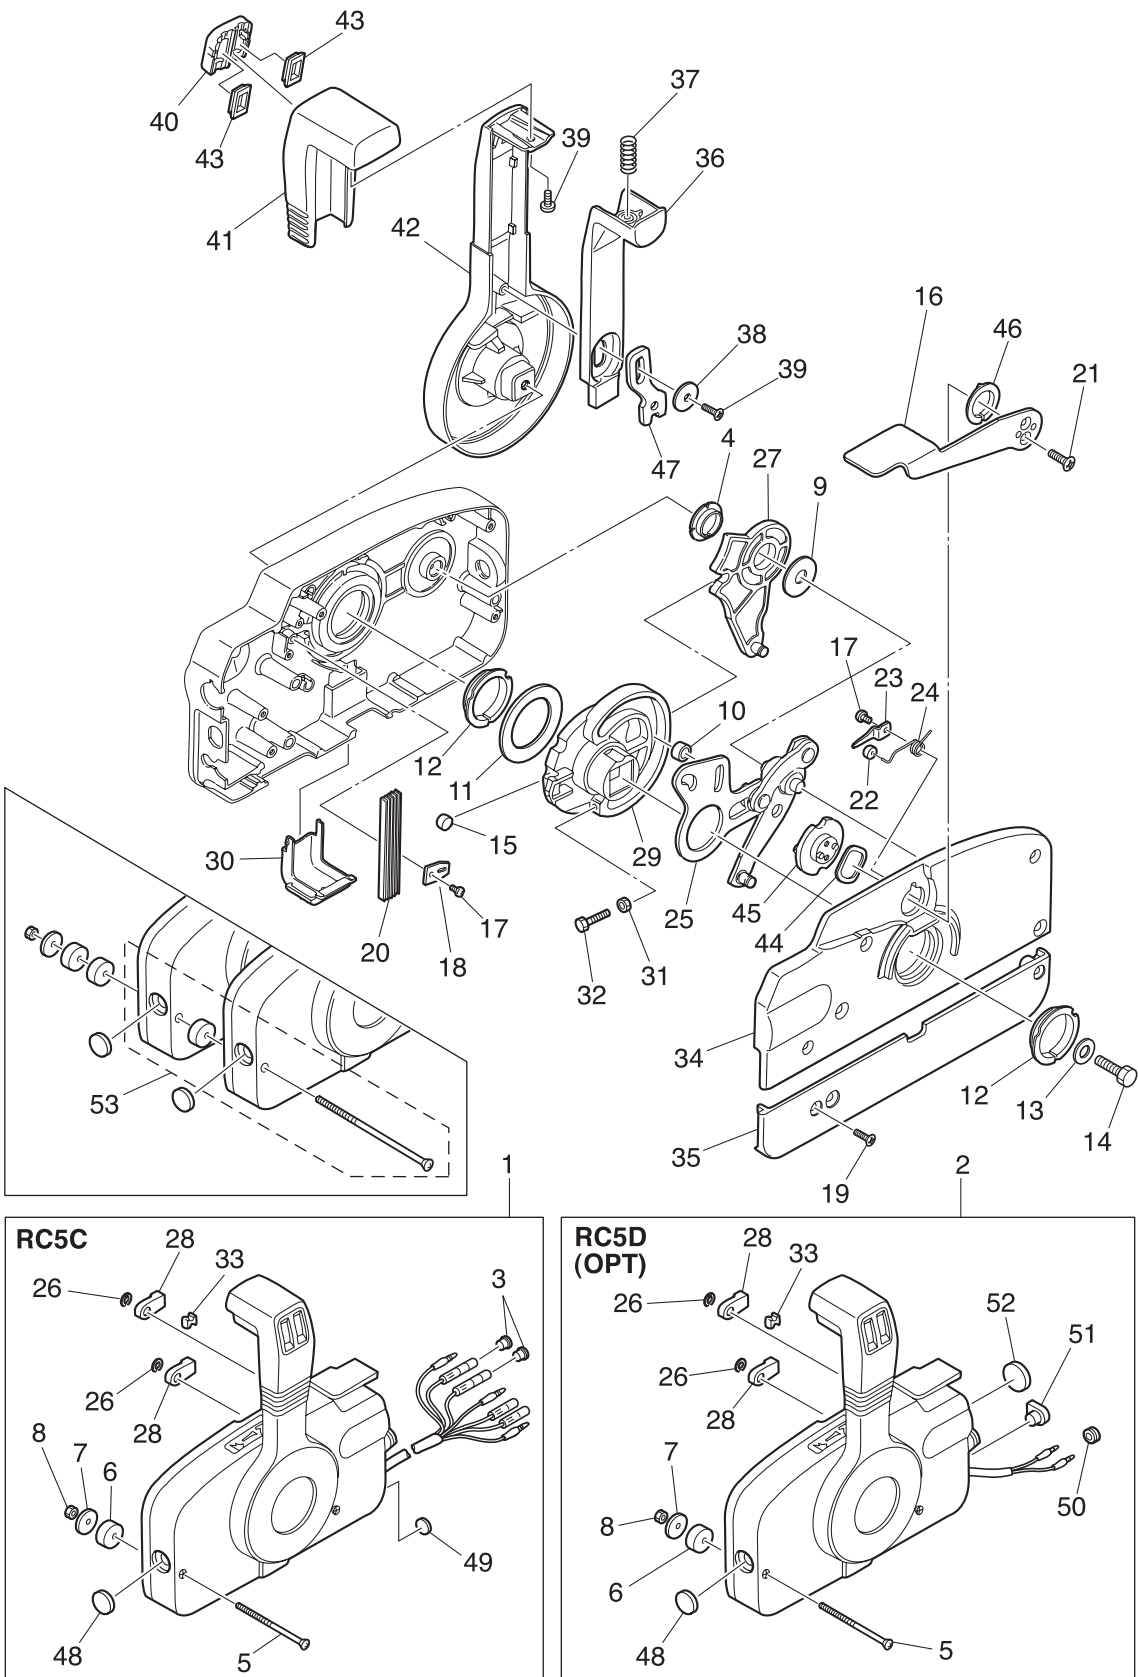

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
16-30	3A3-84429-0	* WIRE COVER		1	1	
16-31	930103-0500	* NUT		1	1	
16-32	910103-0525	* BOLT		1	1	
16-33	3A3-84376-0	* GROMMET		1	1	
16-34	3B7Q84441-0	* REAR HOUSING		1	1	
16-35	3B7Q84366-0	* REAR PANEL		1	1	
16-36	3A3-84401-0	* NEUTRAL LOCK ARM		1	1	
16-37	3A3-84403-0	* NEUTRAL LOCK SPRING		1	1	
16-38	3A3-84407-0	* WASHER		1	1	
16-39	921503-0510	* SCREW		2	2	
16-40	3A3-84451-0	* TILT SWITCH COVER		1	1	
16-41	3A3-84404-0	* GRIP		1	1	
16-42	3B7Q84343-0	* CONTROL LEVER		1	1	
16-43	3A3-84452-0	* TILT SWITCH PLUG		2	2	
16-44	3A3-84368-0	* WAVE WASHER		1	1	
16-45	3A3-84391-0	* FREE THROTTLE DRUM		1	1	
16-46	3A3-84435-0	* BUSHING		1	1	
16-47	3A3-84406-0	* PLATE		1	1	
16-48	361-84414-0	* GROMMET		1	1	
16-49	361-84415-0	* GROMMET		1	1	RC5C for EP
16-50	369-84418-0	* GROMMET	1	1	1	RC5D for MF
16-51	353-84321-0	* GROMMET	1	1	1	RC5D for MF
16-52	369-84416-0	* GROMMET	1	1	1	RC5D for MF
16-53	3A3-81301-0	TWIN REMOTE CONTROL KIT	1	1	1	for TwinOutboards

Fig. 17


COMPONENT PARTS OF REMOTE CONTROL (ELECTRIC PARTS)

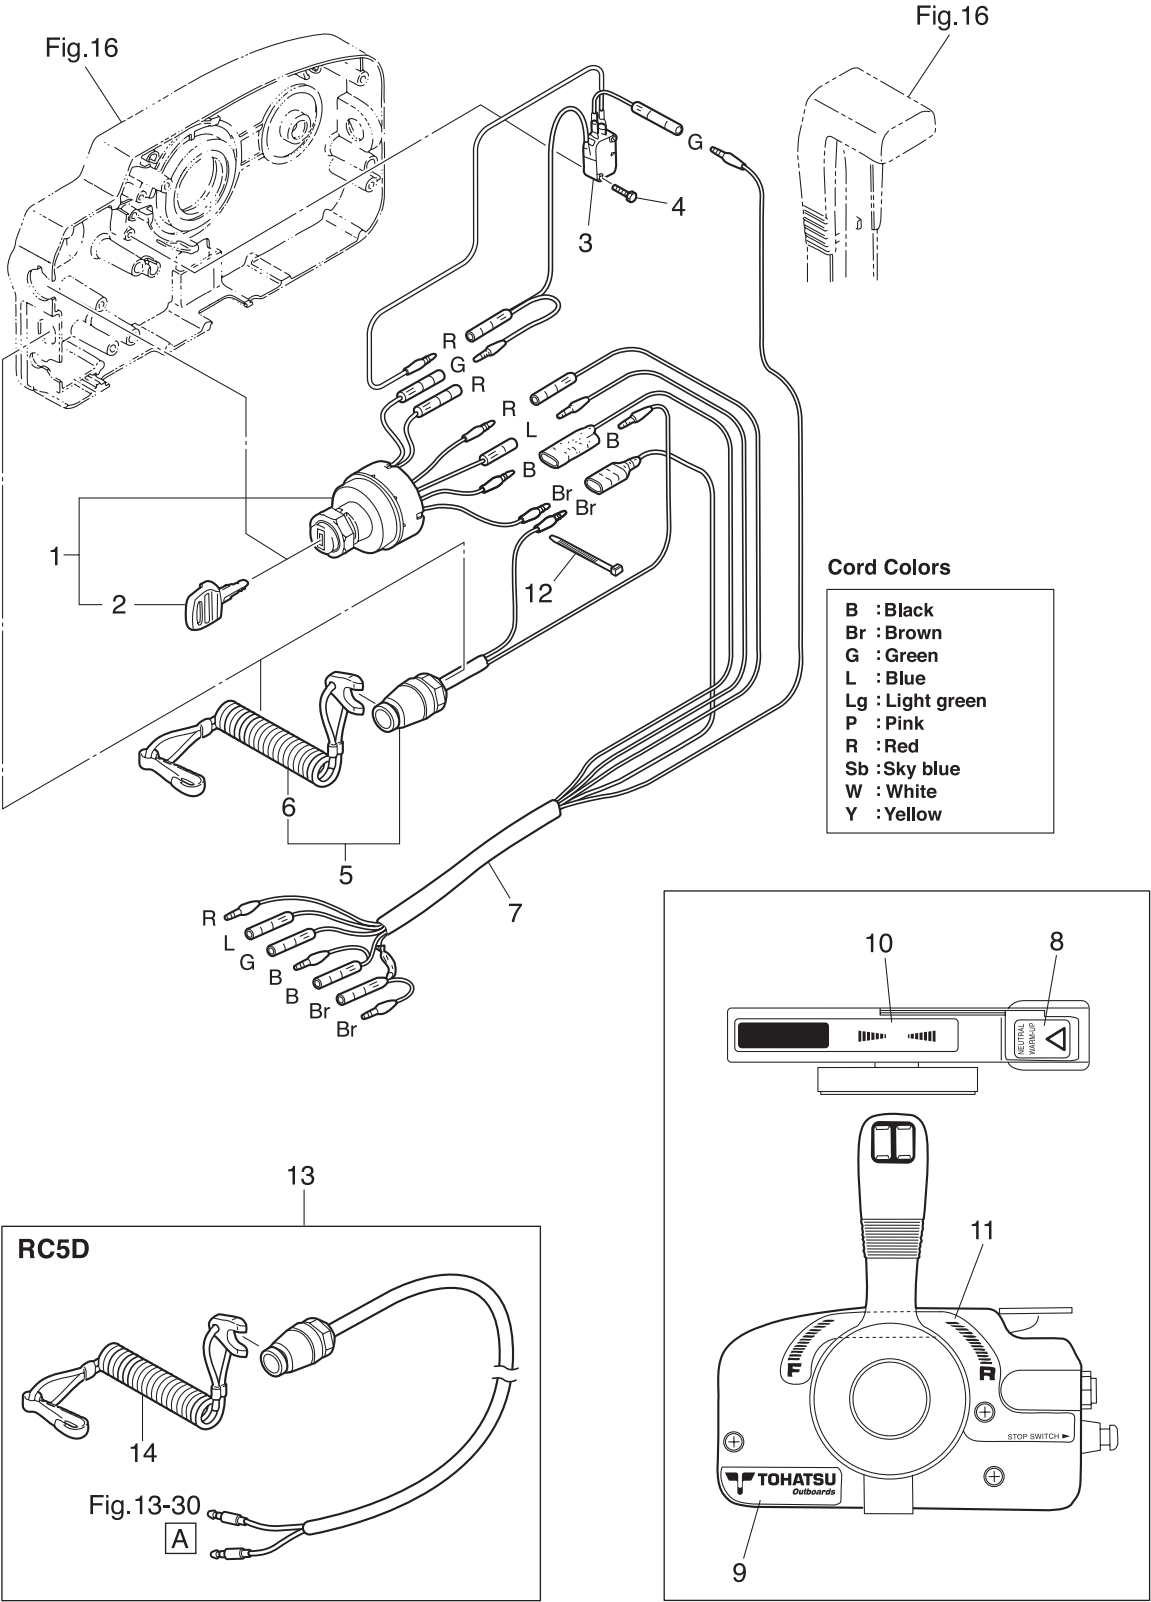

[illegible]

Fig. 18


OPTIONAL PARTS (ACCESSORIES)

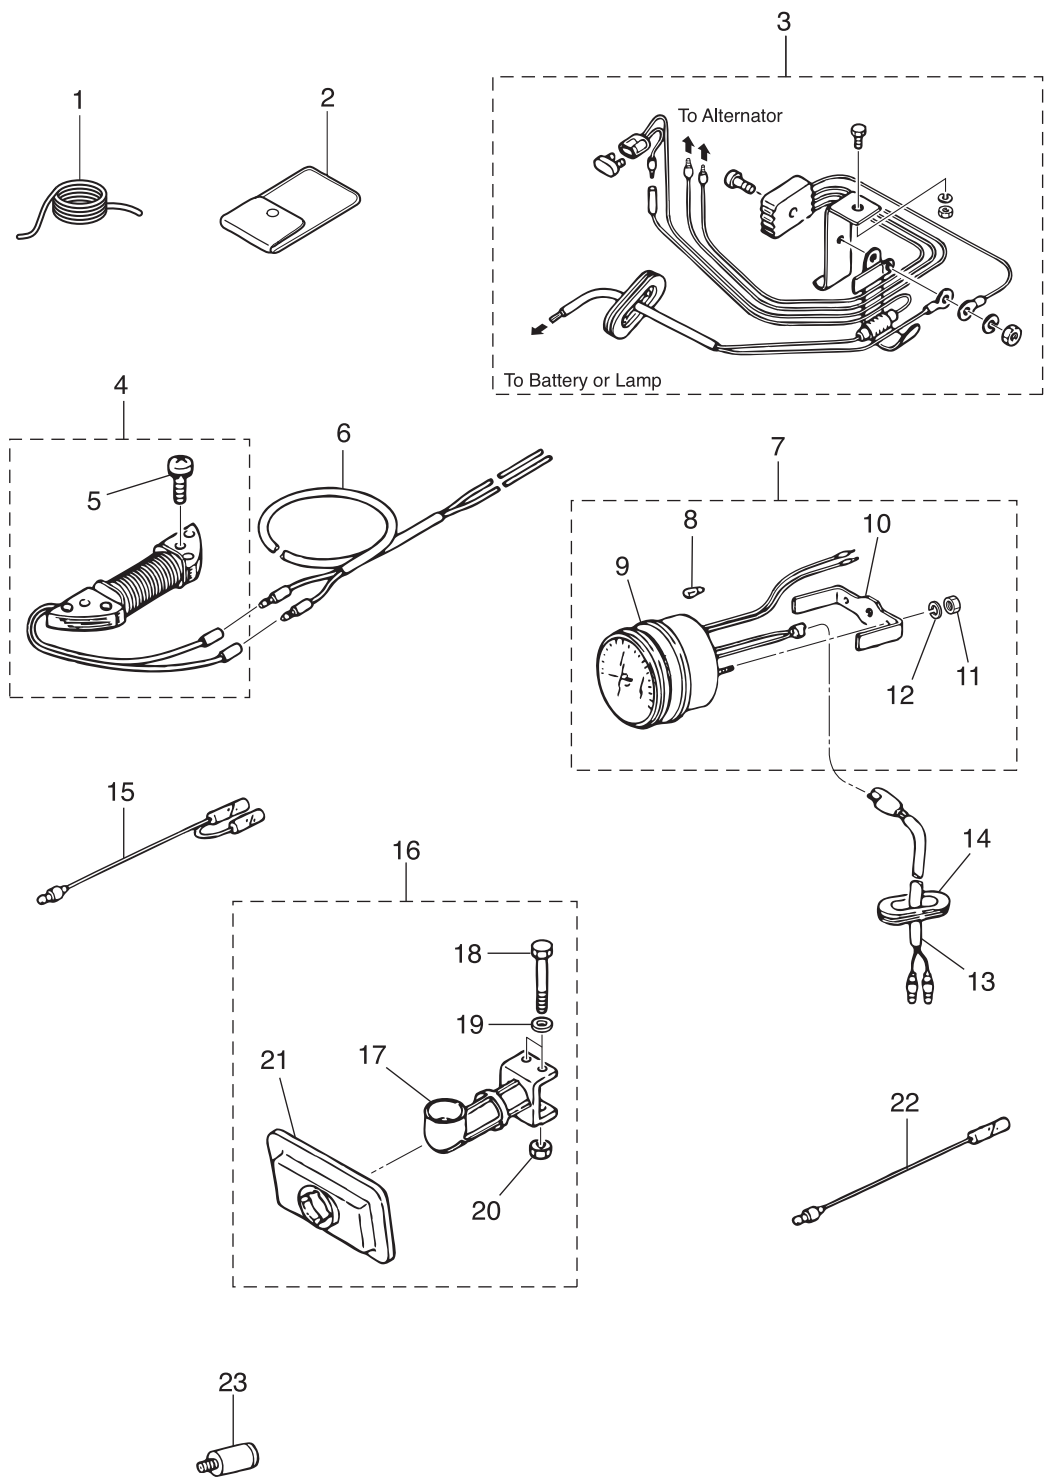

Ref.No.	Part No.	Description	Q'ty			Remarks
			M6B	M8B	M9.8B	
18-1	312-72201-0	SAFETY ROPE ϕ 4-1000	1	1	1	
18-2	369-72100-0	TOOL KIT	1	1	1	
18-3	346-76160-2	RECTIFIER KIT	1	1	1	for MF
18-4	3B2-06128-0	ALTERNATOR KIT	1	1	1	for MF
18-5	921521-6625	* SCREW	2	2	2	
18-6	369-76167-0	EXTENSION CORD (LIGHT) L=2000	1	1	1	for MF
18-7	3B7-72530-2	TACHOMETER ASSY	1	1	1	
18-8	3B7-72659-0	* METER BULB 12V-1.8W	1	1	1	
18-9	3B7-72656-0	* METER DAMPER	1	1	1	
18-10	3B7-72661-0	* FITTING PLATE	1	1	1	
18-11	930103-0500	* NUT	2	2	2	
18-12	941303-0500	* SPRING WASHER	2	2	2	
18-13	361-72539-0	TACHOMETER LEAD WIRE L=6000	1	1	1	
18-14	345-67169-0	GROMMET	1	1	1	
18-15	1 361-72543-0	SEPARATE CORD	1	1	1	Yellow
18-15	2 361-72542-0	SEPARATE CORD	1	1	1	White
18-16	3B2B05180-0	VERTICAL STARTER KIT	1	1	1	
18-17	3B2B05911-0	* VERTICAL STARTER GUIDE	1	1	1	
18-18	9101F4-0654	* BOLT	2	2	2	
18-19	940103-0600	* WASHER	2	2	2	
18-20	930103-0600	* NUT	2	2	2	
18-21	3B2-05912-0	* SEAL	1	1	1	
18-22	1 3B2-76097-0	LEAD WIRE		1	1	Brown for EP
18-22	2 3B2-76098-0	LEAD WIRE		1	1	Black for EP
18-23	336-60007-0	FLUSHING PLUG	1	1	1	

Fig. 19


ASSEMBLY • KIT PARTS

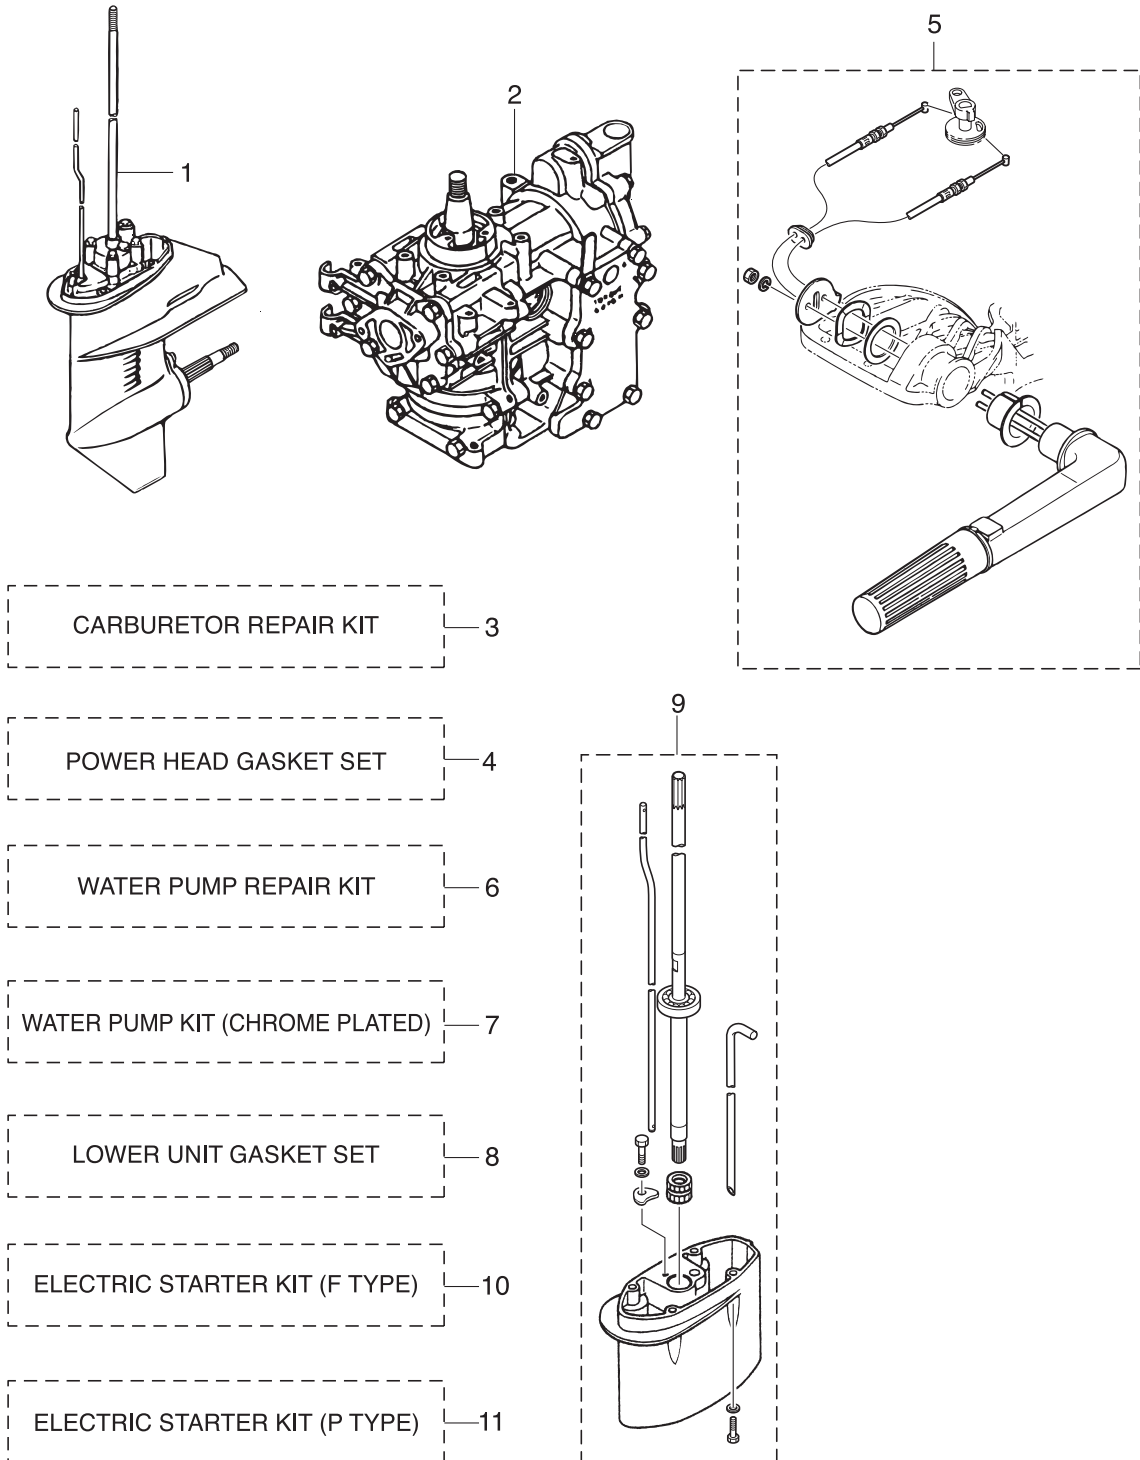

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
19-1	1	3B2Q87301-7	LOWER UNIT ASSY (S)	1	1	1	for Transom "S"
19-1	2	3B2Q87302-7	LOWER UNIT ASSY (L)	1	1	1	for Transom "L"
19-1	3	3B2Q87304-7	LOWER UNIT ASSY (UL)		1	1	for Transom "UL"
19-2	1	3B2B87090-7	ENGINE SHORT BLOCK KIT	1	1		for M8B, M6B
19-2	2	3K9B87090-6	ENGINE SHORT BLOCK KIT			1	for M9.8B
19-3	1	3B2-87122-0	CARBURETOR REPAIR KIT	1	1	1	
19-3	2	369-02011-0	* CARBURETOR GASKET	1	1	1	
19-3	3	369-03222-0	* FLOAT CHAMBER O-RING	1	1	1	
19-3	4	369-03293-1	* GASKET	1	1	1	
19-3	5	922503-6414	* SCREW	4	4	4	
19-3	6	369-03231-0	* FLOAT	1	1	1	
19-3	7	346-03232-0	* FLOAT ARM PIN	1	1	1	
19-3	8	3R3-03239-0	* FLOAT VALVE ASSY	1	1	1	Valve Pin
19-3	9	344-03244-0	* CLIP	1	1	1	
19-3	10	3F3-03234-0	* SCREW	1	1	1	
19-3	11	346-03256-0	* RUBBER CAP	1	1	1	
19-3	12	369-03303-0	* DIAPHRAGM A	1	1	1	
19-3	13	369-03306-0	* DIAPHRAGM B	1	1	1	
19-3	14	922553-6423	* SCREW	4	4	4	
19-3	15	369-03302-0	* PUMP COVER GASKET	1	1	1	
19-3	16	369-03307-0	* PUMP BODY GASKET	1	1	1	
19-3	17	369-03182-0	* CARBURETOR COVER GASKET	1	1	1	
19-3	18	369-03183-0	* CARBURETOR COVER GASKET	1	1	1	
19-3	19	369-03186-0	* SCREW	2	2	2	
19-4	1	3B2-87121-4	POWER HEAD GASKET SET	1	1		for M8B, M6B
19-4	2	3K9-87121-4	POWER HEAD GASKET SET			1	for M9.8B

Fig. 19


ASSEMBLY • KIT PARTS

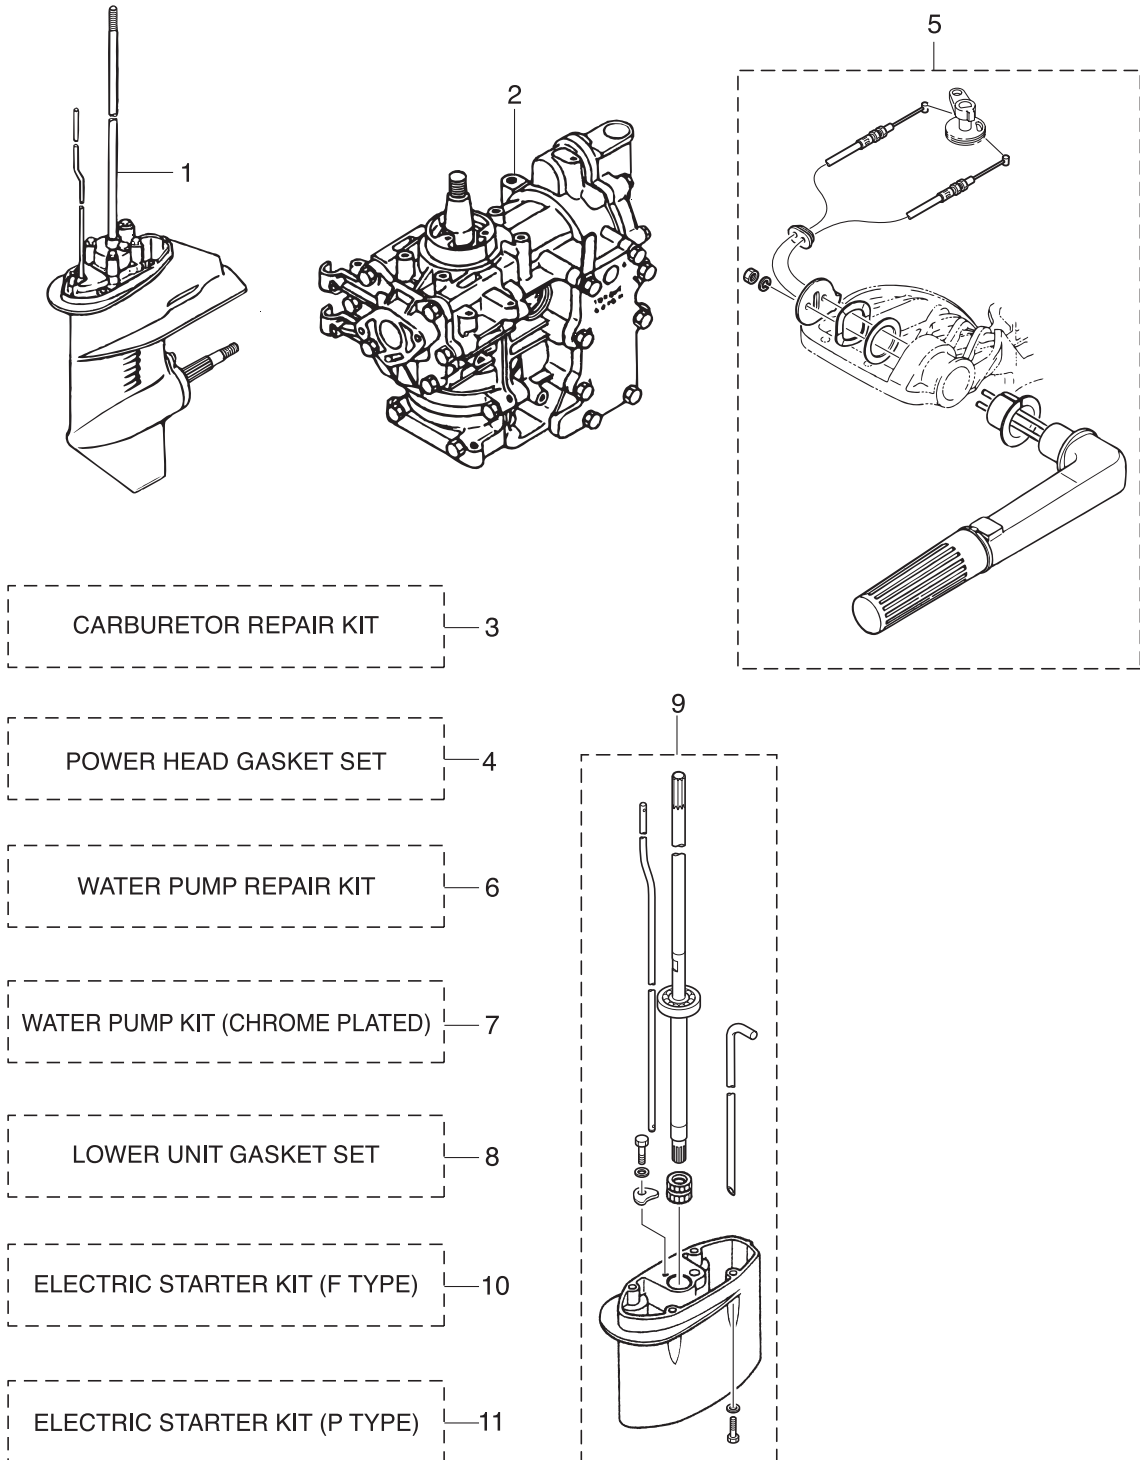

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
19-4	3	3B2-01005-1	* CYLINDER HEAD GASKET	1	1	1	
19-4	4	3B2-02305-2	* EXHAUST COVER GASKET	2	2		for M8B, M6B
19-4	5	3K9-02305-2	* EXHAUST COVER GASKET			2	for M9.8B
19-4	6	3B2-01214-1	* CRANKCASE HEAD GASKET	1	1	1	
19-4	7	3B2-01215-0	* OIL SEAL 12-28-5	2	2	2	Crankcase Head
19-4	8	3B2-00122-1	* OIL SEAL 20-40-7	1	1	1	Crankshaft (Lower)
19-4	9	3B2-01303-2	* ENGINE BASEMENT GASKET	1	1	1	
19-4	10	101-00121-0	* OIL SEAL 20-35-7	1	1	1	Crankshaft (Upper)
19-4	11	3B2-02104-1	* INTAKE MANIFOLD GASKET	1	1	1	
19-4	12	3B2-02105-1	* INTAKE MANIFOLD GASKET	1	1	1	
19-4	13	369-02011-0	* CARBURETOR GASKET	1	1	1	
19-5	1	3B2Q63000-2	TILLER HANDLE KIT	1	1	1	for EP⇒EF
19-5	2	3B2Q63003-2	* TILLER HANDLE ASSY	1	1	1	
19-5	3	3B2-63621-0	* GROMMET	1	1	1	
19-5	4	345-67117-0	* GROMMET 17-2.7	1	1	1	
19-5	5	353-67162-0	* GROMMET	1	1	1	
19-5	6	3B2-67187-0	* GROMMET	1	1	1	
19-6	1	3B2-87322-2	WATER PUMP REPAIR KIT	1	1	1	
19-6	2	3B2-65021-1	* WATER PUMP IMPELLER	1	1	1	
19-6	3	3B2-65022-0	* KEY ϕ 3-11	1	1	1	
19-6	4	3B2-65011-0	* PUMP CASE LINER	1	1	1	
19-6	5	3B2-65025-0	* WATER PUMP GUIDE PLATE	1	1	1	
19-6	6	3B2-65018-2	* PUMP CASE GASKET	1	1	1	
19-6	7	3B2-65029-2	* GUIDE PLATE GASKET	1	1	1	
19-6	8	9161E3-0650	* BOLT	4	4	4	
19-6	9	940103-0600	* WASHER	4	4	4	
19-6	10	3B2-65020-1	* PUMP CASE GASKET (LOWER)	1	1	1	

Fig. 19


ASSEMBLY • KIT PARTS

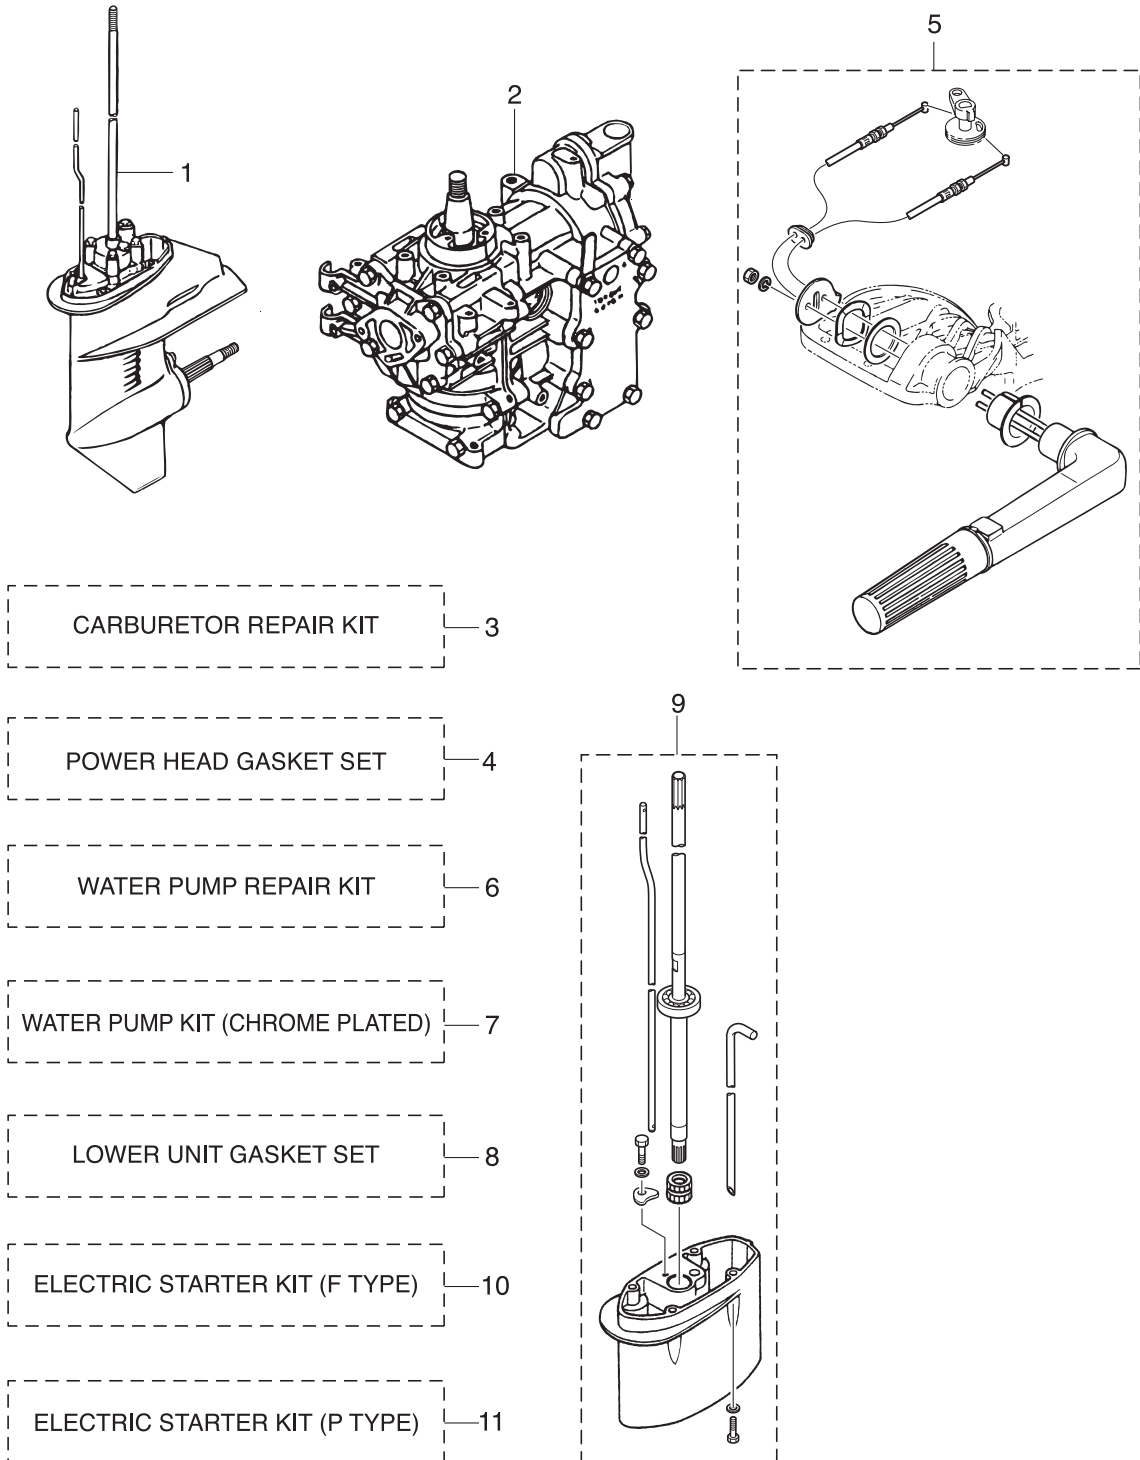

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
19-7	1	3B2-65231-2	WATER PUMP KIT (CHROME PLATED)	1	1	1	
19-7	2	3B2-65021-1	* WATER PUMP IMPELLER	1	1	1	
19-7	3	3B2-65238-0	* PUMP CASE LINER	1	1	1	Chrome Plated
19-7	4	3B2-65239-0	* WATER PUMP GUIDE PLATE	1	1	1	Chrome Plated
19-7	5	3B2-65018-2	* PUMP CASE GASKET	1	1	1	
19-7	6	3B2-65029-2	* GUIDE PLATE GASKET	1	1	1	
19-8	1	3B2-87321-4	LOWER UNIT GASKET SET	1	1	1	
19-8	2	3B2-61012-2	* DRIVE SHAFT HOUSING GASKET	1	1	1	
19-8	3	332-60006-0	* GASKET 8.1-15-1	3	3	3	
19-8	4	345-65015-0	* O-RING 3.2-47	1	1	1	Propeller Shaft Housing
19-8	5	369-60111-0	* OIL SEAL 15-28-10	1	1	1	Propeller Shaft
19-8	6	3B2-02312-2	* EXHAUST PIPE GASKET	1	1	1	
19-8	7	3B2-65018-2	* PUMP CASE GASKET	1	1	1	
19-8	8	3B2-65029-2	* GUIDE PLATE GASKET	1	1	1	
19-8	9	3B2-65020-1	* PUMP CASE GASKET (LOWER)	1	1	1	
19-8	10	309-60111-0	* OIL SEAL 12-24-8	1	1	1	Pump Case (Lower)
19-8	11	369-66021-1	* O-RING 2.5-4.9	1	1	1	Cam Rod
19-8	12	332-66032-0	* O-RING 2.4-15.4	1	1	1	Cam Rod Bushing
19-9	1	3B2Q87314-3	EXTENSION HOUSING KIT (UL)	1	1	1	for Transom "L"⇒"UL"
19-9	2	3B2Q61110-2	* EXTENSION HOUSING	1	1	1	
19-9	3	9101E3-5635	* BOLT	4	4	4	
19-9	4	3B2-60003-1	* DRIVE SHAFT BUSHING	1	1	1	
19-9	5	3V1-64332-0	* STOPPER	1	1	1	
19-9	6	9101E3-5612	* BOLT	2	2	2	
19-9	7	3B2-64309-1	* DRIVE SHAFT ASSY (UL)	1	1	1	
19-9	8	3B2-65120-0	* WATER PIPE (UL)	1	1	1	
19-9	9	3B2-66014-0	* CAM ROD (UL)	1	1	1	

Fig. 19


ASSEMBLY • KIT PARTS

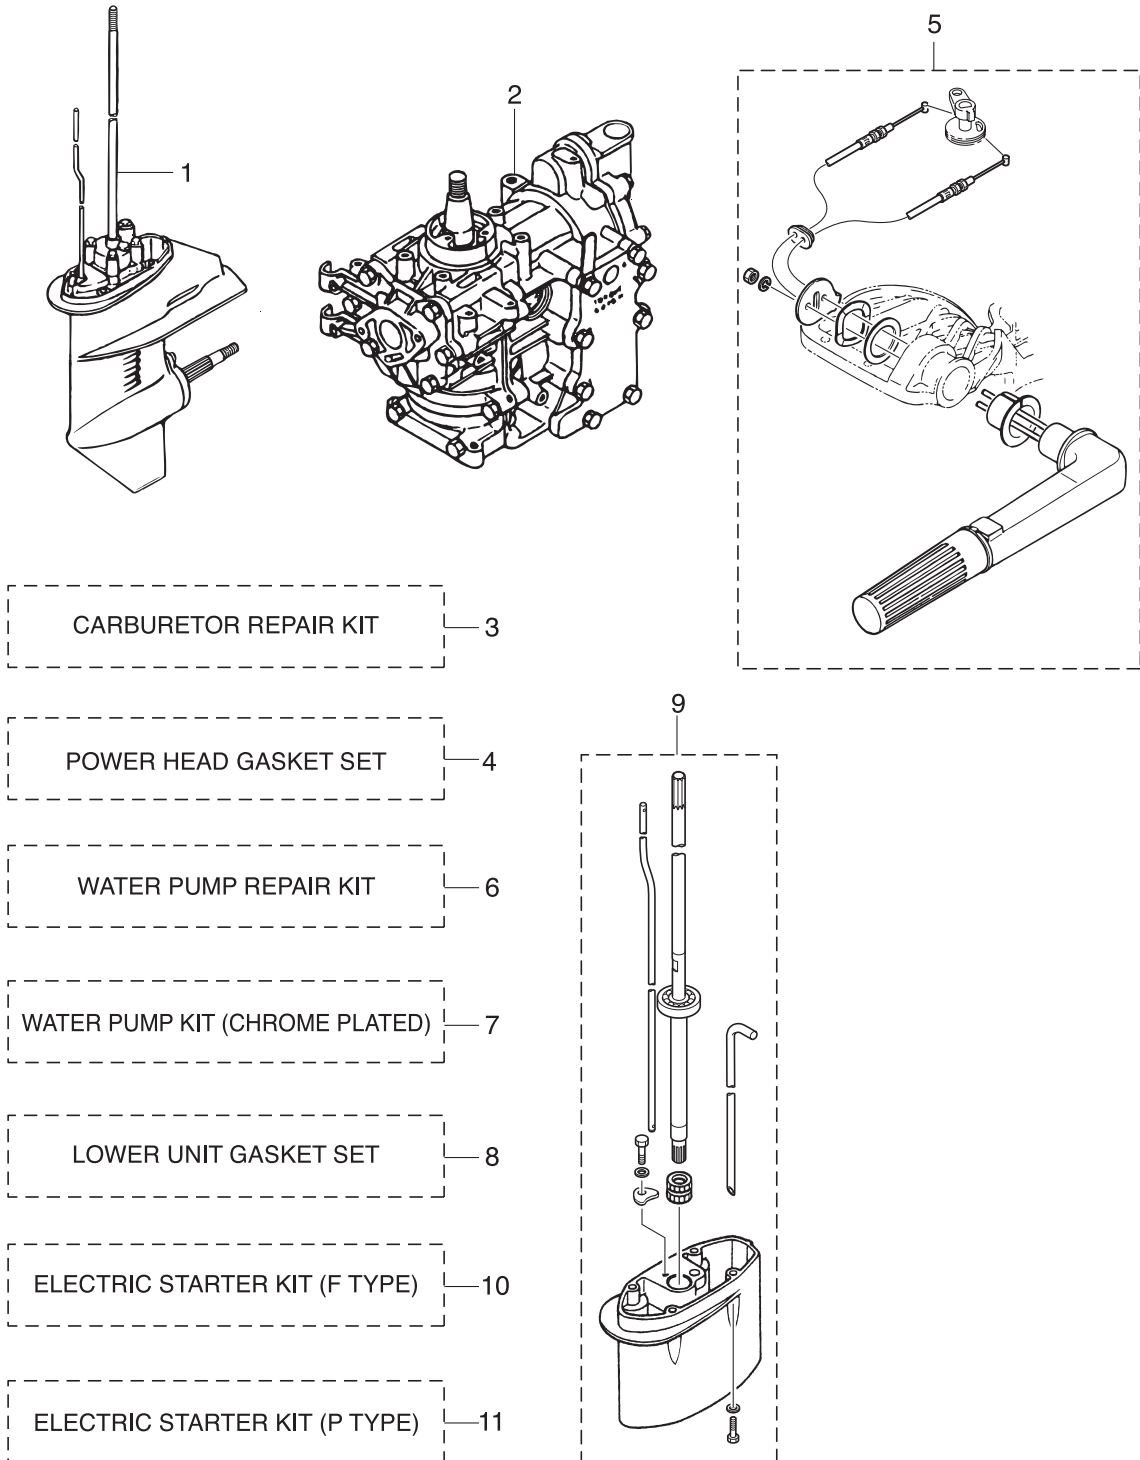

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
19-10	1	3B2-76400-3	ELECTRIC STARTER KIT (F)	1	1	1	for MF⇒EF
19-10	2	3B2-06194-1	* FLYWHEEL ASSY W/GEAR	1	1	1	
19-10	3	3B2-06123-1	* ALTERNATOR ASSY (80W)	1	1	1	
19-10	4	350-76010-0	* STARTER MOTOR ASSY	1	1	1	
19-10	5	916103-0830	* BOLT	2	2	2	
19-10	6	941303-0800	* SPRING WASHER	4	4	4	
19-10	7	350-76011-0	* STARTER MOTOR BRACKET	1	1	1	
19-10	8	910103-0825	* BOLT	2	2	2	
19-10	9	346-76040-0	* STARTER SOLENOID	1	1	1	
19-10	10	910103-6620	* BOLT	1	1	1	
19-10	11	930103-0600	* NUT	1	1	1	
19-10	12	398-76080-0	* NEUTRAL SWITCH	1	1	1	
19-10	13	398-76083-0	* NEUTRAL SWITCH ACTUATOR	1	1	1	
19-10	14	3B7-63731-0	* WASHER 12.5-24-1	1	1	1	
19-10	15	3B2-76060-0	* RECTIFIER COMPLETE	1	1	1	
19-10	16	921503-0525	* SCREW	1	1	1	
19-10	17	941303-0500	* SPRING WASHER	1	1	1	
19-10	18	930103-0500	* NUT	1	1	1	
19-10	19	398-06972-0	* CLAMP 6.5-67P	1	1	1	
19-10	20	309-06972-0	* CLAMP 6.5-47.5P	1	1	1	
19-10	21	9101F4-0610	* BOLT	1	1	1	
19-10	22	3B2-76120-1	* BATTERY CABLE L=2000	1	1	1	
19-10	23	3B2-76062-0	* FUSE WIRE ASSY L=355	1	1	1	
19-10	24	3B2-76147-2	* STARTER CABLE L=200	1	1	1	
19-10	25	3A3-76145-0	* TERMINAL CAP	2	2	2	
19-10	26	3B7-76145-0	* TERMINAL CAP	1	1	1	
19-10	27	345-06917-1	* CLAMP 9-20U	1	1	1	
19-10	28	3B2-76026-1	* MAIN SWITCH ASSY	1	1	1	

Fig. 19


ASSEMBLY • KIT PARTS

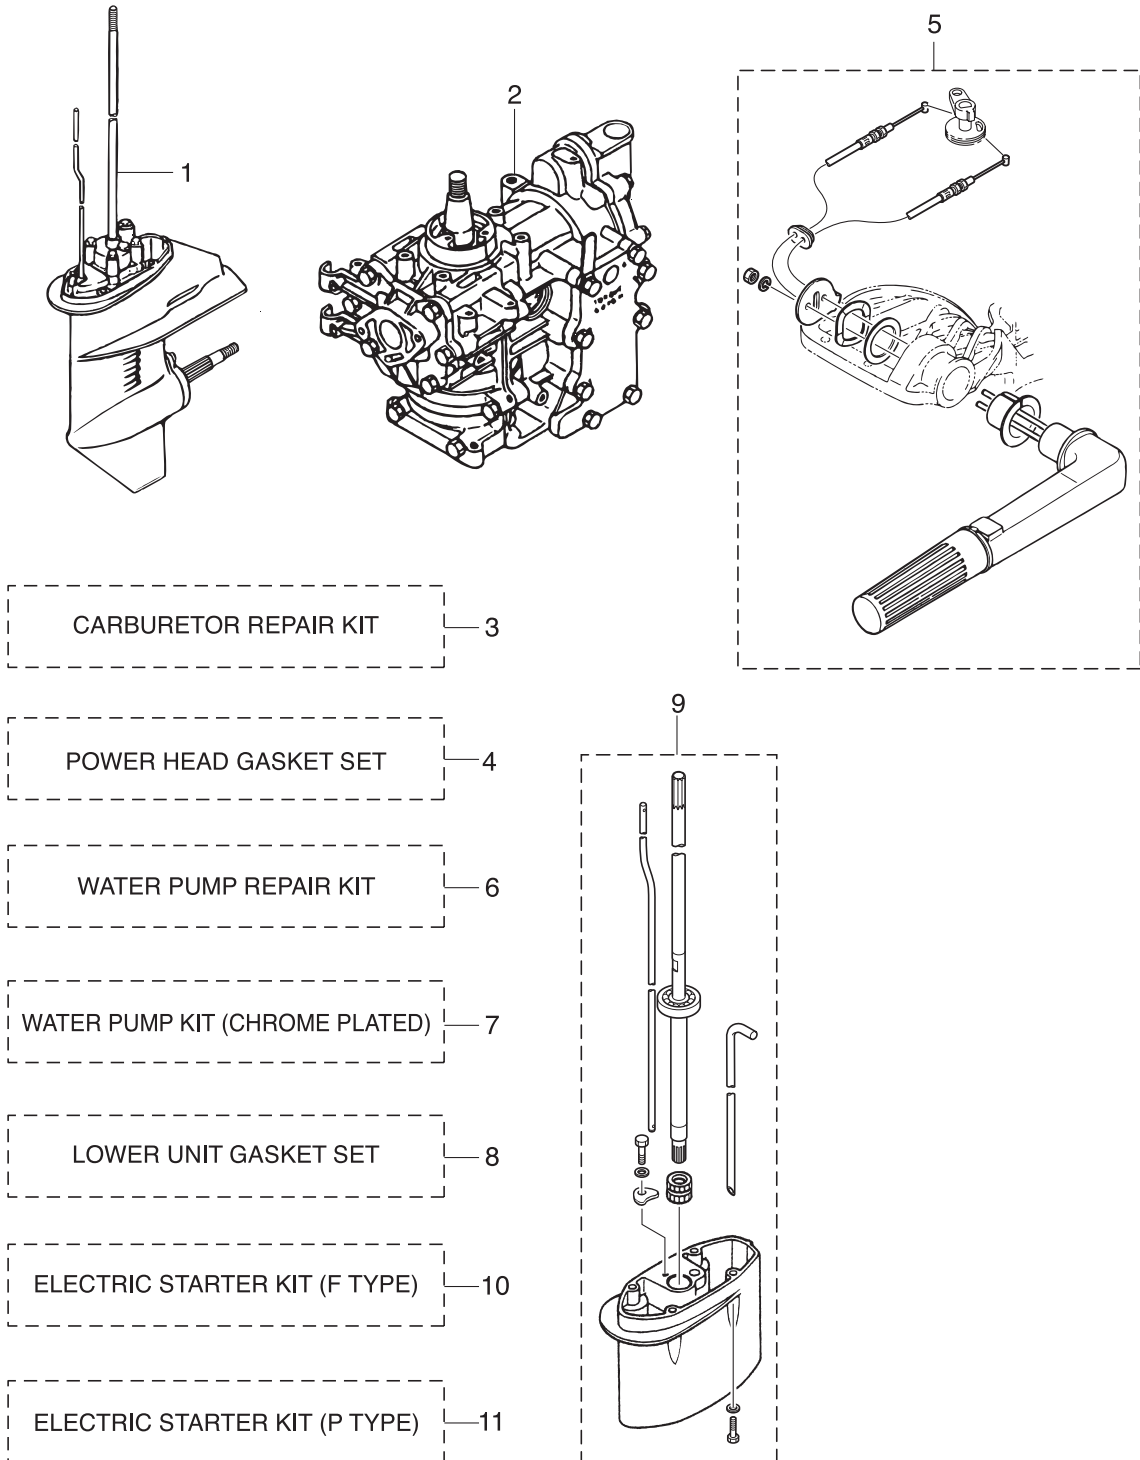

Ref.No.		Part No.	Description	Q'ty			Remarks
				M6B	M8B	M9.8B	
19-11	1	3B2-76100-2	ELECTRIC STARTER KIT (P)		1		M8B for MF⇒EP
19-11	2	3K9-76100-0	ELECTRIC STARTER KIT (P)			1	M9.8B for MF⇒EP
19-11	3	3B2-06194-1	* FLYWHEEL ASSY W/GEAR		1	1	
19-11	4	3B2-06123-1	* ALTERNATOR ASSY (80W)		1	1	
19-11	5	350-76010-0	* STARTER MOTOR ASSY		1	1	
19-11	6	916103-0830	* BOLT		2	2	
19-11	7	941303-0800	* SPRING WASHER		6	6	
19-11	8	350-76011-0	* STARTER MOTOR BRACKET		1	1	
19-11	9	910103-0825	* BOLT		2	2	
19-11	10	346-76040-0	* STARTER SOLENOID		1	1	
19-11	11	910103-6620	* BOLT		1	1	
19-11	12	930103-0600	* NUT		1	1	
19-11	13	3B2-76060-0	* RECTIFIER COMPLETE		1	1	
19-11	14	921503-0525	* SCREW		1	1	
19-11	15	941303-0500	* SPRING WASHER		1	1	
19-11	16	930103-0500	* NUT		1	1	
19-11	17	3B2-76120-1	* BATTERY CABLE L=2000		1	1	
19-11	18	3B2-76062-0	* FUSE WIRE ASSY L=355		1	1	
19-11	19	3B2-76147-2	* STARTER CABLE L=200		1	1	
19-11	20	3A3-76145-0	* TERMINAL CAP		2	2	
19-11	21	3B7-76145-0	* TERMINAL CAP		1	1	
19-11	22	309-06972-0	* CLAMP 6.5-47.5P		2	2	
19-11	23	9101F4-0610	* BOLT		1	1	
19-11	24	398-06972-0	* CLAMP 6.5-67P		1	1	
19-11	25	353-84398-0	* BAND 100		2	2	
19-11	26	345-67193-0	* GROMMET 16-2.5		1	1	
19-11	27	345-06917-1	* CLAMP 9-20U		1	1	
19-11	28	3B2-63624-0	* GROMMET		1	1	
19-11	29	345-67117-0	* GROMMET 17-2.7		1	1	

Fig. 19

ASSEMBLY • KIT PARTS

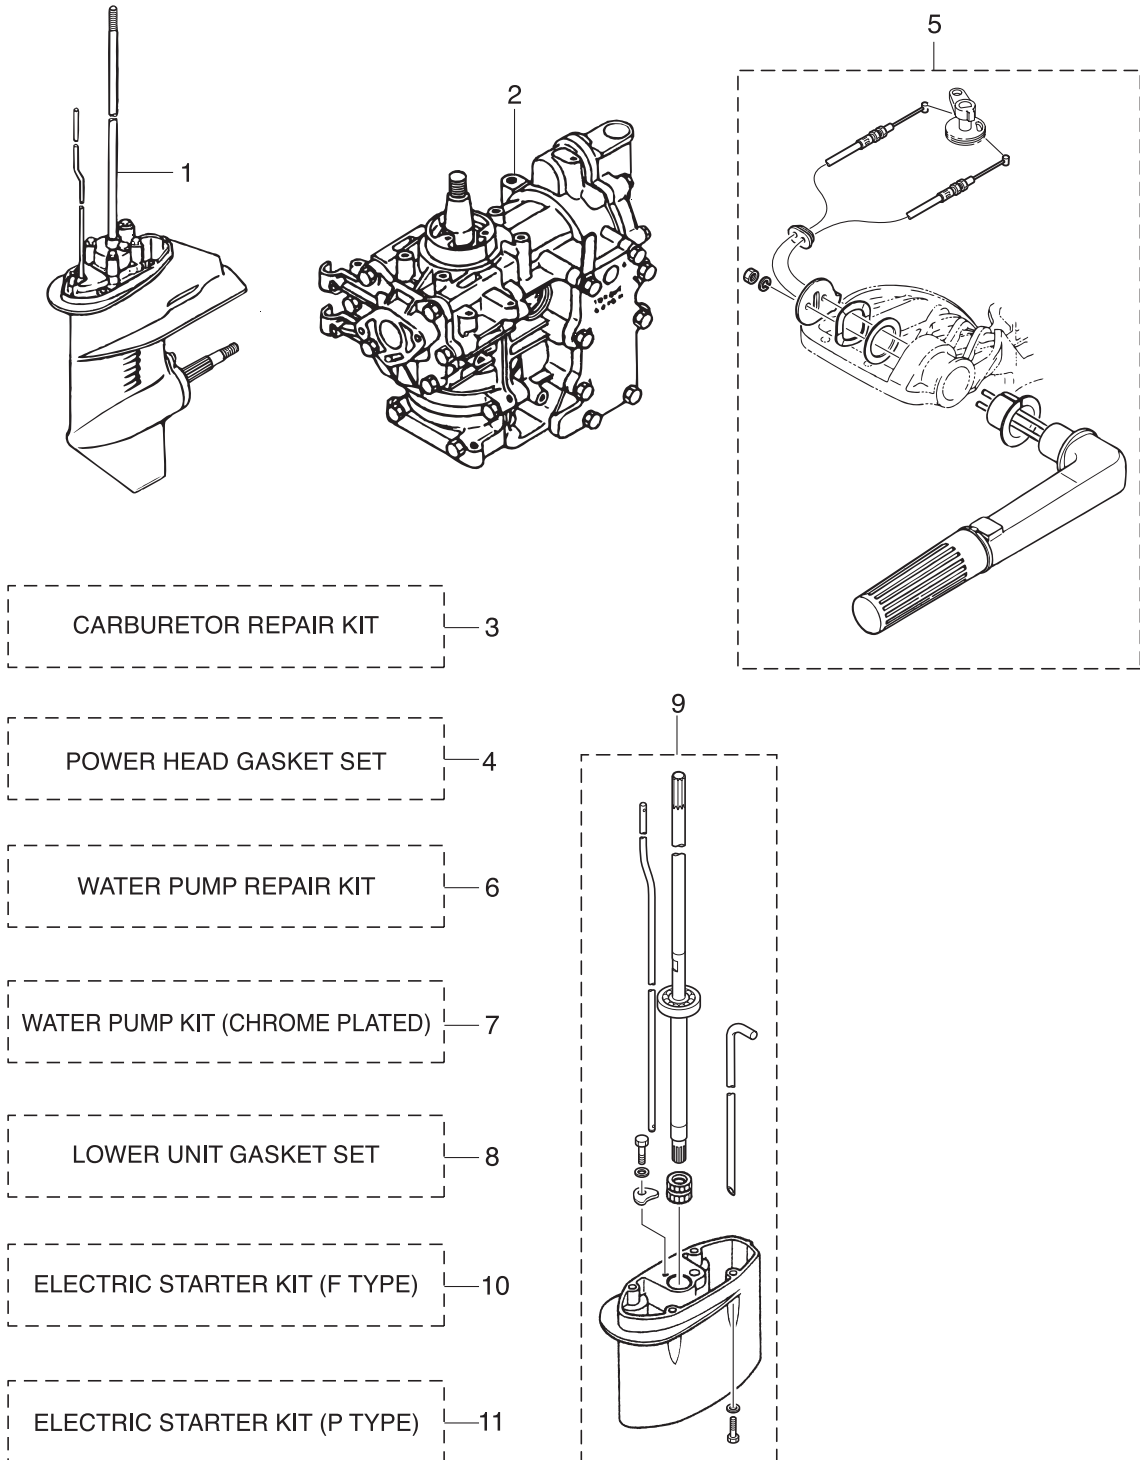

[illegible]

INDEX

<A>			
ADJUSTING SCREW	10-10	BOLT	19-11-23
ADVANCER ARM	3-13	BOLT 8-122	9-3
ALTERNATOR ASSY (80W)	6-9	BOTTOM COWL	11-2
ALTERNATOR ASSY (80W)	19-10-3	BRACKET	5-27
ALTERNATOR ASSY (80W)	19-11-4	BRACKET	5-28
ALTERNATOR KIT	18-4	BRUSH HOLDER	6-31
ASSIST CORD COMPLETE	13-28	BUSHING	9-30
ASSIST CORD COMPLETE	19-11-30	BUSHING	9-43
		BUSHING	10-17
BALL BEARING 6004	8-16	BUSHING	12-7
BALL BEARING 6204	2-12	BUSHING	16-4
BALL BEARING 6204	2-13	BUSHING	16-12
BALL BEARING 6204	8-3	BUSHING	16-46
BALL BEARING 6301	8-44	BUSHING 8.4-10-11	10-7
BALL JOINT	6-16	<C>	
BALL JOINT CONNECTOR	3-19	CABLE CLIP ASSY	13-8
BALL JOINT HOLDER	13-4	CABLE JOINT ASSY	13-26
BAND	17-12	CABLE TERMINAL	16-28
BAND 100	13-27	CABLE TERMINAL PLUG	16-3
BAND 100	13-29	CAM ROD (L)	8-47-2
BAND 100	19-11-25	CAM ROD (S)	8-47-1
BATTERY CABLE L=2000	6-48	CAM ROD (UL)	8-47-3
BATTERY CABLE L=2000	19-10-22	CAM ROD (UL)	19-9-9
BATTERY CABLE L=2000	19-11-17	CAM ROD BUSHING	8-48
BEVEL GEAR ASSY (A)	8-18	CARBURETOR ASSY	4-1-1
BEVEL GEAR B	8-19	CARBURETOR ASSY	4-1-2
BEVEL GEAR C	8-20	CARBURETOR ASSY	4-1-4
BOLT	1-6	CARBURETOR ASSY (EP)	4-1-3
BOLT	1-7	CARBURETOR ASSY (EP)	4-1-5
BOLT	1-8	CARBURETOR ASSY (EP)	19-11-37
BOLT	1-10	CARBURETOR ASSY (EP)	19-11-38
BOLT	1-16	CARBURETOR COVER	4-30
BOLT	1-22	CARBURETOR COVER GASKET	4-31
BOLT	1-34	CARBURETOR COVER GASKET	4-32
BOLT	3-10	CARBURETOR COVER GASKET	19-3-17
BOLT	5-8	CARBURETOR COVER GASKET	19-3-18
BOLT	5-25	CARBURETOR GASKET	3-12
BOLT	5-29	CARBURETOR GASKET	19-3-2
BOLT	5-30	CARBURETOR GASKET	19-4-13
BOLT	6-21	CARBURETOR REPAIR KIT	19-3-1
BOLT	6-22	CAUTION DECAL (A)	14-8
BOLT	6-32	CAUTION DECAL (B)	6-19
BOLT	6-37	CD UNIT ASSY	6-17
BOLT	6-38	CHECK VALVE	1-25
BOLT	6-42	CHECK VALVE	4-21
BOLT	7-2	CHOKE ROD	11-1
BOLT	7-7	CHOKE ROD BUSHING	11-8
BOLT	7-10	CHOKE SOLENOID	4-35
BOLT	7-13	CHOKE SOLENOID	19-11-31
BOLT	7-14	CHOKE SOLENOID BRACKET	4-40
BOLT	8-4	CHOKE SOLENOID BRACKET	19-11-35
BOLT	8-9	CHOKE SOLENOID HOOK	4-38
BOLT	8-17	CHOKE SOLENOID HOOK	19-11-33
BOLT	8-37	CLAMP	15-5
BOLT	8-52	CLAMP	15-11
BOLT	9-18	CLAMP 6.5-47.5P	1-12
BOLT	9-37	CLAMP 6.5-47.5P	1-23
BOLT	9-39	CLAMP 6.5-47.5P	3-11
BOLT	9-45	CLAMP 6.5-47.5P	5-31
BOLT	11-18	CLAMP 6.5-47.5P	6-36
BOLT	11-25	CLAMP 6.5-47.5P	19-10-20
BOLT	12-11	CLAMP 6.5-67P	19-11-22
BOLT	13-9	CLAMP 6.5-67P	6-35
BOLT	13-12	CLAMP 6.5-67P	19-10-19
BOLT	13-21	CLAMP 6.5-67P	19-11-24
BOLT	16-14	CLAMP 9-20U	6-40
BOLT	16-32	CLAMP 9-20U	19-10-27
BOLT	18-18	CLAMP 9-20U	19-11-27
BOLT	19-6-8	CLAMP BRACKET (L)	9-2
BOLT	19-9-3	CLAMP BRACKET (R)	9-1
BOLT	19-9-6	CLAMP SCREW	9-48
BOLT	19-10-5	CLAMP SCREW ASSY	9-47
BOLT	19-10-8	CLAMP SCREW HANDLE	9-49
BOLT	19-10-10	CLAMP SCREW KIT	9-46
BOLT	19-10-21	CLAMP SCREW PAD	9-51
BOLT	19-11-6	CLIP	4-8
BOLT	19-11-9	CLIP	19-3-9
BOLT	19-11-11	CLIP ϕ 10	11-7
		CLIP ϕ 7	1-29
		CLIP ϕ 8	1-28
		CLUTCH	8-24
		CLUTCH CAM	8-45
		COIL PLATE ASSY	6-4
		COIL PLATE ASSY W/ALTERNATOR	6-3
		COIL PLATE STOPPER	6-13-1
		COIL PLATE STOPPER	6-13-2
		COLLAR 4-6-21	5-16
		COLLAR 6.1-8-4	5-21
		CONNECTING ROD	2-2
		CONTROL LEVER	16-42
		CORD ASSY	17-7
		COVER HOOK	11-24
		CRANK PIN	2-8
		CRANKCASE HEAD	1-30
		CRANKCASE HEAD GASKET	1-24
		CRANKCASE HEAD GASKET	19-4-6
		CRANKSHAFT A	2-4
		CRANKSHAFT B	2-5
		CRANKSHAFT C	2-6
		CRANKSHAFT D	2-7
		CRANKSHAFT SUB-ASSY	2-1
		CYL BLOCK & CRANKCASE ASSY	1-1-1
		CYL BLOCK & CRANKCASE ASSY	1-1-2
		CYLINDER HEAD ASSY	1-13-1
		CYLINDER HEAD ASSY	1-13-2
		CYLINDER HEAD GASKET	1-15
		CYLINDER HEAD GASKET	19-4-3
<D>		DAMPER (LOWER)	9-33
		DAMPER (UPPER)	9-32
		DECAL (LEVER)	17-8
		DECAL (TOHATSU)	17-9
		DECAL SET (M6B)	14-9-1
		DECAL SET (M8B)	14-9-2
		DECAL SET (M9.8B)	14-9-3
		DETENT RETAINER	16-18
		DETENT ROLLER	16-15
		DETENT SPRING	16-20
		DIAPHRAGM A	4-27
		DIAPHRAGM A	19-3-12
		DIAPHRAGM B	4-28
		DIAPHRAGM B	19-3-13
		DISTANCE PLATE	9-7
		DOWEL PIN 6-12	1-4
		DOWEL PIN 6-16	7-4
		DRAIN SCREW	4-14
		DRIVE GEAR	16-29
		DRIVE SHAFT ASSY (L)	8-43-2
		DRIVE SHAFT ASSY (S)	8-43-1
		DRIVE SHAFT ASSY (UL)	8-43-3
		DRIVE SHAFT ASSY (UL)	19-9-7
		DRIVE SHAFT BUSHING	7-8
		DRIVE SHAFT BUSHING	19-9-4
		DRIVE SHAFT HOUSING (L)	7-1-2
		DRIVE SHAFT HOUSING (S)	7-1-1
		DRIVE SHAFT HOUSING GASKET	7-3
		DRIVE SHAFT HOUSING GASKET	19-8-2
<E>		ELECTRIC STARTER KIT (F)	19-10-1
		ELECTRIC STARTER KIT (P)	19-11-1
		ELECTRIC STARTER KIT (P)	19-11-2
		ENGINE BASEMENT GASKET	1-35
		ENGINE BASEMENT GASKET	19-4-9
		ENGINE SHORT BLOCK KIT	19-2-1
		ENGINE SHORT BLOCK KIT	19-2-2
		E-RING d=10	12-15
		E-RING d=5	9-21
		E-RING d=6	16-26
		EXCITER COIL	6-5
		EXHAUST COVER (INNER)	1-20-1
		EXHAUST COVER (INNER)	1-20-2
		EXHAUST COVER ASSY	1-19
		EXHAUST COVER GASKET	1-21-1
		EXHAUST COVER GASKET	1-21-2
		EXHAUST COVER GASKET	19-4-4
		EXHAUST COVER GASKET	19-4-5
		EXHAUST PIPE	7-11
		EXHAUST PIPE GASKET	7-12

EXHAUST PIPE GASKET.....	19-8-6	GUIDE PLATE GASKET.....	19-8-8	NUT 10-P1.25.....	11-10
EXTENSION CORD (LIGHT) L=2000	18-6	<H>		NUT12-P1.25	6-25
EXTENSION HOUSING.....	7-6	HOLDER.....	3-15	NYLON NUT 4-P0.7	8-12
EXTENSION HOUSING.....	19-9-2	HOLDER.....	6-7	NYLON NUT 6-P1.0	14-6
EXTENSION HOUSING KIT (UL).....	19-9-1	HOLDER CAP	13-5	NYLON NUT 8-P1.25	9-4
<F>		HOOK LEVER	11-19	<O>	
FILTER.....	15-17	HOOK LEVER BUSHING.....	11-21	OIL SEAL 12-24-8	8-40
FITTING PLATE.....	18-10	HOOK LEVER BUSHING.....	13-17	OIL SEAL 12-24-8	19-8-10
FLOAT	4-6	HOSE.....	1-26	OIL SEAL 12-28-5	1-31
FLOAT	19-3-6	HOSE.....	1-27	OIL SEAL 12-28-5	19-4-7
FLOAT ARM PIN	4-9	HOSE.....	11-4	OIL SEAL 14-20-4.5	12-5
FLOAT ARM PIN	19-3-7	HOSE.....	15-6	OIL SEAL 15-28-10.....	8-15
FLOAT CHAMBER	4-11	HOSE.....	15-7	OIL SEAL 15-28-10.....	19-8-5
FLOAT CHAMBER O-RING	4-12	<I>		OIL SEAL 20-35-7	2-15
FLOAT CHAMBER O-RING	19-3-3	INTAKE MANIFOLD ASSY.....	3-1	OIL SEAL 20-35-7	19-4-10
FLOAT VALVE ASSY	4-7	INTAKE MANIFOLD GASKET	3-2	OIL SEAL 20-40-7	1-32
FLOAT VALVE ASSY	19-3-8	INTAKE MANIFOLD GASKET	3-3	OIL SEAL 20-40-7	19-4-8
FLUSHING PLUG.....	18-23	INTAKE MANIFOLD GASKET	19-4-11	OIL SEAL 25-47-7	2-10
FLYWHEEL ASSY.....	6-1	INTAKE MANIFOLD GASKET	19-4-12	O-RING.....	15-16
FLYWHEEL ASSY W/GEAR	6-2	INTAKE SILENCER.....	3-5	O-RING 2.4-15.4	8-50
FLYWHEEL ASSY W/GEAR	19-10-2	INTAKE SILENCER.....	3-6	O-RING 2.4-15.4	19-8-12
FLYWHEEL ASSY W/GEAR	19-11-3	INTAKE SILENCER.....	19-11-39	O-RING 2.5-4.9.....	8-49
FREE THROTTLE DRUM.....	16-45	<J>		O-RING 2.5-4.9.....	19-8-11
FREE THROTTLE LEVER.....	16-16	JOINT ASSY (INLET)	15-2	O-RING 3.2-4.7	8-14
FREE THROTTLE ROLLER	16-22	JOINT ASSY (OUTLET).....	15-3	O-RING 3.2-4.7	19-8-4
FREE THROTTLE SPRING.....	16-24	<K>		O-RING 4.25-19.5	9-29
FRICTION PIECE.....	9-16	KEY	6-24	<P>	
FRICTION PIECE.....	10-9	KEY ϕ 3-11.....	8-30	PICK-UP ELBOW ASSY (12L)	15-14
FRICTION PLATE	5-9	KEY ϕ 3-11.....	19-6-3	PILOT SCREW.....	4-18
FRICTION SPRING.....	5-7	<L>		PIN 3.5-28	8-25
FRICTION SPRING.....	9-17	LEAD WIRE	18-22-1	PINION ASSY	6-28
FUEL CONNECTOR.....	15-9	LEAD WIRE	18-22-2	PISTON.....	2-17-1
FUEL CONNECTOR.....	15-10	LOWER UNIT ASSY (L).....	19-1-2	PISTON (0.5 O/S).....	2-17-2
FUEL CONNECTOR (MALE)	11-9	LOWER UNIT ASSY (S).....	19-1-1	PISTON PIN.....	2-18
FUEL CONNECTOR MARK	15-8	LOWER UNIT ASSY (UL)	19-1-3	PISTON PIN CLIP.....	2-19
FUEL FILTER ASSY	11-3	LOWER UNIT GASKET SET	19-8-1	PISTON REPAIR KIT	2-16-1
FUEL GAUGE VENT CAP ASSY (12L).....	15-13	<M>		PISTON REPAIR KIT (0.5 O/S).....	2-16-2
FUEL HOSE.....	11-5	MAIN JET (#80)	4-3-1	PISTON RING	2-21-1
FUEL TANK ASSY 12L	15-12	MAIN JET (#95)	4-3-3	PISTON RING (0.5 O/S)	2-21-2
FUSE 15A.....	6-53	MAIN JET (#98)	4-3-2	PISTON RING SET	2-20-1
FUSE WIRE ASSY L=355	6-52	MAIN NOZZLE	4-2-1	PISTON RING SET (0.5 O/S)	2-20-2
FUSE WIRE ASSY L=355	19-10-23	MAIN NOZZLE	4-2-2	PLATE.....	16-47
FUSE WIRE ASSY L=355	19-11-18	MAIN NOZZLE	4-2-3	PLUG 8-8.....	8-6
<G>		MAIN SWITCH ASSY.....	11-17	PLUG CAP W/RESISTANCE	6-18
GASKET	4-15	MAIN SWITCH ASSY.....	17-1	PLUG CAP W/RESISTANCE	6-54
GASKET	19-3-4	MAIN SWITCH ASSY.....	19-10-28	PLUNGER.....	4-36
GASKET 10.2-16-0.5.....	11-11	MAIN SWITCH KEY No.301	17-2-1	POSITIVE BRUSH.....	6-29
GASKET 8.1-15-1.....	8-7	MAIN SWITCH KEY No.302	17-2-2	POWER HEAD GASKET SET	19-4-1
GASKET 8.1-15-1.....	19-8-3	MAIN SWITCH KEY No.303	17-2-3	POWER HEAD GASKET SET	19-4-2
GEAR CASE ASSY	8-1	METER BULB 12V-1.8W.....	18-8	PRIMER BULB	15-4
GREASE FITTING	9-15	METER DAMPER	18-9	PRIMER BULB ASSY	15-1
GRIP	10-4	MOUNT BRACKET (L).....	9-36	PROPELLER ASSY (6.5").....	8-55-1
GRIP	16-41	MOUNT BRACKET (R)	9-35	PROPELLER ASSY (7")	8-55-2
GROMMET	7-5	<N>		PROPELLER ASSY (7.5").....	8-55-3
GROMMET	8-54	NEGATIVE BRUSH.....	6-30	PROPELLER ASSY (8.5").....	8-55-4
GROMMET	11-27	NEUTRAL LOCK ARM.....	16-36	PROPELLER ASSY (9.5").....	8-55-5
GROMMET	11-29	NEUTRAL LOCK SPRING	16-37	PROPELLER HARDWARE KIT.....	8-56
GROMMET	11-30	NEUTRAL SWITCH	11-12	PROPELLER NUT.....	8-59
GROMMET	13-1	NEUTRAL SWITCH	19-10-12	PROPELLER SHAFT.....	8-23
GROMMET	16-33	NEUTRAL SWITCH (REMOTE CONT).....	17-3	PROPELLER SHAFT HOUSING ASSY	8-13
GROMMET	16-48	NEUTRAL SWITCH ACTUATOR.....	11-13	PUMP BODY.....	4-20
GROMMET	16-49	NEUTRAL SWITCH ACTUATOR.....	19-10-13	PUMP BODY GASKET	4-29
GROMMET	16-50	NIPPLE	1-2	PUMP BODY GASKET	19-3-16
GROMMET	16-51	NIPPLE 5.5-5.....	1-3	PUMP CASE (LOWER)	8-39
GROMMET	16-52	NIPPLE 5.5-5.....	1-5	PUMP CASE (UPPER)	8-31
GROMMET	18-14	NUT.....	3-20	PUMP CASE GASKET	8-34
GROMMET	19-5-3	NUT.....	4-23	PUMP CASE GASKET	19-6-6
GROMMET	19-5-5	NUT.....	6-15	PUMP CASE GASKET	19-7-5
GROMMET	19-5-6	NUT.....	6-43	PUMP CASE GASKET	19-8-7
GROMMET	19-11-28	NUT.....	6-47	PUMP CASE GASKET (LOWER)	8-41
GROMMET 16-2.5.....	19-11-26	NUT.....	10-12	PUMP CASE GASKET (LOWER)	19-6-10
GROMMET 17-2.7.....	11-28	NUT.....	10-23	PUMP CASE GASKET (LOWER)	19-8-9
GROMMET 17-2.7.....	13-2	NUT.....	13-10	PUMP CASE LINER	8-32
GROMMET 17-2.7.....	19-5-4	NUT.....	13-13	PUMP CASE LINER	19-6-4
GROMMET 17-2.7.....	19-11-29	NUT.....	16-8	PUMP CASE LINER	19-7-3
GROMMET 17-3	11-31	NUT.....	16-31	PUMP COVER.....	4-24
GROMMET 17-3	13-31	NUT.....	18-11	PUMP COVER GASKET	4-26
GROMMET 22-2.5.....	11-6	NUT.....	18-20	PUMP COVER GASKET	19-3-15
GROUND L=110	9-38	NUT.....	19-10-11	PUSH ROD	8-27
GROUND L=110	9-40	NUT.....	19-10-18	<Q>	
GUIDE PLATE GASKET.....	8-36	NUT.....	19-11-12	QUICK-CONNECTOR (MALE).....	15-15
GUIDE PLATE GASKET.....	19-6-7	NUT.....	19-11-16	<R>	
GUIDE PLATE GASKET.....	19-7-6	NUT 10-32UNF	13-24	RATCHET	5-6

REAR HOUSING	16-34	SEPARATE CORD	18-15-2	STOP SWITCH LANYARD ASSY	17-14
REAR PANEL	16-35	SETTING PLATE	6-11	STOPPER	7-9
RECOIL STARTER ASSY	5-1	SETTING PLATE	9-44	STOPPER	8-51
RECTIFIER COMPLETE	6-44	SHIFT GEAR ASSY	16-27	STOPPER	19-9-5
RECTIFIER COMPLETE	19-10-15	SHIFT LEVER	12-4	STUD	10-14
RECTIFIER COMPLETE	19-11-13	SHIFT LEVER STOPPER	12-10	SWIVEL BRACKET	9-14
RECTIFIER KIT	18-3	SHIFT LEVER STOPPER	12-13	<T>	
REED VALVE ASSY	3-4	SHIFT POSITION DECAL	17-10	TACHOMETER ASSY	18-7
REEL	5-4	SHIFT POSITION SIDE DECAL	17-11	TACHOMETER LEAD WIRE L=6000	18-13
REMOTE CONTROL FITTING ASSY	13-3	SHIFT ROD	12-1	TERMINAL CAP	6-50
REMOTE CONTROL HEAD ASSY (R5C)	16-1	SHIFT ROD JOINT	12-2	TERMINAL CAP	6-51
REMOTE CONTROL HEAD ASSY (R5D)	16-2	SHIFT ROD LEVER	12-8	TERMINAL CAP	19-10-25
REMOTE CONTROL STOP CORD ASSY L=3900	13-30-1	SHIM 21-28-0.1	8-22-1	TERMINAL CAP	19-10-26
REMOTE CONTROL STOP CORD ASSY L=5900	13-30-2	SHIM 21-28-0.15	8-22-2	TERMINAL CAP	19-11-20
RETURN SPRING	5-5	SHIM 28-36.8-0.1	8-42-1	TERMINAL CAP	19-11-21
REVERSE LOCK	9-19	SHIM 28-36.8-0.15	8-42-2	THERMOSTAT	1-18
REVERSE LOCK LINK	9-23	SHIM 28-36.8-0.3	8-42-3	THROTTLE ARM	3-17
REVERSE LOCK LINK JOINT	9-25	SHOULDER BOLT	9-52	THROTTLE ARM	16-25
REVERSE LOCK ROD	9-20	SLOW JET (#48)	4-4-1	THROTTLE DECAL	10-13
REVERSE LOCK SPRING	9-22	SLOW JET (#50)	4-4-2	THROTTLE DRUM	3-14
RIVET 3-22	9-50	SNAP RETAINER d=8	12-9	THROTTLE LEVER	13-16
ROD 5-45	3-18	SPACER	3-7	THROTTLE LEVER	13-20
ROD SNAP 3-B	3-23	SPACER	16-6	THROTTLE LEVER ROD	13-23
ROD SNAP 3-B	4-34	SPACER 22-27.5-1	1-33	THROTTLE ROD	3-22
ROD SNAP 4-2	5-23	SPACER 6.2-9-27	6-20	THROTTLE SHAFT	10-5
ROD SNAP 4-2	12-14	SPARK PLUG (BPR7HS10)	1-36	THROTTLE SHAFT DAMPER	10-6
ROD SNAP 5-2.5	3-21	SPARK PLUG DECAL (BPR7HS10)	11-32	THROTTLE SHAFT SUPPORT	10-15
ROD SNAP 5-2.5	9-24	SPLIT PIN	9-26	THROTTLE WIRE	10-18
ROD SNAP 5-2.5	13-25	SPLIT PIN 3-18	8-60	THRUST HOLDER ASSY	8-57
ROLLER	16-10	SPRING	4-17	THRUST PLATE	2-11
ROLLER BEARING 14-18-19	2-14	SPRING	4-19	THRUST PLATE	16-11
ROLLER BEARING 15-21-16	8-2	SPRING	8-26	THRUST PLATE (UPPER) 22-44-2	9-28
ROLLER BEARING 17-23-14	2-3	SPRING	13-6	THRUST ROD	9-12
ROLLER RETAINER	16-23	SPRING PIN 3-10	8-46	THRUST ROD SPRING	9-13
ROPE ANCHOR	5-12	SPRING PIN 3-10	12-3	TILLER HANDLE	10-3
RUBBER CAP	4-5	SPRING PIN 3-12	4-39	TILLER HANDLE ASSY	10-1
RUBBER CAP	19-3-11	SPRING PIN 3-12	19-11-34	TILLER HANDLE ASSY	19-5-2
RUBBER MOUNT (LOWER)	9-34	SPRING RETAINER	8-28	TILLER HANDLE KIT	19-5-1
RUBBER MOUNT (UPPER)	9-31	SPRING WASHER	3-9	TILLER HANDLE SUB-ASSY	10-2
<S>		SPRING WASHER	5-26	TILT HANDLE	14-5
SAFETY ROPE ϕ 4-1000	18-1	SPRING WASHER	6-33	TILT STOPPER ASSY	9-41
SCREW	3-16	SPRING WASHER	6-39	TILT STOPPER GRIP	9-42
SCREW	4-10	SPRING WASHER	6-46	TILT SWITCH COVER	16-40
SCREW	4-13	SPRING WASHER	10-22	TILT SWITCH PLUG	16-43
SCREW	4-22	SPRING WASHER	13-14	TOOL KIT	18-2
SCREW	4-25	SPRING WASHER	18-12	TOP COWL ASSY	14-1
SCREW	4-33	SPRING WASHER	19-10-6	TOP COWL SEAL L=1700	14-3
SCREW	4-37	SPRING WASHER	19-10-17	TOP COWL SUB-ASSY	14-2
SCREW	4-41	SPRING WASHER	19-11-7	TRIM TAB	8-8
SCREW	5-15	SPRING WASHER	19-11-15	TWIN REMOTE CONTROL KIT	16-53
SCREW	5-20	STARTER CABLE L=200	6-49	<V>	
SCREW	6-6	STARTER CABLE L=200	19-10-24	VERTICAL STARTER GUIDE	18-17
SCREW	6-8	STARTER CABLE L=200	19-11-19	VERTICAL STARTER KIT	18-16
SCREW	6-10	STARTER CASE	5-2	<W>	
SCREW	6-12	STARTER HANDLE	5-11	WASHER	1-9
SCREW	6-14	STARTER LOCK	5-14	WASHER	1-11
SCREW	6-45	STARTER LOCK ARM	12-6	WASHER	1-17
SCREW	8-11	STARTER LOCK CAM	5-18	WASHER	6-23
SCREW	9-8	STARTER LOCK ROD	5-22	WASHER	6-26
SCREW	9-10	STARTER LOCK SPRING	5-17	WASHER	8-5
SCREW	10-8	STARTER MOTOR ASSY	6-27	WASHER	8-38
SCREW	10-16	STARTER MOTOR ASSY	19-10-4	WASHER	9-5
SCREW	16-5	STARTER MOTOR ASSY	19-11-5	WASHER	10-11
SCREW	16-17	STARTER MOTOR BRACKET	6-34	WASHER	12-12
SCREW	16-19	STARTER MOTOR BRACKET	19-10-7	WASHER	13-15
SCREW	16-21	STARTER MOTOR BRACKET	19-11-8	WASHER	14-7
SCREW	16-39	STARTER PULLEY	5-24	WASHER	16-7
SCREW	17-4	STARTER ROPE ϕ 4.5-1620	5-10	WASHER	16-9
SCREW	18-5	STARTER SEAL	14-4	WASHER	16-13
SCREW	19-3-5	STARTER SOLENOID	6-41	WASHER	16-38
SCREW	19-3-10	STARTER SOLENOID	19-10-9	WASHER	18-19
SCREW	19-3-14	STARTER SOLENOID	19-11-10	WASHER	19-6-9
SCREW	19-3-19	STARTER SPRING SET	5-3	WASHER 10.5-28-2	8-58
SCREW	19-10-16	STEERING HANDLE STOPPER	10-21	WASHER 12.5-24-1	11-14
SCREW	19-11-14	STEERING HOOK PLATE	13-11	WASHER 12.5-24-1	19-10-14
SCREW	19-11-32	STEERING SHAFT ASSY	9-27	WASHER 14-22-1	11-22
SCREW	19-11-36	STERN BRACKET SPRING	9-9	WASHER 15.2-19-1.9	8-21
SEAL	18-21	STOP SCREW	4-16	WASHER 30-45-1	10-19
SEAL RING 13.8-22-3.7	11-20	STOP SWITCH ASSY	11-15	WASHER 4.3-16-1.5	9-11
SEAL RING 13.8-22-3.7	13-18	STOP SWITCH ASSY	17-5	WASHER 5.5-14-1.2	13-7
SEALING PLATE	5-13	STOP SWITCH ASSY	17-13	WASHER 6-16-1.5	3-8
SEALING PLUG	2-9	STOP SWITCH LANYARD ASSY	11-16	WASHER 6-16-1.5	11-26
SEPARATE CORD	18-15-1	STOP SWITCH LANYARD ASSY	17-6	WASHER 6-16-1.5	13-22

WASHER 8.5-28-1	9-6
WATER PIPE (L)	8-53-2
WATER PIPE (S)	8-53-1
WATER PIPE (UL).....	8-53-3
WATER PIPE (UL).....	19-9-8
WATER PIPE SEAL (LOWER)	8-33
WATER PUMP GUIDE PLATE.....	8-35
WATER PUMP GUIDE PLATE.....	19-6-5
WATER PUMP GUIDE PLATE.....	19-7-4
WATER PUMP IMPELLER	8-29
WATER PUMP IMPELLER	19-6-2
WATER PUMP IMPELLER	19-7-2
WATER PUMP KIT (CHROME PLATED)..	19-7-1
WATER PUMP REPAIR KIT	19-6-1
WATER STRAINER W=17	8-10
WAVE WASHER	16-44
WAVE WASHER 30-45-1.2	10-20
WAVE WASHER d=14	11-23
WAVE WASHER d=8	5-19
WAVE WASHERd=14.....	13-19
WELCH PLUG.....	1-14
WIRE COVER.....	16-30

INDEX (Parts Number)

101-00121-0	2-15	346-76160-2	18-3	369-62147-0	9-11	3A3-84442-0	16-14
101-00121-0	19-4-10	346-76212-0	6-53	369-62439-1	9-44	3A3-84451-0	16-40
301-64217-0	8-25	350-00024-1	2-19	369-64014-0	8-22-21	3A3-84452-0	16-43
307-62116-1	9-6	350-00062-0	2-9	369-64015-0	8-22-2	3AA-60206-0	8-10
309-06972-0	1-12	350-01030-1	1-18	369-64032-0	8-21	3AS-62433-0	9-42
309-06972-0	1-23	350-01093-0	1-14	369-64121-0	8-59	3B2-00001-1	2-17-1
309-06972-0	3-11	350-62121-2	9-12	369-64124-0	8-58	3B2-00004-1	2-17-2
309-06972-0	5-31	350-63012-2	10-4	369-64223-0	8-27	3B2-00011-0	2-21-1
309-06972-0	6-36	350-63046-0	10-7	369-66011-0	8-45	3B2-00014-0	2-21-2
309-06972-0	19-10-20	350-67101-0	12-7	369-66021-1	8-49	3B2-00021-1	2-18
309-06972-0	19-11-22	350-76010-0	6-27	369-66021-1	19-8-11	3B2-00031-0	2-4
309-60111-0	8-40	350-76010-0	19-10-4	369-66031-0	8-48	3B2-00032-0	2-5
309-60111-0	19-8-10	350-76010-0	19-11-5	369-66033-0	8-51	3B2-00033-0	2-6
309-62115-2	9-3	350-76011-0	6-34	369-66043-1	7-5	3B2-00034-0	2-7
312-72201-0	18-1	350-76011-0	19-10-7	369-67104-0	11-8	3B2-00040-0	2-2
331-65014-0	8-33	350-76011-0	19-11-8	369-67105-0	11-21	3B2-00043-0	2-3
332-60005-2	8-6	350-76012-0	6-29	369-67105-0	13-17	3B2-00051-0	2-10
332-60006-0	8-7	350-76013-0	6-30	369-67142-0	11-24	3B2-00061-2	2-8
332-60006-0	19-8-3	350-76014-0	6-31	369-72019-1	10-13	3B2-00069-0	2-1
332-62101-1	9-51	350-76015-0	6-28	369-72026-0	11-32	3B2-00122-1	1-32
332-66032-0	8-50	353-06821-0	11-16	369-72100-0	18-2	3B2-00122-1	19-4-8
332-66032-0	19-8-12	353-06821-0	17-6	369-76167-0	18-6	3B2-01005-1	1-15
332-70201-0	15-11	353-06821-0	17-14	369-83726-0	13-16	3B2-01005-1	19-4-3
332-70261-0	11-10	353-67162-0	11-29	369-83830-2	13-11	3B2-01111-0	7-4
332-83723-0	13-5	353-67162-0	19-5-5	369-84416-0	16-52	3B2-01210-0	1-30
332-83724-0	13-6	353-76020-3	17-1	369-84418-0	16-50	3B2-01214-1	1-24
332-83725-0	13-7	353-84321-0	16-51	369Q67141-1	11-19	3B2-01214-1	19-4-6
332Q62102-1	9-49	353-84371-0	16-7	393-01131-0	1-3	3B2-01215-0	1-31
336-60007-0	18-23	353-84388-0	16-15	393-01131-0	1-5	3B2-01215-0	19-4-7
336-70112-0	11-11	353-84398-0	13-27	393-01137-0	1-2	3B2-01217-0	1-33
338-00042-0	2-14	353-84398-0	13-29	393-01160-0	1-25	3B2-01303-2	1-35
338-00131-0	6-24	353-84398-0	19-11-25	393-62437-1	9-43	3B2-01303-2	19-4-9
338-01133-0	1-29	356-03268-0	4-19	398-06830-0	11-15	3B2-02100-0	3-4
338-02215-0	11-7	361-72539-0	18-13	398-06830-0	17-13	3B2-02104-1	3-2
338-05216-0	5-17	361-72542-0	18-15-2	398-06972-0	6-35	3B2-02104-1	19-4-11
338-05252-0	5-14	361-72543-0	18-15-1	398-06972-0	19-10-19	3B2-02105-1	3-3
338-05255-0	5-16	361-76050-0	4-35	398-06972-0	19-11-24	3B2-02105-1	19-4-12
338-67147-0	11-20	361-76050-0	19-11-31	398-76080-0	11-12	3B2-02212-0	11-5
338-67147-0	13-18	361-76073-0	4-36	398-76080-0	19-10-12	3B2-02305-2	1-21-1
344-03244-0	4-8	361-76110-1	17-7	398-76083-0	11-13	3B2-02305-2	19-4-4
344-03244-0	19-3-9	361-84414-0	16-48	398-76083-0	19-10-13	3B2-02311-0	7-11
344-67177-1	9-15	361-84415-0	16-49	3A1-83710-1	13-26	3B2-02312-2	7-12
345-01111-0	1-4	369-00115-0	2-11	3A1-83722-0	13-4	3B2-02312-2	19-8-6
345-05224-0	3-21	369-00132-0	6-25	3A3-06830-0	17-5	3B2-02411-0	3-5
345-05224-0	9-24	369-02011-0	3-12	3A3-62396-1	9-38	3B2-02412-0	3-6
345-05224-0	13-25	369-02011-0	19-3-2	3A3-62396-1	9-40	3B2-02412-0	19-11-39
345-06917-1	6-40	369-02011-0	19-4-13	3A3-76037-0	16-3	3B2-02416-0	3-7
345-06917-1	19-10-27	369-02230-0	11-3	3A3-76086-1	17-3	3B2-03200-1	4-1-2
345-06917-1	19-11-27	369-03181-0	4-30	3A3-76145-0	6-50	3B2-03202-1	4-1-3
345-62441-0	9-16	369-03182-0	4-31	3A3-76145-0	19-10-25	3B2-03202-1	19-11-37
345-63048-0	10-6	369-03182-0	19-3-17	3A3-76145-0	19-11-20	3B2-03221-0	4-11
345-65015-0	8-14	369-03183-0	4-32	3A3-81301-0	16-53	3B2-03251-0	4-3-2
345-65015-0	19-8-4	369-03183-0	19-3-18	3A3-83314-2	16-28	3B2-03252-0	4-2-2
345-66226-0	11-31	369-03186-0	4-33	3A3-84307-0	16-20	3B2-03254-0	4-4-1
345-66226-0	13-31	369-03186-0	19-3-19	3A3-84364-2	16-29	3B2-05000-1	5-1
345-67117-0	11-28	369-03222-0	4-12	3A3-84365-1	16-25	3B2-05003-1	5-6
345-67117-0	13-2	369-03222-0	19-3-3	3A3-84368-0	16-44	3B2-05006-1	5-9
345-67117-0	19-5-4	369-03231-0	4-6	3A3-84374-0	16-6	3B2-05010-1	5-3
345-67117-0	19-11-29	369-03231-0	19-3-6	3A3-84375-0	16-5	3B2-05013-0	5-10
345-67169-0	18-14	369-03292-0	4-14	3A3-84376-0	16-33	3B2-05019-0	5-11
345-67193-0	19-11-26	369-03293-1	4-15	3A3-84381-0	16-27	3B2-05104-0	5-4
345-76023-0	11-6	369-03293-1	19-3-4	3A3-84383-0	16-9	3B2-05105-0	5-2
346-03232-0	4-9	369-03301-0	4-24	3A3-84391-0	16-45	3B2-05116-0	5-13
346-03232-0	19-3-7	369-03302-0	4-26	3A3-84398-0	17-12	3B2-05131-1	5-12
346-03256-0	4-5	369-03302-0	19-3-15	3A3-84401-0	16-36	3B2-05138-1	5-8
346-03256-0	19-3-11	369-03303-0	4-27	3A3-84403-0	16-37	3B2-05211-1	12-6
346-03265-0	4-16	369-03303-0	19-3-12	3A3-84404-0	16-41	3B2-05217-1	5-22
346-03266-0	4-18	369-03304-0	4-20	3A3-84406-0	16-47	3B2-05233-1	6-13-1
346-03267-0	4-17	369-03305-0	4-21	3A3-84407-0	16-38	3B2-05253-0	5-18
346-05228-1	6-16	369-03306-0	4-28	3A3-84421-0	16-10	3B2-05901-1	5-24
346-06999-0	6-18	369-03306-0	19-3-13	3A3-84422-0	16-11	3B2-05912-0	18-21
346-62421-1	9-17	369-03307-0	4-29	3A3-84423-0	16-18	3B2-06101-0	6-1
346-67196-1	3-23	369-03307-0	19-3-16	3A3-84424-0	16-22	3B2-06102-2	6-4
346-67196-1	4-34	369-05007-0	5-7	3A3-84425-0	16-24	3B2-06103-3	6-3
346-76040-0	6-41	369-05012-0	5-5	3A3-84426-0	16-23	3B2-06120-0	6-5
346-76040-0	19-10-9	369-60111-0	8-15	3A3-84429-0	16-30	3B2-06123-1	6-9
346-76040-0	19-11-10	369-60111-0	19-8-5	3A3-84431-0	16-12	3B2-06123-1	19-10-3
346-76057-0	4-38	369-62122-2	9-13	3A3-84432-0	16-4	3B2-06123-1	19-11-4
346-76057-0	19-11-33	369-62146-1	9-9	3A3-84435-0	16-46	3B2-06128-0	18-4

3B2-06135-0	6-7	3B2-66013-0	8-47-2	3B2Q63011-1	10-3	3N5-84336-0	17-10
3B2-06162-0	6-20	3B2-66014-0	8-47-3	3B2Q67100-1	11-2	3N5-84465-0	17-11
3B2-06170-0	6-17	3B2-66014-0	19-9-9	3B2Q67521-1	14-5	3R3-03239-0	4-7
3B2-06194-1	6-2	3B2-66110-0	12-4	3B2Q67640-1	14-2	3R3-03239-0	19-3-8
3B2-06194-1	19-10-2	3B2-66211-0	12-1	3B2Q67645-6	14-1	3T5-01133-0	1-28
3B2-06194-1	19-11-3	3B2-66225-0	12-8	3B2Q87301-7	19-1-1	3V1-60217-0	8-8
3B2-60003-1	7-8	3B2-66241-0	12-2	3B2Q87302-7	19-1-2	3V1-62106-0	9-48
3B2-60003-1	19-9-4	3B2-66302-0	9-25	3B2Q87304-7	19-1-3	3V1-62431-1	9-41
3B2-60211-0	8-2	3B2-66305-0	9-23	3B2Q87314-3	19-9-1	3V1-64211-1	8-23
3B2-61012-2	7-3	3B2-66315-0	9-22	3B7-05243-0	3-19	3V1-64221-0	8-26
3B2-61012-2	19-8-2	3B2-66321-1	9-20	3B7-63731-0	11-14	3V1-64332-0	7-9
3B2-61301-0	9-31	3B2-66322-1	9-19	3B7-63731-0	19-10-14	3V1-64332-0	19-9-5
3B2-61302-0	9-34	3B2-67151-0	11-1	3B7-70200-4	15-1	3V1-65017-0	8-39
3B2-61336-0	9-33	3B2-67187-0	11-30	3B7-70280-1	15-8	3V1-87326-1	8-56
3B2-61337-0	9-32	3B2-67187-0	19-5-6	3B7-72530-2	18-7	3V1Q62105-0	9-46
3B2-62118-0	9-7	3B2-67501-1	14-3	3B7-72656-0	18-9	3V1Q62108-0	9-47
3B2-62415-0	9-29	3B2-67503-0	14-4	3B7-72659-0	18-8	3V1Q62112-1	9-1
3B2-62417-0	9-30	3B2-70050-1	15-13	3B7-72661-0	18-10	3V1Q62113-1	9-2
3B2-62422-0	9-28	3B2-70155-0	15-14	3B7-76145-0	6-51	910103-0525	16-32
3B2-63034-0	10-10	3B2-70167-1	15-12	3B7-76145-0	19-10-26	910103-0825	6-38
3B2-63035-1	10-9	3B2-70260-1	11-9	3B7-76145-0	19-11-21	910103-0825	19-10-8
3B2-63041-0	10-5	3B2-76026-1	11-17	3B7Q84312-0	16-16	910103-0825	19-11-9
3B2-63063-0	10-15	3B2-76026-1	19-10-28	3B7Q84343-0	16-42	910103-5618	7-13
3B2-63102-0	10-17	3B2-76055-1	4-40	3B7Q84350-3	16-1	910103-5620	8-9
3B2-63103-0	10-21	3B2-76055-1	19-11-35	3B7Q84360-1	16-2	910103-5625	8-52
3B2-63104-1	10-14	3B2-76060-0	6-44	3B7Q84366-0	16-35	910103-5830	13-12
3B2-63108-0	10-19	3B2-76060-0	19-10-15	3B7Q84441-0	16-34	910103-6612	11-25
3B2-63109-0	10-20	3B2-76060-0	19-11-13	3C7-06921-0	6-54	910103-6612	13-21
3B2-63506-1	3-15	3B2-76062-0	6-52	3C7-70113-0	15-17	910103-6616	13-9
3B2-63600-1	10-18	3B2-76062-0	19-10-23	3C7-70199-0	15-16	910103-6620	1-34
3B2-63611-0	3-14	3B2-76062-0	19-11-18	3C7-70211-1	15-4	910103-6620	6-42
3B2-63621-0	11-27	3B2-76097-0	18-22-1	3C7-70217-0	15-5	910103-6620	19-10-10
3B2-63621-0	19-5-3	3B2-76098-0	18-22-2	3C7-70220-1	15-2	910103-6620	19-11-11
3B2-63624-0	13-1	3B2-76100-2	19-11-1	3C7-70224-1	15-3	910121-6612	5-30
3B2-63624-0	19-11-28	3B2-76120-1	6-48	3C7-72180-3	14-8	910121-6623	5-29
3B2-63711-0	3-13	3B2-76120-1	19-10-22	3C8-62104-2	9-50	910124-0880	1-10
3B2-63715-2	3-18	3B2-76120-1	19-11-17	3C8-62107-0	9-52	9101E3-0830	9-18
3B2-63716-1	3-22	3B2-76147-2	6-49	3C8-66112-0	12-10	9101E3-5612	7-10
3B2-63724-0	6-11	3B2-76147-2	19-10-24	3C8-66116-0	12-13	9101E3-5612	7-14
3B2-63751-0	3-17	3B2-76147-2	19-11-19	3C8-66308-0	3-8	9101E3-5612	9-39
3B2-64010-0	8-18	3B2-76166-0	13-28	3C8-66308-0	11-26	9101E3-5612	9-45
3B2-64020-0	8-19	3B2-76166-0	19-11-30	3C8-66308-0	13-22	9101E3-5612	19-9-6
3B2-64030-0	8-20	3B2-76400-3	19-10-1	3C8-67146-0	11-22	9101E3-5620	8-17
3B2-64081-0	8-42-1	3B2-83820-0	13-8	3C8-72181-0	6-19	9101E3-5620	11-18
3B2-64082-0	8-42-2	3B2-83857-0	13-30-1	3E0-70270-0	15-15	9101E3-5635	7-2
3B2-64083-0	8-42-3	3B2-83863-1	13-23	3F3-03234-0	4-10	9101E3-5635	7-7
3B2-64215-0	8-24	3B2-83865-0	13-24	3F3-03234-0	19-3-10	9101E3-5635	19-9-3
3B2-64222-0	8-28	3B2-83880-3	13-3	3F3-76217-0	17-2-1	9101E3-5640	9-37
3B2-64230-2	8-57	3B2-83887-1	13-20	3F3-76218-0	17-2-2	9101F4-0610	6-37
3B2-64306-1	8-43-1	3B2-87121-4	19-4-1	3F3-76219-0	17-2-3	9101F4-0610	12-11
3B2-64307-1	8-43-2	3B2-87122-0	19-3-1	3G0-03200-0	4-1-1	9101F4-0610	19-10-21
3B2-64309-1	8-43-3	3B2-87130-0	2-16-1	3G0-03251-0	4-3-1	9101F4-0610	19-11-23
3B2-64309-1	19-9-7	3B2-87131-0	2-16-2	3G0-03252-0	4-2-1	9101F4-0620	5-25
3B2-65011-0	8-32	3B2-87321-4	19-8-1	3G0-87123-0	2-20-1	9101F4-0620	6-21
3B2-65011-0	19-6-4	3B2-87322-2	19-6-1	3G0-87124-0	2-20-2	9101F4-0625	1-22
3B2-65016-0	8-31	3B2-87801-2	14-9-2	3G0-87801-2	14-9-1	9101F4-0645	6-22
3B2-65018-2	8-34	3B2B01001-1	1-13-1	3GF-70250-0	15-10	9101F4-0654	18-18
3B2-65018-2	19-6-6	3B2B01100-2	1-1-1	3GF-70281-0	15-9	916103-0830	6-32
3B2-65018-2	19-7-5	3B2B02010-0	3-1	3K9-02305-2	1-21-2	916103-0830	19-10-5
3B2-65018-2	19-8-7	3B2B02300-0	1-19	3K9-02305-2	19-4-5	916103-0830	19-11-6
3B2-65020-1	8-41	3B2B02302-0	1-20-1	3K9-03200-0	4-1-4	916129-0630	1-8
3B2-65020-1	19-6-10	3B2B05101-0	5-27	3K9-03202-0	4-1-5	916129-0650	1-7
3B2-65020-1	19-8-9	3B2B05102-0	5-28	3K9-03202-0	19-11-38	916129-0675	1-6
3B2-65021-1	8-29	3B2B05180-0	18-16	3K9-03251-0	4-3-3	9161E3-0635	8-4
3B2-65021-1	19-6-2	3B2B05911-0	18-17	3K9-03252-0	4-2-3	9161E3-0650	8-37
3B2-65021-1	19-7-2	3B2B64513-1	8-55-1	3K9-03254-0	4-4-2	9161E3-0650	19-6-8
3B2-65022-0	8-30	3B2B64514-1	8-55-2	3K9-05223-0	5-23	9161F1-0685	3-10
3B2-65022-0	19-6-3	3B2B64515-1	8-55-3	3K9-05223-0	12-14	9161F9-0630	1-16
3B2-65025-0	8-35	3B2B64517-1	8-55-4	3K9-05233-0	6-13-2	920803-0518	10-8
3B2-65025-0	19-6-5	3B2B64519-1	8-55-5	3K9-66137-0	12-5	921503-0315	17-4
3B2-65029-2	8-36	3B2B87090-7	19-2-1	3K9-76100-0	19-11-2	921503-0406	16-17
3B2-65029-2	19-6-7	3B2Q60000-2	8-1	3K9-83857-0	13-30-2	921503-0430	8-11
3B2-65029-2	19-7-6	3B2Q60100-1	8-13	3K9-87121-4	19-4-2	921503-0510	16-39
3B2-65029-2	19-8-8	3B2Q61110-2	7-6	3K9-87801-1	14-9-3	921503-0525	6-45
3B2-65100-0	8-53-1	3B2Q61110-2	19-9-2	3K9B01001-0	1-13-2	921503-0525	19-10-16
3B2-65110-0	8-53-2	3B2Q61191-1	7-1-1	3K9B01100-1	1-1-2	921503-0525	19-11-14
3B2-65120-0	8-53-3	3B2Q61192-1	7-1-2	3K9B02302-0	1-20-2	921503-5430	5-15
3B2-65120-0	19-9-8	3B2Q62010-0	9-27	3K9B87090-6	19-2-2	921503-6408	4-37
3B2-65195-0	8-54	3B2Q62310-0	9-14	3K9Q61401-0	9-35	921503-6408	19-11-32
3B2-65231-2	19-7-1	3B2Q63000-2	19-5-1	3K9Q61402-0	9-36	921503-6510	6-14
3B2-65238-0	19-7-3	3B2Q63003-2	10-1	3M2-05215-0	5-21	921503-7616	5-20
3B2-65239-0	19-7-4	3B2Q63003-2	19-5-2	3N5-84331-0	17-8	921521-6406	6-8
3B2-66012-0	8-47-1	3B2Q63005-2	10-2	3N5-84333-0	17-9	921521-6520	3-16

921521-6625	6-6	98AB-701600	15-7
921521-6625	6-10	98AB-70-700	15-6
921521-6625	18-5	98AL-40-120	1-26
921522-0306	4-22	98AL-40-230	1-27
9215E3-0510	4-41		
9215E3-0510	19-11-36		
9215E3-0612	10-16		
921603-0512	16-21		
921603-0518	16-19		
921621-0612	6-12		
9216E3-0612	9-8		
921703-0406	9-10		
922503-6414	4-13		
922503-6414	19-3-5		
922553-6423	4-25		
922553-6423	19-3-14		
930103-0500	3-20		
930103-0500	6-47		
930103-0500	16-31		
930103-0500	18-11		
930103-0500	19-10-18		
930103-0500	19-11-16		
930103-0600	6-15		
930103-0600	6-43		
930103-0600	10-12		
930103-0600	10-23		
930103-0600	13-10		
930103-0600	16-8		
930103-0600	18-20		
930103-0600	19-10-11		
930103-0600	19-11-12		
930103-0800	13-13		
930121-0300	4-23		
930403-0400	8-12		
930403-0600	14-6		
930403-0800	9-4		
940103-0600	6-23		
940103-0600	8-38		
940103-0600	10-11		
940103-0600	12-12		
940103-0600	14-7		
940103-0600	18-19		
940103-0600	19-6-9		
940103-0800	13-15		
940103-0800	16-13		
940121-0600	1-9		
940121-0600	1-17		
940121-0800	1-11		
940121-1200	6-26		
9401E3-0600	8-5		
9401E3-0800	9-5		
941303-0500	6-46		
941303-0500	18-12		
941303-0500	19-10-17		
941303-0500	19-11-15		
941303-0600	3-9		
941303-0600	5-26		
941303-0600	10-22		
941303-0800	6-33		
941303-0800	6-39		
941303-0800	13-14		
941303-0800	19-10-6		
941303-0800	19-11-7		
941403-0800	5-19		
941403-1400	11-23		
941403-1400	13-19		
945303-0500	9-21		
945303-0600	16-26		
945303-1000	12-15		
951403-0310	8-46		
951403-0310	12-3		
951403-0312	4-39		
951403-0312	19-11-34		
951503-0214	9-26		
951503-0318	8-60		
951703-0800	12-9		
9601-0-6004	8-16		
9601-0-6204	8-3		
9601-0-6301	8-44		
9603-3-6204	2-12		
9603-3-6204	2-13		
9701-1-1014	1-36		
98AB-50-075	11-4		

TOHATSU CORPORATION

**Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN**

Phone : TOKYO (03)3966-3117

FAX : TOKYO (03)3966-0090

Website : www.tohatsu.co.jp

**2013
PARTS CATALOG**

**M 6B
8B
9.8B**

Serial Number 000001AC~